




testo 770 · Clamp meter

Startup instructions



Power ON / OFF



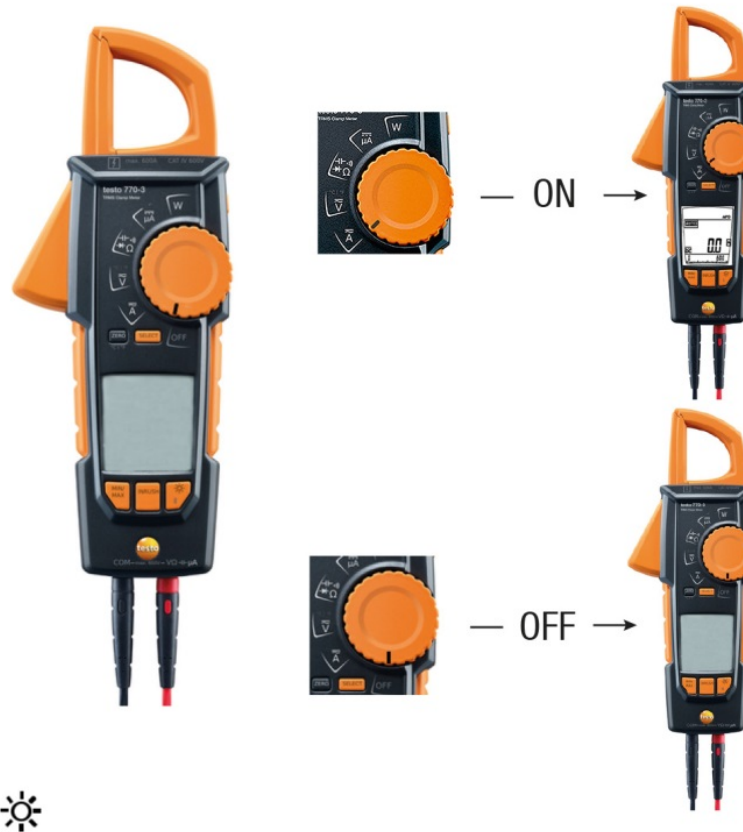


A - Current

Auto mode



 Manual mode


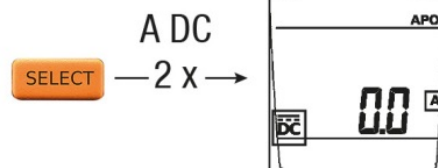
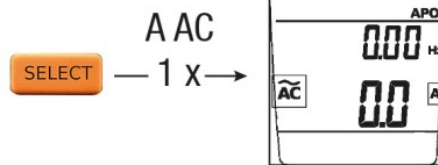


V - Voltage

Auto mode



 Manual mode

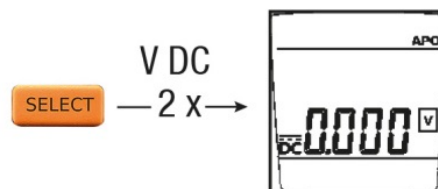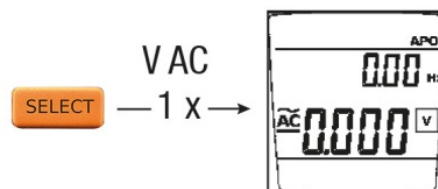


Ω / $\bullet$) / $\rightarrow$ / $\dashv$

Auto mode
(testo 770-3)



Manual mode
testo 770-1/-2

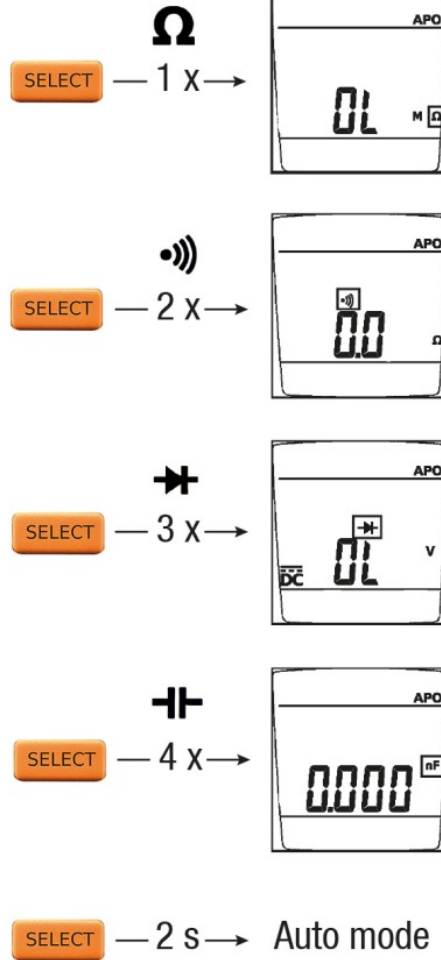


μ A (testo 770-2/-3)

Auto mode




Manual mode

SELECT — 1 x → μ A AC

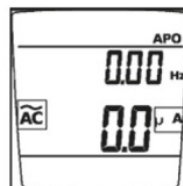

SELECT — 2 x → μ A DC

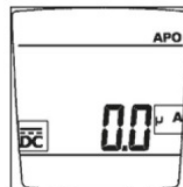


SELECT — 2 s → Auto mode

W, PF, VA, VAr (testo 770-3)


W AC




SELECT — 1 x → VAr AC

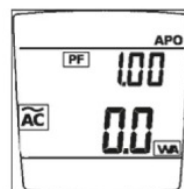

SELECT — 2 x → VA AC

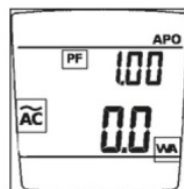


SELECT — 3 x → W DC

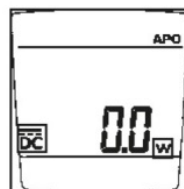

SELECT — 4 x → W AC

Inrush

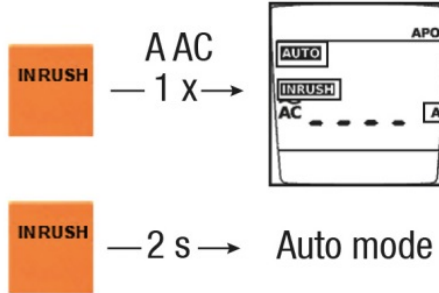

Min/Max/AVG




°C / °F (0590 0021)



ZERO
°C/°F

°C / °F
— 2 s →

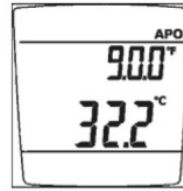

ZERO
°C/°F

— 2 s → Auto mode

APO off




Press
and
hold

HOLD

+

Power
ON

→

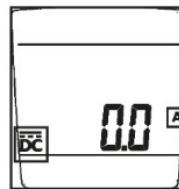

Bluetooth and testo Smart Probes App (testo 770-3)




Press
and
hold



+

Power
ON

→

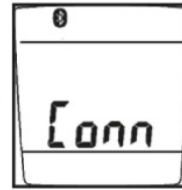

Free download
testo Smart Probes App



Requires iOS 8.3 / Android 4.3 or later,
plus mobile end device with Bluetooth® 4.0