


INOR
USER INSTRUCTIONS English
Transmitter Repeater
ISOPAQ-110R

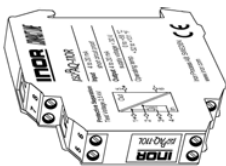

www.inor.com, www.inor.se

The user instruction must be read prior to adjust and/or installation. All information subject to change without notice.



This product should not be mixed with other kind of scrap, after usage. It should be handled as an electronic/electric device.

MEASURE OF SUCCESS

ISOPAQ-110R

Before Startup

The transmitter repeater should only be installed and put into operation by qualified staff. The staff must have studied the warnings in these operating instructions thoroughly.

The transmitter repeater may not be put into operation if the housing is open.

In applications with high operating voltages sufficient distance and isolation as well as shock protection must be ensured.

Safe and trouble-free operation of this device can only be guaranteed if transport, storage and installation are carried out correctly and operation and maintenance are carried out with care.

Appropriate safety measures against electrostatic discharge (ESD) should be taken during connection and assembly on the isolator.

2. Short description

The transmitter repeater is used for powering and electrical isolation of non-isolated 2-wire transmitters.

The galvanic isolation guarantees reliable decoupling of the transmitter circuit from the processing circuit and prevents linked measurement circuits from influencing each other.


The Protective Separation with high isolation level provides protection for personnel and downstream devices against impermissibly high voltage. The transmitter repeater is short circuit proofed and protected against reversed polarity.

3. Functioning

The input signal is modulated and then electrically decoupled using a transformer. The isolated signal is then made available at the output, demodulated and filtered.


Ensure that the current-driving voltage of the power source U_s is sufficient for driving the minimum transmitter voltage U_T by maximum current of 20 mA over the transmitter repeater with voltage drop of $U_{drop} = 4.7$ V (or 9.7 V by HART) and the controller load R.

$U_T = U_s - 4.7$ V - 20 mA x R

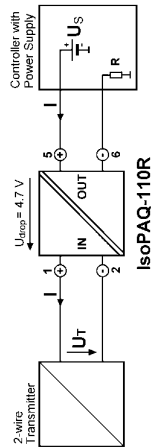

HART transmitter use:

$U_T = U_s - 9.7$ V - 20 mA x R

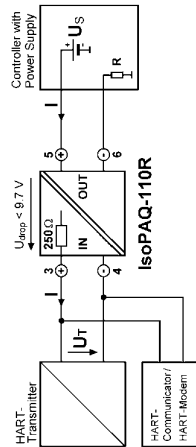

4. Mounting, electrical connection

The transmitter repeater is mounted on standard 35 mm DIN rail.

Terminal assignments	
1 + Input	5 + Output
2 - Input	6 - Output
3 + Input for HART	
4 - Input for HART	


5. Order information

Product	Input / Output	Part No.
ISOPAQ-110R	4-20 mA / 4-20 mA	70ISC11011


6. Technical Data

Input signal	4 - 20 mA
Operating current range	2 - 23 mA
Voltage drop	~ 4.7 V
HART communication	Separate terminals with 250 Ω input resistance. Additional voltage drop 5 V @ 20 mA
Short circuit input current	≤ 50 mA
Output signal	4 - 20 mA
Supply voltage	15 - 30 V DC
Response time	< 10 ms (10 to 90 % of end value)
Ripple	< 0.2 % of end value, 100 kHz
General data	
Transmission error	± 0.1 % of end value
Supply voltage influence	± 0.01 % of end value (V difference from 24 V)
Temperature coefficient ¹⁾	± 0.01 %/K of end value
Test voltage ²⁾	2.5 kV, 50 Hz, between all circuits
Working voltage ³⁾	Up to 600 V AC/DC for overvoltage category II and contamination class 2 acc. to EN 61140 part 1 (Basic insulation)
Protection against dangerous body currents ³⁾	Reinforced insulation in accordance to EN 61010 part 1 up to 300 V AC/DC for overvoltage category II and contamination class 2 between all circuits.
Ambient temperature	Operation 0 °C to + 55 °C (+32 to +131 °F) Transport -25 °C to + 80 °C (-13 to +176 °F) and storage
EMC ³⁾	EN 61326-1
Construction	11,2 mm (0.44") housing, protection type: IP 20
Connection	≤ 2.5 mm ² , AWG 14
Weight	Approx. 50 g
1) Average TC in specified operating temperature range	
2) As far as relevant the standards and rules mentioned above are considered by development and production of our devices. In addition relevant assembly rules are to be considered by installation of our devices in other equipments.	
For applications with high working voltages, take measures to prevent accidental contact. Make sure that there is sufficient distance or insulation between conductive parts.	
3) Minor deviations possible during interference	

7. Block diagram

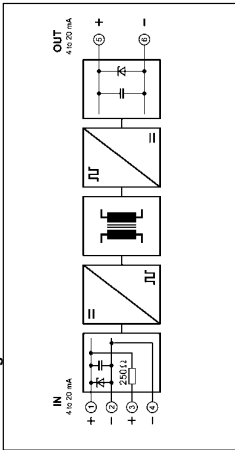

8. Dimensions

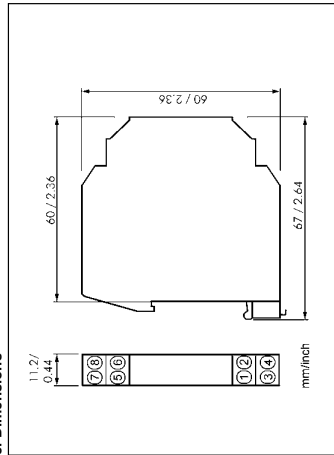

LIMITED WARRANTY

INOR Process AB, or any other affiliated company within the Inor Group (hereinafter jointly referred to as "Inor"), hereby warrants that the Product will be free from defects in materials or workmanship for a period of **five (5) years** from the date of delivery ("Limited Warranty"). This Limited Warranty is limited to repair or replacement at Inor's option and is effective only for the first end-user of the Product. Upon receipt of a warranty claim, Inor shall respond within a reasonable time period as to its decision concerning:

1. Whether Inor acknowledges its responsibility for any asserted defect in materials or workmanship; and, if so,
2. the appropriate cause of action to be taken (i.e. whether a defective product should be replaced or repaired by Inor).

This Limited Warranty applies only if the Product:

1. is installed according to the instructions furnished by Inor;
2. is not misused or abused; and
3. there is no evidence of tampering, mishandling, neglect, accidental damage, modification or repair without the approval of Inor or damage done to the Product by anyone other than Inor.

This Limited Warranty is provided by Inor and contains the only express warranty provided.

INOR SPECIFICALLY DISCLAIMS ANY EXPRESS WARRANTY NOT PROVIDED HEREIN AND ANY IMPLIED WARRANTY, GUARANTEE OR REPRESENTATION AS TO SUITABILITY FOR ANY PARTICULAR PURPOSE, PERFORMANCE, QUALITY AND ABSENCE OF ANY HIDDEN DEFECTS, AND ANY REMEDY FOR BREACH OF CONTRACT, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND OPERATION OF LAW, CUSTOMER OF TRADE OR COURSE OF DEALING, FITNESS FOR A PARTICULAR PURPOSE, EXCEPT AS PROVIDED HEREIN, INOR FURTHER DISCLAIMS ANY RESPONSIBILITY FOR LOSSES, EXPENSES, INCONVENIENCES, SPECIAL, DIRECT, SECONDARY OR CONSEQUENTIAL DAMAGES ARISING FROM OWNERSHIP OR USE OF THE PRODUCT.

Products that are covered by the Limited Warranty will either be repaired or replaced at the option of Inor. Customer pays freight to Inor, and Inor will pay the return freight by post or other "normal" way of transport. If any other type of return freight is requested, customer pays the whole return cost.