



686 Advanced Digital Pressure Gauge

673 Advanced Digital Pressure Calibrator



ADT686 Advanced Digital Pressure Gauge  
ADT673 Advanced Digital Pressure Calibrator  
-----User Manual  
[Version: 2506V02]

C €<sup>0035</sup> IP67

**Additel Corporation**

## **STATEMENT**

This user manual provides operating and safety instructions for the ADT686 Advanced Digital Pressure Gauge and ADT673 Advanced Digital Pressure Calibrator. To ensure correct operation and safety, please follow the instructions in this manual. Additel Corporation reserves the right to change the contents and other information contained in this manual without notice.



---

## CONTENT

|                                                  |           |
|--------------------------------------------------|-----------|
| <b>Content.....</b>                              | <b>I</b>  |
| <b>Safety Instructions .....</b>                 | <b>1</b>  |
| <b>1. Introduction .....</b>                     | <b>2</b>  |
| 1.1 Overview.....                                | 2         |
| 1.2 Pressure Range and Accuracy .....            | 3         |
| 1.3 Specification.....                           | 8         |
| 1.4 Characteristics .....                        | 10        |
| 1.5 Basic Structure .....                        | 11        |
| <b>2. Display and Operation .....</b>            | <b>13</b> |
| 2.1 Main page .....                              | 13        |
| 2.2 Control Center .....                         | 15        |
| 2.3 Pressure Measurement Function.....           | 17        |
| 2.3.1 Zeroing .....                              | 17        |
| 2.3.2 Statistics .....                           | 18        |
| 2.3.3 Filtering.....                             | 18        |
| 2.3.4 Unit Switch .....                          | 19        |
| 2.3.5 Pressure Setting .....                     | 19        |
| 2.3.6 Display Resolution Setting.....            | 20        |
| 2.4 Electrical Measuremnt(only for ADT673) ..... | 21        |
| 2.4.1 Measuring Item Switch .....                | 22        |



---

|                                                            |           |
|------------------------------------------------------------|-----------|
| 2.4.2 Zeroing .....                                        | 22        |
| 2.4.3 Scaling.....                                         | 22        |
| 2.4.4 Filtering.....                                       | 22        |
| 2.4.5 Statistics .....                                     | 23        |
| 2.5 Intelligent HART Calibration(Only support ADT673)..... | 23        |
| <b>3. Setting .....</b>                                    | <b>30</b> |
| 3.1 Communication Setting .....                            | 32        |
| 3.1.1 Bluetooth .....                                      | 32        |
| 3.1.2 Wireless Communication.....                          | 32        |
| 3.1.3 Serial Communication .....                           | 32        |
| 3.1.4 ACloud Service .....                                 | 33        |
| 3.2 Personalization.....                                   | 33        |
| 3.2.1 Custom Units .....                                   | 33        |
| 3.2.2 CSV File Format.....                                 | 34        |
| 3.2.3 Date & Time.....                                     | 34        |
| 3.2.4 Sound .....                                          | 34        |
| 3.2.5 Language .....                                       | 35        |
| 3.2.6 Display Direction.....                               | 35        |
| 3.3 System service .....                                   | 35        |
| 3.3.1 System Calibration .....                             | 35        |
| 3.3.2 Repair and Maintenance .....                         | 39        |

---



---

|                                                 |           |
|-------------------------------------------------|-----------|
| 3.3.3 Restore Factory Settings .....            | 39        |
| 3.3.4 System Update .....                       | 39        |
| 3.4 Power Management .....                      | 40        |
| 3.4.1 Display Brightness .....                  | 40        |
| 3.4.2 Battery Information .....                 | 40        |
| 3.4.3 Auto Backlight Off .....                  | 40        |
| 3.4.4 Auto Power Off After Backlight Off .....  | 40        |
| 3.4.5 Charge Mode .....                         | 41        |
| 3.5 Product Information .....                   | 41        |
| <b>4. Task (ADT673 only) .....</b>              | <b>42</b> |
| 4.1 Calibrate Pressure Dial Gauge .....         | 42        |
| 4.2 Calibrate Pressure Transmitter .....        | 44        |
| 4.3 Calibrate Pressure Switch .....             | 47        |
| <b>5. Data Log .....</b>                        | <b>50</b> |
| <b>6. Data Management .....</b>                 | <b>51</b> |
| <b>7. Application .....</b>                     | <b>52</b> |
| 7.1 Pressure Unit Converter .....               | 52        |
| 7.2 Leak Test .....                             | 52        |
| 7.3 PSV Test .....                              | 53        |
| <b>8. HART Communicator (ADT673 only) .....</b> | <b>55</b> |
| 8.1 HART Connection and Search .....            | 55        |

---



---

|                                                                          |           |
|--------------------------------------------------------------------------|-----------|
| 8.2 HART Communicator Operation .....                                    | 55        |
| <b>9. Copyright .....</b>                                                | <b>56</b> |
| <b>Appendix A: Description of RS232 module DB9 pins.....</b>             | <b>56</b> |
| <b>Appendix B: Description for Type-C to USB female OTG adapter.....</b> | <b>58</b> |
| <b>Appendix C: Communication commands.....</b>                           | <b>62</b> |

---

## Safety Instructions

Warnings - The situation that poses a threat to user safety;

Cautions - The condition that may cause damage to the gauges or affect the calibration result.

### Warnings :

**To prevent personal injury, please follow this user manual.**

**To prevent possible fire, electrical shock, or personal injury, please do as follows:**

#### 1. General:

**Please confirm the pressure media before using. If no special instructions, prepare as below:**

- ◆ Before using the product, please read the manual, especially the "Safety Instructions" section;
- ◆ Before using the product, please check the appearance of the product for any damage;
- ◆ Please following the operation steps in the manual when using the product;
- ◆ Please store, carry and use the product in the correct direction.
- ◆ If the product is damaged or malfunctions, please do not use it, and contact Additel;
- ◆ Do not use this product in an explosive gas, steam or dust environment;

#### 2. Electrical:

- ◆ Double check the power connection and installation before use;

#### 3. Cautions:

**In order to avoid damaging the digital pressure gauge, please follow the user manual.**

**To prevent possible damage of the product, please:**

- ◆ Do not use the product under strong mechanical vibration environment;
- ◆ Do not use the product if it appears to have any issues, and contact Additel immediately



---

## 1. Introduction

### 1.1 Overview

ADT686 Advanced Digital Pressure Gauge/ ADT673 Advanced Digital Pressure Calibrator are the newest generation of Additel pressure calibration products. They are excellent calibration and measurement devices.. These units have pioneered the use of a circular TFT-LCD capacitive touch screen and an easy-to-use interface. ADT673 Advanced Digital Pressure Calibrator can be easily used to perform the calibration of pressure transmitters, pressure switches, precision pressure gauges, general pressure gauges, sphygmomanometers, pressure sensors, etc., and can also be used for precision pressure measuring.

The ADT686 Advanced Digital Pressure Gauge/ ADT673 Advanced Digital Pressure Calibrator are a product of accumulated experience and innovative technology to achieve excellent product performance and provide users with a variety of professional solutions, applied in the industry of power, petrochemical, metrology, metallurgy, pharmaceutical, biotechnology, food, machinery, shipbuilding, aerospace, transportation and others. These products have become the ideal solutions for field and laboratory pressure calibration.

## 1.2 Pressure Ranges and Accuracy

Table 1 Gauge pressure

| P/N    | Pressure Range |       | Media <sup>[2]</sup> | Accuracy    |     | Burst Pressure |
|--------|----------------|-------|----------------------|-------------|-----|----------------|
|        | (psi)          | (bar) |                      | %FS         | %RD |                |
| V15    | -15            | -1.0  | G                    | 0.02 (0.05) | N/A | 3X             |
| GP2    | 2              | 0.16  | G,L                  | 0.05        | N/A | 3X             |
| GP5    | 5              | 0.35  | G,L                  | 0.05        | 0.1 | 3X             |
| GP10   | 10             | 0.7   | G,L <sup>[3]</sup>   | 0.02 (0.05) | 0.1 | 3X             |
| GP15   | 15             | 1.0   | G,L <sup>[3]</sup>   | 0.02 (0.05) | 0.1 | 3X             |
| GP30   | 30             | 2.0   | G,L <sup>[3]</sup>   | 0.02 (0.05) | 0.1 | 3X             |
| GP50   | 50             | 3.5   | G,L                  | 0.02 (0.05) | 0.1 | 3X             |
| GP100  | 100            | 7.0   | G,L                  | 0.02 (0.05) | 0.1 | 3X             |
| GP150  | 150            | 10    | G,L                  | 0.02 (0.05) | 0.1 | 3X             |
| GP300  | 300            | 20    | G,L                  | 0.02 (0.05) | 0.1 | 3X             |
| GP500  | 500            | 35    | G,L                  | 0.02 (0.05) | 0.1 | 3X             |
| GP600  | 600            | 40    | G,L                  | 0.02 (0.05) | 0.1 | 3X             |
| GP1K   | 1,000          | 70    | G,L                  | 0.02 (0.05) | 0.1 | 3X             |
| GP1.5K | 1,500          | 100   | G,L                  | 0.02 (0.05) | 0.1 | 3X             |



|       |        |       |     |             |     |       |
|-------|--------|-------|-----|-------------|-----|-------|
| GP2K  | 2,000  | 140   | G,L | 0.02 (0.05) | 0.1 | 3X    |
| GP3K  | 3,000  | 200   | G,L | 0.02 (0.05) | 0.1 | 3X    |
| GP5K  | 5,000  | 350   | G,L | 0.02 (0.05) | 0.1 | 3X    |
| GP10K | 10,000 | 700   | G,L | 0.02 (0.05) | 0.1 | 3X    |
| GP15K | 15,000 | 1,000 | G,L | 0.05 (0.1)  | 0.1 | 1.5X  |
| GP20K | 20,000 | 1,400 | G,L | 0.05 (0.1)  | N/A | 1.5X  |
| GP25K | 25,000 | 1,600 | G,L | 0.05 (0.1)  | N/A | 1.5X  |
| GP30K | 30,000 | 2,000 | G,L | 0.05 (0.1)  | N/A | 1.5X  |
| GP36K | 36,000 | 2,500 | G,L | 0.05 (0.1)  | N/A | 1.5X  |
| GP40K | 40,000 | 2,800 | G,L | 0.05 (0.1)  | N/A | 1.35X |
| GP50K | 50,000 | 3,500 | G,L | 0.1 (0.2)   | N/A | 1.2X  |
| GP60K | 60,000 | 4,200 | G,L | 0.1 (0.2)   | N/A | 11X   |

[1] Sealed gauge pressure for above 1,000 psi

[2] G=Gas, L=Liquid

[3] 0.02% FS for gas media only

Table 2 Differential pressure

| P/N   | Pressure Range       |        | Media | Accuracy<br>(%FS) <sup>[1]</sup> | Burst Pressure | Static<br>Pressure<br>Range |
|-------|----------------------|--------|-------|----------------------------------|----------------|-----------------------------|
|       | (inH <sub>2</sub> O) | (mbar) |       |                                  |                |                             |
| DP1   | ±1                   | ±2.5   | G     | 0.05 <sup>[2]</sup>              | 100X           | ±10 psi                     |
| DP2   | ±2                   | ±5.0   | G     | 0.05 <sup>[2]</sup>              | 100X           | ±10 psi                     |
| DP5   | ±5                   | ±10    | G     | 0.05 <sup>[2]</sup>              | 50X            | ±10 psi                     |
| DP10  | ±10                  | ±25    | G     | 0.05 <sup>[2]</sup>              | 20X            | ±10 psi                     |
| DP20  | ±20                  | ±50    | G     | 0.05                             | 20X            | ±10 psi                     |
| DP30  | ±30                  | ±75    | G     | 0.05                             | 20X            | ±10 psi                     |
| DP50  | ±50                  | ±125   | G     | 0.05                             | 3X             | ±10 psi                     |
| DP100 | ±100                 | ±250   | G     | 0.02                             | 3X             | ±15 psi                     |
| DP150 | ±150                 | ±350   | G     | 0.02                             | 3X             | 50 psi                      |
| DP300 | ±300                 | ±700   | G     | 0.02                             | 3X             | 50 psi                      |

[1] FS specification applies to the span of the range. Accuracy includes one year stability.

[2] 0.05%FS accuracy (incl 6 months stability). One year accuracy is 0.05%FS calibration accuracy combined with 0.05%FS one year stability.



Table 3 Compound pressure

| P/N   | Pressure Range |          | Media <sup>[1]</sup> | Accuracy           |     | Burst Pressure |
|-------|----------------|----------|----------------------|--------------------|-----|----------------|
|       | (psi)          | (bar)    |                      | %FS <sup>[2]</sup> | %RD |                |
| CP2   | ±2             | ±0.16    | G                    | 0.05               | N/A | 3X             |
| CP5   | ±5             | ±0.35    | G                    | 0.02 (0.05)        | 0.1 | 3X             |
| CP10  | ±10            | ±0.7     | G                    | 0.02 (0.05)        | 0.1 | 3X             |
| CP15  | ±15            | ±1       | G                    | 0.02 (0.05)        | 0.1 | 3X             |
| CP30  | -15 to 30      | -1 to 2  | G                    | 0.02 (0.05)        | 0.1 | 3X             |
| CP100 | -15 to 100     | -1 to 7  | G,L                  | 0.02 (0.05)        | 0.1 | 3X             |
| CP300 | -15 to 300     | -1 to 20 | G,L                  | 0.02 (0.05)        | 0.1 | 3X             |
| CP500 | -15 to 500     | -1 to 35 | G,L                  | 0.02 (0.05)        | 0.1 | 3X             |
| CP600 | -15 to 600     | -1 to 40 | G,L                  | 0.02 (0.05)        | 0.1 | 3X             |
| CP1K  | -15 to 1000    | -1 to 70 | G,L                  | 0.02 (0.05)        | 0.1 | 3X             |

[1] G=Gas, L=Liquid

[2] FS specification applies to the span of the range.

Table 4 Absolute pressure

| P/N   | Pressure Range |       | Media <sup>[1]</sup> | Accuracy (%FS) | Burst Pressure |
|-------|----------------|-------|----------------------|----------------|----------------|
|       | (psi)          | (bar) |                      |                |                |
| AP5   | 5              | 0.35  | G,L                  | 0.1            | 3X             |
| AP10  | 10             | 0.7   | G,L                  | 0.1            | 3X             |
| AP15  | 15             | 1.0   | G,L                  | 0.1            | 3X             |
| AP30  | 30             | 2.0   | G,L                  | 0.1            | 3X             |
| AP50  | 50             | 3.5   | G,L                  | 0.1            | 3X             |
| AP100 | 100            | 7.0   | G,L                  | 0.05(0.1)      | 3X             |
| AP300 | 300            | 20    | G,L                  | 0.05(0.1)      | 3X             |
| AP500 | 500            | 35    | G,L                  | 0.05(0.1)      | 3X             |
| AP1K  | 1000           | 70    | G,L                  | 0.05(0.1)      | 3X             |
| AP3K  | 3000           | 200   | G,L                  | 0.05(0.1)      | 3X             |
| AP5K  | 5000           | 350   | G,L                  | 0.05(0.1)      | 3X             |

[1] G=Gas, L=Liquid

\*Note

- ◆ Temperature Compensation: (-10~50)°C, 1year accuracy;
- ◆ Abs pressure, 0.05% accuracy, the time to guarantee this accuracy is 180days;
- ◆ The medium requires non-corrosive;



### 1.3 Technical Specifications

Table 5 Technical Specifications

|                     |                                                                                                                                                                                                                                                                                        |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Protection level    | IP67                                                                                                                                                                                                                                                                                   |
| Pressure units      | Pa, hPa,kPa, MPa, psi, bar, mbar, torr, gf/cm2, kgf/cm2, inH2O@4°C , inH2O@20°C , mmH2O@4°C , mmH2O@20°C , ftH2O@4°C , ftH2O@4°C ,inHg@0°C , mmHg@0°C ,mtorr, lb/ft2,tsi,psf, inH2O@68F, ftH2O@68F, Different pressure ranges have different units. Users can custom 5 pressure units. |
| Pressure overload   | When the pressure measurement value exceeds 120% FS, the outer circle of the screen will turn red, and flash and the speaker sounds an alarm rhythmically                                                                                                                              |
| Measurement speed   | User can set the measure speed, default 3 times/second                                                                                                                                                                                                                                 |
| Display digit       | User can set it to 4, 5 and 6, default is 5                                                                                                                                                                                                                                            |
| Working environment | Ambient temperature: (-10~50)°C<br>Relative humidity: <95% non-condense<br>Atmospheric pressure: (86~106)kPa                                                                                                                                                                           |
| Warm up time        | 15 Mins                                                                                                                                                                                                                                                                                |
| Barometric measure  | Range:(60~110)kPa.a, Accuracy: ±55Pa                                                                                                                                                                                                                                                   |
| Communication       | BLE(built-in), USB(master and slave), WIFI(optional), RS232(optional)                                                                                                                                                                                                                  |
| Real-time clock     | Switchable between 24/12 hours and set time zones                                                                                                                                                                                                                                      |
| Storage capacity    | 8 GB                                                                                                                                                                                                                                                                                   |



|                        |                                                                                                                                                                                              |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Display                | Circular TFT LCD capacitive touch screen                                                                                                                                                     |
| Power supply           | 1. 6600mAh Lithium-ion rechargeable battery, power consumption around 2.5W<br>2. Special TYPE-C USB adapter for power supply, maximum charging current 2A (battery power for best accuracy); |
| Charging               | Charging time is about 5 hours, provided by dedicated 5V adapter                                                                                                                             |
| Battery life           | 24V power supply loading will affect the battery life.                                                                                                                                       |
| Dimension              | 175mm×118mm×41mm                                                                                                                                                                             |
| Weight                 | 715g                                                                                                                                                                                         |
| Electrical Connections | Circuit, voltage and switches: standard $\phi 4\text{mm}$ ;<br>DC24V output: standard $\phi 4\text{mm}$ ;<br>Charging: standard TYPE-C USB connection                                        |

Table 6 Electrical Specification (only for ADT673)

|                     |                                                                                                                                                 |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Current Measurement | $\pm 30.0000\text{mA}$ ; Accuracy: $\pm(0.01\%\text{RD}+0.005\%\text{FS})$ ; Resolution: $0.0001\text{mA}$ ; Input impedance: $25\Omega$ .      |
| Voltage Measurement | $\pm 30.0000\text{V}$ ; Accuracy: $\pm(0.01\%\text{RD}+0.005\%\text{FS})$ ; Resolution: $0.0001\text{V}$ ; Input impedance $<1\text{M}\Omega$ . |
| Switch Test         | Mechanical, NPN and PNP type supported.                                                                                                         |
| Output              | Internal loop power: $24\text{V}\pm 1\text{V}$ , maximum output current: $30\text{mA}$ .                                                        |
|                     | The internal $250\Omega$ HART resistance is switchable, three types of HART transmitter connections are                                         |



|                                 |                                                                                                                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Loop Transmitter<br>Measurement | supported:<br>1) offline calibration mode: internal power supply, internal resistance;<br>2) communicator: external power supply, external resistance;<br>3) online calibration mode: external power supply, internal resistance; |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

#### 1.4 Features

High accuracy pressure measurement, wide range temperature compensation;

mA, Voltage and switch measurements; (Only for ADT673)

DC24V power supply, no external power supply is needed to verify the transmitter; (Only for ADT673)

Based on SDC625 full-function HART, HART pressure transmitter can be easily calibrated;

Built-in atmospheric pressure module, providing accurate reference of ambient pressure, convenient for gauge/absolute pressure synthesis;

4, 5, 6 digits display user selectable resolution;

Analog dial indication, which greatly facilitates dial gauges' calibration;

8 GB large capacity storage;

The powerful UI function, the pioneering use of a circular TFT LCD capacitive touch screen for real-time display, and supports USB, Bluetooth, WIFI or RS232 communication;

Smart ACloud service, you can connect remotely through mobile phone or PC, not limited by space distance (only when equipped with WIFI module);

Large capacity removable rechargeable lithium-ion battery.

## 1.5 Basic Structure



Figure 1 Basic Structure



Table 7 Main connections

| No. | Introduction    | Comment                                                                                                                  |
|-----|-----------------|--------------------------------------------------------------------------------------------------------------------------|
| 1   | LCD             |                                                                                                                          |
| 2   | COM             | ADT673 only, common, black                                                                                               |
| 3   | V/mA/SW         | ADT673 only, voltage/circuit/switch measurement input, red and white                                                     |
| 4   | Loop            | ADT673 only, DC power output, red                                                                                        |
| 5   | Power           | Short press to turn on, press and hold for 2 seconds to turn off, short press to take a screenshot when it is turned on. |
| 6   | External module | If needed, RS232 module and WIFI module are available                                                                    |
| 7   | USB TYPE-C      | Communication or power supply                                                                                            |
| 8   | Pressure module |                                                                                                                          |
| 9   | Pressure inlet  | Visible only after removing the back cover(with ATM mark), it is used for air connection of the barometric calibration   |

## 2 Display and Operation

### 2.1 Main Page

There are three modes provided in main page: calibrator mode (only for ADT673), digital gauge mode and dial gauge mode, see the Figure 2.



Figure 2 Three modes in main page

Calibrator mode: upper is electrical channel, lower is pressure measurement channel, click each to enter the function menu of the corresponding channel (only ADT673 supports this mode).

Digital gauge mode: exclusive pressure measurement channel, for better observe the pressure unit change, when you click it, you can enter the function menu of the pressure channel for function settings.



---

Dial gauge mode: The pressure value is displayed in the form of a dial pressure gauge, which is a more intuitive way to display the pressure value and changes.

Each page is divided into three parts: status bar, content area, toolbar and pressure percentage indication.

- (1) Status bar: including time and date, Bluetooth, WIFI, USB status, ACloud service, battery status, adapter status, 24V status;
  - ① Click the status bar to enter the control center to quickly view and control more function items, click the battery icon to enter the status bar in the dial gauge mode;
  - ② The adapter status has three indication icons: power only, slow charge (high-precision charging mode) and fast charge.
- (2) Content area: including calibration value display, statistical value display, and function item open icon display;
- (3) Menu bar at the bottom: Click the menu bar at the bottom of the main page to enter the function menu, so that you can enter the system settings and various applications.
- (4) Pressure percentage indication: The real-time pressure and the percentage of the pressure module range are displayed on the outermost circle of the page. In order to ensure the safety of the product, the pressure value is the value before tare calculation (if the pressure tare function is enabled).

## 2.2 Control Center

Click on the status bar at the top of the interface to pop up the control center interface, as shown in Figure 3. The control center provides quick viewing of various commonly used information and shortcut operations



Figure 3 Control Center



: Time and date icon, showing the system date and time, click to modify the time and date ;



: Battery icon, showing the remaining battery power, click to modify the charging mode when plugging the adaptor ;



: Atmospheric pressure icon, showing the current atmospheric pressure value, click to modify the atmospheric pressure unit ;



: Internal temperature icon, which displays the ambient temperature in the device, click to modify the temperature unit. This function is used for compensation temperature and not process temperature.



: Notification center icon, when there is an abnormal message notification, there will be a red dot on the icon to remind you, click to enter the notification center, and the received abnormal notification information will be displayed ;



: Bluetooth icon, display the status of Bluetooth, click to turn off/off Bluetooth ;



: 24V power supply icon, display the 24V power supply status, click to turn on/off the 24V power supply(ADT673 only)



: Snapshot icon, click to take a screenshot of the current screen ;



: Screen lock icon. After clicking the lock screen operation, it will enter the lock screen state. The rest of the screen is unavailable except for the unlock key. You need to click the unlock icon at the top of the screen to unlock ;

## 2.3 Pressure Measurement Function

Click on the pressure channel function area, and you can perform basic configuration of the pressure channel at this time, such as zeroing, filtering, and statistical functions. The interface display is shown in Figure 4.



Figure 4 Pressure Measurement Function

### 2.3.1 Zeroing

Zeroing: In gauge pressure mode, when the gauge is vented to the atmosphere, it provides a zeroing operation when the zero point is deviated to eliminate the measured zero-point drift. The allowable zeroing range is within 1% FS.



### 2.3.2 Statistics

Click  to open statistics function to view statistics and reset statistics.

Table 8 Statistics

| Item                                                                                | Description              |
|-------------------------------------------------------------------------------------|--------------------------|
| Enabled                                                                             | Open statistics function |
| Max                                                                                 | Max value                |
| Min                                                                                 | Min value                |
| Avg                                                                                 | Average value            |
|  | Reset statistics         |

### 2.3.3 Filtering

Filtering: Provides first-order linear filtering and moving average filtering, and moving average filtering also provides settings for de-extreme value pairs

Table 9 Filtering

| Item                      | Effective value                                      | Description                           |
|---------------------------|------------------------------------------------------|---------------------------------------|
| Enabled                   | Open/Close                                           | Open filtering function               |
| Filtering types           | Average value filtering/first-order linear filtering | The filtering method                  |
| Coefficient               | 0.01~1                                               | Only for first-order linear filtering |
| Filtering sampling number | 1~100                                                | Sampling number of average            |

|                                  |      |                                              |
|----------------------------------|------|----------------------------------------------|
|                                  |      | filtering                                    |
| Number of de-extreme value pairs | 0~10 | Number of average filtering de-extreme pairs |

### 2.3.4 Unit Switch

Click  to enter the pressure unit selection interface (as shown in Figure 5), you can choose the unit to change.



Figure 5 Unit switch

### 2.3.5 Pressure Setting

Click  to enter the pressure setting interface to perform operations such as pressure type, readings number, stability enable, alarm, and tare function for pressure measurement.



Table 10 Pressure Settings

| Item              | Effective value                       | Description                                                                                                                              |
|-------------------|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| Pressure type     | Gauge pressure/Absolute pressure      | Set pressure type                                                                                                                        |
| Display Rate      | 1 ~ 10                                | Readings per second                                                                                                                      |
| Stability enabled | Open/ close                           | Turn on stability judgment                                                                                                               |
| Stability         | $\pm(0.005\sim1)\%F.S$                | It can be set after turning on stability enabled                                                                                         |
| Stability time    | (1 ~ 60)S                             | Time to determine the stability                                                                                                          |
| Tare enabled      | Open/ close                           | Turn on the tare function                                                                                                                |
| Tare value        | (-999999~ 999999)                     | Tared value                                                                                                                              |
| Alarm enabled     | Open/ close                           | Enable or disable the Alarm function. After enabling alarm function, the outer circle of the screen will indicate the range of the alarm |
| Alarm range       | Alarm lower limit ~ Alarm upper limit | Edit the upper and lower limits of the alarm range                                                                                       |

### 2.3.6 Display Resolution

Provides pressure measurement resolution display settings, 4, 5 and 6 digits can be set.

## 2.4 Electrical Measurement (ADT673 only)

Like pressure measurement, click the main value of the electrical measurement channel to enter the electrical measurement function setting interface, as shown in Figure 6.



Figure 6 Electrical signal measurement function

- ◆ It is forbidden to apply current/voltage exceeding the current measuring range to the calibrator;
- ◆ It can be zeroed by short circuit;
- ◆ If the measured value exceeds the current range, display will turn red with alarm at the same time;
- ◆ If the measured value exceeds the measurable range of the calibrator, it will display red "-----" and alarm at the same time.



#### 2.4.1 Measuring a Switch



Four buttons can switch between current measurement, voltage measurement, switch test and HART communication. Switch test can choose switch type (mechanical switch, PNP and NPN electronic switch). When selecting the switch function, the latest switch type will be displayed.

#### 2.4.2 Zeroing

The current/voltage signal provides short-circuit zeroing operation to eliminate the measured zero drift. The allowable zeroing range is 1%FS.

#### 2.4.3 Scaling

Provides the function of converting current/voltage signals into pressure or other signals. Click  to enter proportion scaling function setting, settings seeing Table 11.

Table 11 Proportional scaling

| Item              | Effective value                          | Description                  |
|-------------------|------------------------------------------|------------------------------|
| Scaling           | Open/ close                              | Set scaling enabled          |
| Transfer function | Linear/square root                       | transfer function of scaling |
| Input range       | Channel range or less than channel range | Input range of scaling       |
| Output range      | (-999999~+999999)                        | Output range of scaling      |
| Decimal digits    | 0 ~ 5                                    | Scaling resolution           |

#### 2.4.4 Filtering

For specific operations, see 2.3.3.

---

#### 2.4.5 Statistics

For specific operations, see 2.3.2.

#### 2.5 Intelligent HART Calibration (ADT673 only)

The calibrator supports HART communication, uses a simplified DD file to provide the setting, maintenance and calibration of common parameters for HART pressure transmitters. It is recommended to refer to the instruction manual of the transmitter before using the calibrator to operate the transmitter. If you need full-featured HART operation, please refer to Chapter 8 "HART Communicator".

Note: The calibrator always acts as the master station during the communication with the HART device. Therefore, in order to avoid harm to the control system, the HART device must be separated from the control system before using the calibrator to connect to the HART device.

##### 1. Search and Connection

- ◆ Turn on the electrical signal measurement area display in the main operation interface, select  mode to start the HART function, and the calibrator will automatically switch to the power supply configuration selected by the last HART measurement (the default connection mode uses internal resistance with internal power supply), and to search the "0" Address. After searching for the HART device, it will automatically connect and display its value.
- ◆ Press  to start search, or click the HART measurement channel screen when the HART device is not connected to enter the HART power supply configuration interface. The connection method provided by the calibrator is as follows:

1) The connection method of internal power supply and internal resistance is shown in Figure 7;



Figure 7 HART-Internal power and internal resistance

2) The connection method of external power supply and internal resistance is shown in Figure 8;



Figure 8 HART-External power and internal resistance

3) The connection method of external power supply and external resistance is shown in Figure 9;

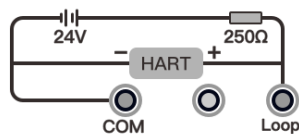


Figure 9 HART-External power and external resistance

If loop current measurement is required, please select “External power and external resistance” on calibrator and refer to Figure 10 for the actual connection.



Figure 10 HART-External power and external resistance (with loop current measurement)

- ◆ After selecting the power supply configuration, enter the search interface. Start searching for HART devices from address "0", if the search is successful at address "0", stop searching and display the HART device list and main information, otherwise the calibrator will start searching from address "1" until address "15". After finishing searching, the calibrator will list all the searched HART devices, and it can support up to 15 HART devices at the same time;
  - ◆ Press  to stop searching and return back to power supply setting interface during search process;
  - ◆ Press  to re-search after finishing searching;
  - ◆ After searching, if there is HART online, choose to establish a connection with the device.
2. Online and Offline
- ◆ After the connection is established, HART will be displayed on the main operation page as an electrical test item;
  - ◆ In the main operation page, switch the electrical measurement option to other measurement modes (such as current measurement) to exit the HART connection, and at the same time, switch the HART measurement icon



in the status bar to the corresponding icon (such as current measurement);

- ◆ When the HART communication fails in the main operation page, it will automatically search for new devices again;
- ◆ In a test involving HART, if HART is offline, the test prompts HART is offline.

### 3. Process Value

- ◆ In main operation page, Hart as electrical item, press  to enter the process value, the main variable PV, output current AO, percentage, second variable, third variable and loop current can be displayed at the same time. The units of the second and third variables are determined by different device;
- ◆ In the process value menu, click them to switch the primary and secondary display;
- ◆ When do a calibration task for a HART transmitter, select the HART process value to be calibrated.

### 4. Settings

#### (1) Parameters

- ◆ In main operation page, switching into HART, then press  to enter the HART parameters setting interface, seeing Table 12.

Table 12 HART Parameters

| Item               | Parameters | Description and effective value                                                                         |
|--------------------|------------|---------------------------------------------------------------------------------------------------------|
| Device information | Label      | Support letters, numbers, symbols input, the length cannot be greater than 8 characters                 |
|                    | Date       | Any date supported by the transmitter can be changed                                                    |
|                    | Infor.     | Support the input of letters, numbers, and symbols, and the length cannot be greater than 32 characters |

|        |                          |                                                                                          |
|--------|--------------------------|------------------------------------------------------------------------------------------|
|        | Description              | Support letters, numbers, symbols input, the length cannot be greater than 16 characters |
|        | Final assembly No.       | Support integer input, the length cannot be greater than 8 digits                        |
|        | Leading character number | Support integer input, the range is 5~20                                                 |
|        | Manufacturer             | Read only parameter                                                                      |
|        | Device type              | Read only parameter                                                                      |
|        | Device No.               | Read only parameter                                                                      |
|        | Writing protection       | Read only parameter                                                                      |
|        | Universal version        | Read only parameter                                                                      |
|        | Software version         | Read only parameter                                                                      |
|        | Hardware version         | Read only parameter                                                                      |
|        | Device version           | Read only parameter                                                                      |
| Sensor | Sensor SN                | Read only parameter                                                                      |
|        | Sensor unit              | Read only parameter                                                                      |
|        | Sensor lower limit       | Read only parameter                                                                      |
|        | Sensor upper limit       | Read only parameter                                                                      |
|        | Sensor minimum range     | Read only parameter                                                                      |



|               |                             |                                                                                                                                                             |
|---------------|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device output | Primary variable/range unit | It can be changed to any unit supported by the transmitter, and the upper and lower limits will be displayed along with the conversion during modification. |
|               | PV range lower limit        | Cannot exceed the lower limit of the sensor                                                                                                                 |
|               | PV range upper limit        | Cannot exceed the upper limit of the sensor                                                                                                                 |
|               | Conversion function         | Can be modified to linear or square root                                                                                                                    |
|               | Damping                     | Device data filtering time, the unit is S                                                                                                                   |
|               | Polling address             | The default is 0, supports integer input, and the range is 0~15                                                                                             |
|               | Burst mode                  | It can be set to enable/disable, depending on whether the transmitter supports it.                                                                          |
|               | Burst command               | Burst command value can be set                                                                                                                              |
|               | Alarm status                | Read-only parameter                                                                                                                                         |

#### (2) Operation

- ◆ In the HART settings interface, you can view the HART parameter values in real time
- ◆ After inputting the setting status of the current option, click  to save, click  to cancel saving and return;
- ◆ If the input value is displayed in red when saving, it means the input value is not accepted, please check its input range;
- ◆ If the current setting is canceled or the setting fails, the current item is restored.

#### 5. Service

##### (1) Current loop test

- ◆ Click  to select diagnosis/service, enter the current loop test, and perform the current loop test. The value range of this parameter is (4-20) mA;

- 
- ◆ The HART measurement value at the top of the calibrator interface is the actual value of the current loop.

(2) PV zeroing

- ◆ Select zeroing in the HART diagnosis/maintenance interface, and enter the zeroing interface;
- ◆ Ensure that the current measurement value is close enough to the zero point, otherwise it may cause zeroing failure.

(3) Current adjustment

- ◆ By adjusting the proportional coefficient of the current output link of the transmitter, the AO value of the transmitter is consistent with the actual output loop current;
- ◆ Provides adjustment of D/A zero point (4mA) and D/A gain (20mA): you can press the screen to get the current value for adjustment

(4) Sensor trim

Sensor trim is the adjustment of the PV process variable of the transmitter, which usually contains one or two adjustment points (low point and high point). Some transmitters do not support sensor trim operations (whether the transmitter supports sensor trim, please refer to the transmitter's manual).

- ◆ Lower limit adjustment

Support setting PV unit and adjustment point value;

Note: pressure module needs to be connected.

- 1) Manually control the pressure of the transmitter through an external source. After the pressure measurement is stable, press the Acquire key to directly obtain the standard value or directly press the number key to manually input the value to be adjusted;

Note: Some transmitters do not need to input the adjustment value, the transmitter automatically uses the upper and lower limits of the range (the lower limit of the range corresponds to the low point adjustment value,



---

and the upper limit of the range corresponds to the high point adjustment value) as the adjustment value. In this case, any value can be input ;

2) Execute the trim (Trim) command. After successful, the PV value will change according to the executed trim point value.

◆ Upper limit adjustment

The operation process is the same as that of lower limit adjustment.

◆ Restore factory

After selecting "Restore Factory", a prompt will appear asking "Are you sure to restore the sensor factory calibration?" click  on the screen to execute the factory restore command. After success, the transmitter's high and low point adjustment values will be restored to the factory adjustment state.

### 3. Setting

Enter the function menu interface by clicking the menu bar at the bottom of the main interface, select the system setting button in the function menu interface, and click  to enter the system setting interface, as shown in Figure 11. This interface includes "communication settings", "personalization", "system service", "battery information", and "product information".



Figure11 System setting interface

### 3.1 Communication Setting

#### 3.1.1 Bluetooth

The calibrator communicates with the mobile phone App via Bluetooth.

Table 13 Bluetooth communication setting

| Item             | Effective value                     | Description                              |
|------------------|-------------------------------------|------------------------------------------|
| Bluetooth state  | Open/close                          | Open or close Bluetooth function         |
| Bluetooth name   | Support letters, numbers or symbols | Set the Bluetooth name of the calibrator |
| Physical address | Read only                           |                                          |

#### 3.1.2 Wireless Communication

This setting is only provided when optional module is a WIFI module, at this time the device can be connected to the wireless network through the WIFI module.

Table 14 Wireless communication setting

| Item             | Effective value                    | Description                             |
|------------------|------------------------------------|-----------------------------------------|
| WLAN             | Open/close                         | Open or close Wi-Fi                     |
| Wireless network | Depends on the network environment | Wireless network access point selection |
| Advanced options | DHCP/manually                      | Choose how to get device address        |

◆ The port number and physical address are factory settings and cannot be changed

1. When DHCP is selected for advanced options, the contents of the following table are automatically allocated by the system and become read-only items;
2. When the manual mode is selected for the advanced options, the contents of the following table must be filled in

manually:

Table 15 Wireless communication manually setting

| Item        | Effective value           | Description               |
|-------------|---------------------------|---------------------------|
| IP Address  | 0.0.0.0 ~ 255.255.255.255 | Set IP address of device  |
| Subnet mask | 0.0.0.0 ~ 255.255.255.255 | Set subnet mask of device |
| Gateway     | 0.0.0.0 ~ 255.255.255.255 | Set gateway of device     |

(1) Click  the button at the bottom right corner of the screen to confirm the settings.

(2) The wireless communication settings take effect directly without confirming the operation. Click  button in the upper right corner of the screen to return to the previous menu.

### 3.1.3 Serial Communication

This setting is provided when the optional module is an RS232 module, and the device can communicate through the serial port at this time.

Table 16 Serial port communication

| Item           | Effective value                                | Description             |
|----------------|------------------------------------------------|-------------------------|
| Baud rate      | 2400/4800/9600/19200/38400/57600/115200/256000 | Factory default is 9600 |
| Date length    | 7/8                                            | Factory default is 8    |
| Stop bit       | 1/2                                            | Factory default is 1    |
| Odd-Even check | None/Odd/Even                                  | Factory default is None |



---

### 3.1.4 Acloud Service

This setting is only provided when the optional module is a WIFI module, and the device can access ACloud cloud service through Wi-Fi wireless communication. Through the Additel Link APP, users can monitor the real-time operating status and data of the equipment anytime and anywhere, remotely control the equipment, and improve work efficiency.

#### 1. Open

When the service is not enabled, the cloud service status is empty; when the service is enabled, the cloud service is working normally, and the cloud service status icon is ; when the service is enabled but the cloud service is not successfully connected, the status icon is .

#### 2. Additel Link

Additel Link is used to display the basic information of the organization and user monitoring the current device, including the name of the organization, the username that has the authority to monitor the device, the registered email address and whether it is currently being monitored. means that the user is monitoring the current device, and means that it is not in the monitoring state.

The button on the right side of the page returns to the upper page. The button is used to cancel the binding relationship between the organization and the device, to manually refresh the organization and user information, to display the QR code, and to bind the organization (after the APP scans the QR code, the QR code will disappear automatically, or you can manually click the QR code to close it. When scanning the code to bind the relationship, you need to open the QR code).

## 3.2 Personalization

### 3.2.1 Custom Units

The device provides five custom units to be edited. The unit being used cannot be edited.

---

### 3.2.2 CSV File Format

It can be set to “.” or “,”.

### 3.2.3 Date & Time

Table 17 Date & time

| Subject     | Valid Value           | Comment                   |
|-------------|-----------------------|---------------------------|
| Time        | 00:00 ~ 23:59         | Time setting              |
| Date        | 2020-1-1 ~ 2099-12-31 | Date setting              |
| Date format | Y-M-D / M-D-Y / D-M-Y | Date format setting       |
| Separator   | -, /, .               | Date separator setting    |
| 24 hours    | enable                | 24-hour or 12-hour format |
| Time zone   | UTC±00:00~12:00       | Set device time zone      |

### 3.2.4 Sound

Table 18 Personalization

| Subject          | Valid Value | Comment |
|------------------|-------------|---------|
| Touch Sound      | On / Off    |         |
| Prompt Sound     | On / Off    |         |
| Over range Sound | On / Off    |         |
| Over Range Sound | On / Off    |         |
| Snapshot Sound   | On/Off      |         |



### 3.2.5 Language

The device provides a multi-language user interface. Use this menu to change from the provided languages. After the language is selected, the device needs to be restarted for the changes to take effect.

### 3.2.6 Display Orientation

The direction of display is adjustable for different direction of mounting.

## 3.3 System Service

### 3.3.1 System Calibration

The device provides function of calibration. Users need to enter a password to enter the system calibration page, and the factory default password is 123456. The following information is general information of the calibration page.

#### 3.3.1.1 General Information

On the right side of electrical calibration page, there will be following icons:

Table 19 Calibration icon description

| Icon                                                                                | Description     | Electrical calibration | Pressure module calibration | Barometric calibration |
|-------------------------------------------------------------------------------------|-----------------|------------------------|-----------------------------|------------------------|
|  | Return          | ●                      | ●                           | ●                      |
|  | Restore factory | ●                      | ●                           | ●                      |
|  | Previous point  | ●                      | ●                           | ●                      |
|  | Next point      | ●                      | ●                           | ●                      |

|                                                                                   |             |   |   |   |
|-----------------------------------------------------------------------------------|-------------|---|---|---|
|  | Save        | ● | ● | ● |
|  | Cancel      | ● | ● | ● |
|  | OK          | ● | ● | ● |
|  | Cancel zero | ● | ● | ● |
|  | Calibration | ● | ● | ● |

### 3.3.1.2 Pressure Calibration

#### 1. Cancel zeroing

Cancel the recorded zero data.

#### 2. Multi-point calibration

##### a. Connection

Connect the calibrator with external pressure source and reference pressure standard.

##### b. Perform calibration

- ◆ Click on  to perform calibration.
- ◆ Connect the calibrator with external pressure source.
- ◆ After the pressure is stabilized, click on  to go to next point;
- ◆ Adjust the gauge output value to the same as the setpoint being calibrated;
- ◆ If the measured value has big difference with the calibration point, there will be notice by RED;
- ◆ If the calibration point has big difference with the measured value, there will be a notice, but it does not influence taking effect.



- 
- ◆ New calibration data takes effect immediately. The calibration date will be changed to the current system date.

c. Restore the factory calibration data

Click on  to restore the factory calibration data.

### 3.3.1.3 Barometric Calibration

The calibrator provides single point or dual point calibration to the internal barometric module. Before performing the barometric calibration, remove the back cover and connect the air line to 4mm connector, as shown in the Figure 12.



Figure 12 Barometric calibration

1. Single point calibration

Input the external barometric standard to standard pressure value, confirm and click on SAVE to finish calibration.

2. Dual point calibration

a. Connection

Connect the calibrator with external pressure source and provide greater standard of pressure.

b. Perform calibration

◆ Click on  to perform calibration.

◆ Input the external pressure according to the calibrator's notice. After the pressure is stabilized, click on  to go to next point;

◆ If the measured value has a big difference with the standard value, there will be notice by RED, the result cannot be saved now;

◆ If the calibration point has a big difference with the measured value, there will be a notice, but it does not influence taking effect.

◆ New calibration data takes effect immediately. The calibration date will be changed to the current system date.

c. Restore the factory calibration data

Click on  to restore the factory calibration data.

**3.3.1.4 Electrical Calibration (ADT673 only)**

1. Cancel zeroing

Cancel the recorded zeroing data.



---

## 2. Multi- point calibration

- ◆ Click on  to perform calibration.
- ◆ Input the standard circuit/ voltage value from standard circuit/ voltage source to the calibrator according to the calibrator's notice. After the measured value is stabilized, click  to go to the next point;
- ◆ Use  to return to upper operation at any time before the calibration is finished or use  to return to the previous point.
- ◆ If the measured value deviates a lot with the calibration point the output will be RED;
- ◆ If the calibration point deviates a lot with the measured value, there will be a notice, but it does not stop data from being taken..
- ◆ Calibration successes, new data takes effect immediately, the calibration date will be changed to the current system date.

## 3. Restore the factory calibration data

Click on  to restore the factory calibration data.

### 3.3.2 Repair and Maintenance

Enter password to start the function, default password is 123456.

Repair log: view and edit the maintenance information;

Calibration history: view calibration history.

### 3.3.3 Restore Factory Settings

The device provides the function of restoring the factory settings. A password is required to enable this function. The factory default password is 123456.

Restoring factory settings will not recover all the system calibration data. If you want to recover the system calibration data, refer to Para.3.3.1 System calibration.

---

After restoring the factory settings and restart the device, the user needs to set the time, refer to Para.3.2.3 Date and Time.

#### **3.3.4 System Update**

The device provides a firmware update function. USB disk is needed; the USB disk format needs to be FAT16 or FAT32.

Operation:

1. Copy the update file to the root directory of the USB disk.
2. Insert the USB disk into the USB socket on the rear side of the exact source.
3. Select the update pack in the exact source update page.
4. Click  until the system starts to update automatically.
5. After waiting a few minutes for the update process to complete, the system will automatically show the update completion message.

### **3.4 Power management**

#### **3.4.1 Display Brightness**

Change the LCD's brightness by adjusting the brightness bar.

#### **3.4.2 Battery Information**

Show the current battery connection status and information.

#### **3.4.3 Screen Saver**

The screen saver turns on automatically after a certain period of interface inactivity.

Select Never, 30s, 1 min, 5mins, 15mins and 30mins.

After the screen saver begins, the first press to the keypad will only activate the screen, only after this can the press takes effect.



---

#### **3.4.4 Auto Power Off**

The backlight turns off after the set time of inactivity.

It is supported to select Never, 5mins, 15mins, 30mins, 1h and 2h.

When using AC adapter, the calibrator cannot auto power off.

This function will be invalid when performing Pressure control, Auto step or Task.

The Auto power off will be invalid when the screen saver is set to Never.

#### **3.4.5 Charge Mode**

The device provides fast charge mode and high precision charge mode. The quick charge mode can improve charging speed significantly, but it has influence to the accuracy for pressure measurement. The high precision mode can ensure the accuracy for measurement but will slow down the charge speed.

The default mode is fast charge mode when device is turned on. Select high precision mode if you need to perform high accuracy pressure measurement during charging through adapter, but this will not be saved and will be reset to the quick charge mode after the device is restarted.

#### **3.5 Product Information**

Product information is read only, it includes basic information, version and running information:

Basic information: model, serial number and scale information.

Version: Host, system version, pressure module version and Wi-Fi version. The firmware version is usually referred to Host version. When contact with the customer service team, please provide information of Host version if needed.

## 4. Task (ADT673 only)

In the function menu page, click  to enter task page. The calibrator provides test task function, which makes it possible to document calibrations, collect, store and analysis calibration data, and makes it easier to re-perform and review.

### 4.1 Calibrate Dial Pressure Gauge

#### 1. Connection

(1) Refer to Figure 13, connect the calibrator with the dial pressure gauge;



Figure 13 Calibrate Dial Pressure Gauge

(2) If the gauge is differential gauge, it is recommended to connect the REF port.

#### 2. Set a new task

Select  in the type list, input gauge information in order.



Table 20 Information of pressure dial gauge task

| Subject       | Valid value                                                 | Comment                                                                                                                                                         |
|---------------|-------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Pressure type | Gauge pressure, absolute pressure                           | The type of calibrated gauge, view support information according to calibrator's model                                                                          |
| Scale         | Depends on the pressure gauge                               | The scale and unit of calibrated gauge                                                                                                                          |
| Accuracy      | 0.06%、0.1%、0.16%、0.25%、0.4%、0.6%、1%、1.6%、2.5%、4% and custom | Gauge accuracy. The value entered in custom option indicates the gauge's accuracy, for example input 1.5 for 1.5 level gauges, it means a range of (0.001~100)% |

### 3. Task start

Click on  to start the task:

(1) Before calibrating, click on  and  to zero the pressure module;

(2) Calibration process:

1) After controlling the pressure to the first calibration point and allowing for stability, click on the top and input the gauge reading. (The calibrator can infer the gauge reading based on the standard if desired)

2) Click on  to go to next calibration point;

3) Repeat the above steps until finish the calibration. Click on  and  to stop and finish the calibration.

### 4. Finish task

The calibrator provides data review, sorting and storage functions for the calibration task

(1) After finishing the task, user can view the task result through the task data.

(2) User can quit the task data by clicking on  and perform the task again.

(3) Task data can be stored through , in the storage page, user can enter the following information:

Table 21 Save Task

| Subject             | Valid value                                   | Comment                                               |
|---------------------|-----------------------------------------------|-------------------------------------------------------|
| Name                | Letters, numbers, symbols, Chinese characters | Information for calibration task name                 |
| Operator            | Letters, numbers, symbols, Chinese characters | Information for task operator                         |
| Calibration date    | 2000/01/01~2099/12/31                         | Date of task performing                               |
| Ambient humidity    | Numbers                                       | Ambient humidity when performing task                 |
| Ambient temperature | Numbers                                       | Ambient temperature when performing task              |
| Temperature unit    | K、 °C、 °F                                     | Temperature unit when performing task                 |
| Save as             | Before adjusting, after adjusting, or both    | Save the data before or after the adjustment, or both |

Note: After saving, return to the task selection page by clicking on  at the lower right side.

#### 4.2 Calibrate pressure transmitter

During performing the task, the calibrator can measure and record the current or voltage value output by the transmitter, so that the whole process can be fully automated.

## 1. Connection

Refer to Figure 14.



Figure 14 Calibrate pressure transmitter

## 2. New task

According to transmitter select (mA, V, HART), select “transmitter” icon  in the calibration list, input transmitter information:

Table 22 Information for pressure transmitter in task mode

| Subject       | Valid value                       | Comment                                                      |
|---------------|-----------------------------------|--------------------------------------------------------------|
| Pressure type | Gauge pressure, absolute pressure | The type of calibrated transmitter, view support information |

|                   |                                                                  |                                                                                                                                    |
|-------------------|------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
|                   |                                                                  | according to calibrator's model                                                                                                    |
| Input             | Depends on transmitter                                           | Transmitter pressure scale                                                                                                         |
| Output            | Analog signal: 4~20Ma, 0~10mA, 0~20mA, 1~5V, 0~5V, 0~10V, custom | Signal output range of circuit/voltage pressure transmitter                                                                        |
|                   | HART device: PV, percentage, output circuit, loop circuit        | Signal output type of HART device                                                                                                  |
| Transfer function | Depends on input/output relationship                             | Pressure transmitter transfer function                                                                                             |
| Accuracy          | 0.05%, 0.1%, 0.2%, 0.5%, 1%, 1.5%, 2%, 2.5%, custom              | The accuracy of the pressure transmitter. The value entered in the custom option is the accuracy level of the pressure transmitter |

### 3. Start the task

- (1) Operations refer to the content in Para. 4.1.
- (2) If output analog signal, it needs to set the power configuration;
- (3) If output to HART device, it needs to configure HART.
- (4) Click on  and  to zero the module;

### 4. Finish task

Operations refer to the content in Para.4.1.

#### 4.3 Calibrate pressure switch

##### 1. Connection

- (1) The air and circuit connection between pressure switch and calibrator are shown in Figure15 (in the Figure it is mechanical switch).



Figure15 Calibrate Pressure Switch

(2) The calibrator supports mechanical switch, NPN and PNP electronic switches. The circuit connection of mechanical switch is shown in Figure 16. The electronic switches can be connected through internal power and external power connections. Refer to Figure 17 and Figure 18.



Figure 16 Mechanical switch



Figure 17 Electrical Switch through internal power



Figure 18 Electrical Switch through external power



## 2. New task

Select “Pressure switch” icon  in the calibration list, input pressure switch information in order:

Table 23 Information for pressure switch in Task mode

| Subject         | Valid value                          | Comment                                                                                                |
|-----------------|--------------------------------------|--------------------------------------------------------------------------------------------------------|
| Pressure type   | Gauge pressure, absolute pressure    | The type of calibrated switch, view support information according to calibrator's model                |
| Scale           | Depends on the switch                | The switch's pressure scale                                                                            |
| Set point       | Depends on the switch's scale        | Action point of the switch                                                                             |
| Action type     | NC/NO                                | Action type of the switch                                                                              |
| Switch category | Mechanical, NPN, PNP switches        | Category of the calibrated switch                                                                      |
| Accuracy        | 0.5%, 1%, 1.5%, 2%, 2.5%, 4%, custom | Switch's accuracy. The value entered in the custom option is the accuracy level of the pressure switch |

## 3. Start the task

- (1) Click on  and  to zero the module;
- (2) The bottom of the screen shows reading value of the current controlled pressure, and the top is the switch status;
- (3) Switch action status and action value will be recorded and displayed in the table;
- (4) Click on the Stop icon to close the running task and view the result;

## 4. Finish task

Refer to the content in Para.4.1.

## 5. Data log

Click on the button  in the function menu page to enter the data log management. The calibrator supports the continuous data log, which can continuously record the measured signal data within the set time. Both the electrical signal and the pressure value are recorded simultaneously.

Click on the recorded data to view it, and select  to view the curve, detailed data, export, and delete.

### 1. New test

- (1) Before recording, click on  and  to zero the pressure module;
- (2) The bottom of the screen shows reading value of the current controlled pressure, and the top is the switch status;
- (3) Switch action status and action value will be recorded and displayed in the table;
- (4) Click on the Stop icon to close the running task and view the result;
- (5) Click on  at the bottom of the screen to confirm and the task starts automatically, click on  to quit this task;
- (6) In the task, click on  to stop the record, confirm Stop by clicking on  when asking whether to stop, and the data will be saved automatically.

Table 24 Information for Data log

| Subject  | Valid value                                   | Comment                            |
|----------|-----------------------------------------------|------------------------------------|
| Name     | Letters, numbers, symbols, Chinese characters | Information for data log item name |
| Operator | Letters, numbers, symbols, Chinese            | Information for data log operator  |



|                        |                                     |                                                                                         |
|------------------------|-------------------------------------|-----------------------------------------------------------------------------------------|
|                        | characters                          |                                                                                         |
| Record interval        | Number                              | Data record interval                                                                    |
| Record point           | Number                              | Total amount of data record points                                                      |
| Record date            | 2000/01/01~2099/12/31               | Data record date                                                                        |
| Pressure unit          | Pressure unit                       | Type of the recorded pressure unit                                                      |
| Pressure type          | Gauge pressure, absolute pressure   | The type of calibrated switch, view support information according to calibrator's model |
| Electrical measurement | (-30~30)mA, (-30~30)V, switch, HART | Mode of recording the electrical measurement                                            |

## 2. Edit the page

When there are series of pages, switch the page number one time through , or click on Edit Page icon  to jump pages.

## 3. Delete mode

When you need to delete data, click on the delete mode  in the menu. Select the item to be deleted with a check icon , then delete to proceed. If you need to jump page, do the same as 2.

## 6. Data management

Click on  in the function menu to enter the data management page.

It is classified and managed by functional modes; the data saved in each function is managed in the corresponding items;

The function modes that can save data files include: snapshot, pressure leak test, etc;

Users can export data file through USB disk or PC software, the format is CSV;

Users can delete the data in batches.

## 7. Application

### 7.1 Pressure unit converter

In the function menu page, click on  to enter pressure unit converter;

The device supports convert between different pressure unit.

### 7.2 Leak test

Click on the button  in the function menu page to enter the leak test function. The leak test is to detect the degree of gas leakage by connecting the pressure gauge/calibrator to the gas circuit and performing the leak test process.

#### 1. Setting

Table 25 Information for leak test setting

| Subject       | Valid value                                   | Comment                                                                               |
|---------------|-----------------------------------------------|---------------------------------------------------------------------------------------|
| Name          | Letters, numbers, symbols, Chinese characters | Item name information                                                                 |
| Operator      | Letters, numbers, symbols, Chinese characters | Operator information                                                                  |
| Waiting time  | Numbers                                       | Pressing time of external pressure module                                             |
| Running time  | Numbers                                       | Total length of recorded time                                                         |
| Pressure unit | Pressure unit                                 | Type of recorded pressure unit                                                        |
| Pressure type | Gauge pressure, absolute pressure             | The type of pressure switch, view support information according to calibrator's model |



- 
- (1) Select application in the function menu and enter the leak test;
  - (2) Set the wait time
    - 1) Connect to external pressure source: the wait time will count down.
    - 2) Enter the test time after the wait time is over.
  - (3) Set test time

After entering the test time, the countdown starts and the test is carried out, the test stops when the timer reaches 0;
  - (4) Pressure type

Switch between gauge pressure/differential pressure.

    2. Carry out
  - (1) Connect air circuit
    - 1) Connect the device to the air circuit;
    - 2) Press the Start icon on the right of the screen to start the test. Apply pressure to the leak test point;
    - 3) The wait time will count down and record the real-time pressure as the initial pressure when the time is over;
    - 4) Start the test, count down the test time, and start calculating the real-time leakage at the same time, real-time leakage = initial pressure - real-time pressure;
    - 5) Record the pressure at the end of the test time as the end pressure;
    - 6) The entire leak test process finishes, and the final leakage = initial pressure - end pressure;
  - (2) The whole process will be shown in stages in the leak test curve at the bottom of the screen;

### 7.3 PSV test

Click on the button  in the function menu to enter the PSV test function. The PSV test is used to test the opening pressure of the safety valve. In order to ensure the accuracy of the opening pressure test, the pressure gauge/calibrator

will automatically enter high-speed reading mode and continuous recording of pressure data ten times per second, real-time recording of the maximum pressure, and draw the real-time pressure data curve to visually show the trend of pressure changes.

#### 1. Setting

Table 26 information for PSV setting

| Subject       | Valid value                           | Comment                                                                               |
|---------------|---------------------------------------|---------------------------------------------------------------------------------------|
| Name          | Letters, numbers, symbols, characters | Information of the item name                                                          |
| Operator      | Letters, numbers, symbols, characters | Operator information                                                                  |
| Running time  | Number                                | Total length of recorded time                                                         |
| Pressure unit | Pressure unit                         | Type of recorded pressure unit                                                        |
| Pressure type | Gauge pressure, absolute pressure     | The type of pressure switch, view support information according to calibrator's model |

(1) Select application in the function menu and enter the leak test;

(2) Set test time

1) After entering the test time, the countdown starts, and the test is carried out;

2) The test stops when the timer reaches 0;

(3) Pressure type

Switch between gauge pressure/differential pressure.

#### 2. Carry out

(1) Connect air circuit

1) Connect the device to the air circuit;



- 
- 2) Press the Start icon on the right of the screen to start performing, first apply pressure to the leak test point;
  - 3) Start testing, count down the test time and record the real-time pressure point value at the same time;
  - 4) Record the maximum pressure point value during the process;
  - 5) The entire leak test process finishes, save the data;

(2) The whole process will be shown in the leak test curve at the bottom of the screen;

## 8.HART communicator (ADT673 only)

Click on the button  in the function menu page to enter the HART communicator function. The HART communicator uses the native HART DD file. The calibrator can be used to complete the maintenance and commissioning of almost all HART pressure device, including parameter modification, fault diagnosis, and daily maintenance and calibration, etc. Concerning that the operation of the communicator on the HART device depends on the DD file, the operation varies a lot between different HART devices, so please refer to the manual of the HART device before using the function.

**Note: The calibrator always acts as the master station during the communication with the HART device. Therefore, in order to avoid harm to the control system, the HART device must be separated from the control system before using the calibrator to connect to the HART device.**

### 8.1 HART connection and search

Refer to Para.2.5 HART communication connection and search.

### 8.2 HART communicator operation

Read the parameters in HART and modify them, the root directory shows items1~4, depends on the HART device,

The parameters that have been modified but not written into HART are highlighted in yellow in the list, click on  to complete the writing to the HART device;

For some of the parameters, enter the page and click on  at the right of the screen to view the instruction

---

information.

Click on the  and  at the right of the screen to view the communicate status and device status respectively. Enter it and the vacant circle on the right of the list indicates that it is normal, otherwise it means that the item is abnormal.

Click on  at the right of the screen to return to the home page of the device and click on  at the right top of the screen to return to HART communicator again.

## 9. Copyright

Additel corporation owns all copyrights to this system and reserves all rights.

### Appendix A : Description of RS232 module DB9 pins



Figure 19 Description of RS232 module DB9 female pins

---

Table 27 Description of RS232 module DB9 pins

| Pins | Description |
|------|-------------|
| 1    | Reserved    |
| 2    | TXD         |
| 3    | RXD         |
| 4    | Reserved    |
| 5    | GND         |
| 6    | Reserved    |
| 7    | Reserved    |
| 8    | Reserved    |
| 9    | Reserved    |

---

## Appendix B: Description for Type-C to USB female OTG adapter



Figure 20 Type-C to USB female OTG adapter.

Type-C to USB female OTG adapter is a standard accessory, as shown in Figure 20.  
Some typical using methods of the adaptor:



---

(1) Connect to TYPE-A USB2.0 USB disk through the adapter, shown in Figure 21.



Figure 21 Connect to USB disk through the adapter

(2) Connect to PC through adapter and USB male-to-male cable, shown in Figure 22;



Figure 22 Connect to PC through the adapter

(3) Use the adapter to charge the device by cellphone (the cellphone must support TYPE-C OTG), as shown in Figure 23, connect the adapter to the TYPE-C port of the cellphone, and then use the TYPE-C cable to connect to the device, to charge the device by cellphone.



Figure 23 Connect to cellphone through the adapter

If you connect the adapter to the device, and then use the TYPE-C cable to connect to the cellphone, the device can charge the mobile phone.



---

## Appendix C: Communication commands

### 1 Commands instruction

(1) each command includes two parts: **mnemonic** and **parameter**. The **mnemonic** and **parameter** are separated by a space;

For example pressure: filter 0|1, < numeric>[,<numeric>], 0|1 refers to the parameter description specific optional option, <numeric> is the parameter to be input, [,<numeric>] refers to the additional parameter when the parameter is set to 1. if set the pressure filter function by this command, enter pressure: filter 1, 50,5

(2) about the parameter

Each parameter in the instruction set is marked with<> (do not enter angle brackets when converting to actual instructions) and separated by commas.

(3) terminator

The scpi command must include a command terminator, which can be one of the follows (excluding double quotation marks): "\r\n", "\r", "\n" or "\0".

Table 28 IEEE 488.2 common commands

| No | Commands | Description                                                                                                                                               | Parameter | Returned value                          |
|----|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-----------------------------------------|
| 1  | *cls     | Clear the following registers:<br>Standard event register;<br>Query event register;<br>Operation event register;<br>Status byte register;<br>Error queue. | -         | -                                       |
| 2  | *idn?    | Instrument identification query, return 2 parts of data:<br>A. Product serial number;<br>B. Software version;                                             | -         | Product serial number, software version |
| 3  | *rst     | Program reset                                                                                                                                             | -         | -                                       |

Table 29 Pressure commands

| No | Commands        | Description                 | Parameter                               | Returned value                                                                      |
|----|-----------------|-----------------------------|-----------------------------------------|-------------------------------------------------------------------------------------|
| 1. | Pressure? [all] | Read current pressure value | Option all: reading barometric pressure | Pressure value, pressure unit, pressure type[,barometric pressure, barometric unit, |



|     |                                       |                                           |                                                                       |                                                                                                                                           |
|-----|---------------------------------------|-------------------------------------------|-----------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
|     |                                       |                                           |                                                                       | barometric pressure type]                                                                                                                 |
| 2.  | Pressure:unit?                        | Read current pressure unit                | None                                                                  | Unit name                                                                                                                                 |
| 3.  | Pressure:unit<br><numeric> <unquostr> | Set current pressure unit                 | Unit id or unquoted unit<br>name                                      | None                                                                                                                                      |
| 4.  | Pressure:ptype?                       | Read current pressure type                | None                                                                  | G: gauge pressure<br>A: absolute pressure<br>D: differential pressure                                                                     |
| 5.  | Pressure:ptype g a d                  | Set current pressure type                 | G: gauge pressure<br>A: absolute pressure<br>D: differential pressure | None                                                                                                                                      |
| 6.  | Pressure:online?                      | Whether the pressure<br>module is online? | None                                                                  | 0: offline<br>1: online                                                                                                                   |
| 7.  | Pressure:range? [<unquostr>]          | Read pressure module's<br>range           | None, 0 or 1                                                          | None or 0: lower limit, upper limit,<br>unit id, pressure type(g/a/d);<br>1: lower limit, upper limit, unit<br>name, pressure type(g/a/d) |
| 8.  | Pressure:zero                         | Pressure module zero                      | None                                                                  | None                                                                                                                                      |
| 9.  | Pressure:resolution?                  | Read pressure resolution                  | None                                                                  | 4 5 6                                                                                                                                     |
| 10. | Pressure:resolution<br><numeric>      | Set pressure resolution                   | 4 5 6                                                                 | None                                                                                                                                      |
| 11. | Pressure:filter:enable?               | Read filter status                        | None                                                                  | 0: disable                                                                                                                                |



|     |                                              |                                    |                                                                                                                                                         |                                                                                                                                                |
|-----|----------------------------------------------|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
|     |                                              |                                    |                                                                                                                                                         | 1: enable                                                                                                                                      |
| 12. | Pressure:filter:enable 0 1                   | Set filter type                    | 0: disable<br>1: enable                                                                                                                                 | None                                                                                                                                           |
| 13. | Pressure:filter?                             | Read filter parameter              | None                                                                                                                                                    | Two returns format:<br>First-order filter: 0, first-order filter coefficient<br>Average filter: 1, de-extreme value pairs, filter window size. |
| 14. | Pressure:filter<br>0 1,<numeric>[,<numeric>] | Set filter type                    | Two returns format:<br>First-order filter: 0,<br>first-order filter coefficient<br>Average filter: 1,<br>de-extreme value pairs,<br>filter window size. | None                                                                                                                                           |
| 15. | Pressure:stable?                             | Read pressure stable status        | None                                                                                                                                                    | 0: not stable<br>1: stable                                                                                                                     |
| 16. | Pressure:stable:enable?                      | Read the status of the stable time | None                                                                                                                                                    | 0: disable<br>1: enable                                                                                                                        |
| 17. | Pressure:stable:enable 0 1                   | Set the status of the stable time  | 0: disable<br>1: enable                                                                                                                                 | None                                                                                                                                           |
| 18. | Pressure:stable:configure?                   | Read pressure stable               | None                                                                                                                                                    | Separated by comma:                                                                                                                            |



|     |                                                  | status parameter                                                          |                                              | Stability, stable time                                                                                                                                              |
|-----|--------------------------------------------------|---------------------------------------------------------------------------|----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 19. | Pressure:stable:configure<br><numeric>,<numeric> | Set pressure stable status<br>parameter                                   | Stability (0.005-1),<br>stable time (1-60 s) | None                                                                                                                                                                |
| 20. | Pressure:peak:enable?                            | Read pressure peak status                                                 | None                                         | 0: disable<br>1: enable                                                                                                                                             |
| 21. | Pressure:peak:enable 0 1                         | Set pressure peak status                                                  | 0: disable<br>1: enable                      | None                                                                                                                                                                |
| 22. | Pressure:tare:enable?                            | Read pressure tare<br>function status                                     | None                                         | 0: disable<br>1: enable                                                                                                                                             |
| 23. | Pressure:tare:enable 0 1                         | Set pressure tare function<br>status                                      | 0: disable<br>1: enable                      | None                                                                                                                                                                |
| 24. | Pressure:tare:configure?                         | Read pressure tare value                                                  | None                                         | Pressure tare value                                                                                                                                                 |
| 25. | Pressure:tare:configure<br><numeric>             | Set pressure tare value                                                   | Tare value                                   | None                                                                                                                                                                |
| 26. | Pressure:cldangp                                 | Clear overpressure record                                                 | None                                         | None                                                                                                                                                                |
| 27. | Pressure:dangp?                                  | Read overpressure record                                                  | None                                         | Overpressure record                                                                                                                                                 |
| 28. | Atm? [all]                                       | Read barometric pressure<br>value all and read process<br>treatment value | None                                         | Final barometric value<br>All with the original value, linear<br>value, tare value, filter value and<br>final value. (with pressure type<br>when switch pressure is |

|     |          |                       |      |                                                                                                                                                                                                           |
|-----|----------|-----------------------|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|     |          |                       |      | supported)                                                                                                                                                                                                |
| 29. | Measure? | Read the measure data | None | Type 1+ pressure value+ pressure unit id+ pressure type+ type 2+ barometric pressure+ barometric unit id+ type 3+ temperature+ temperature unit id+ type 4+ electric measurement+ electric measurement id |

Table 30 Electric measure commands

| No | Commands                   | Description                 | Parameter   | Returned value                                                                                                                                                                                                                                                         |
|----|----------------------------|-----------------------------|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. | Electricity:measure? [cal] | Read current measured value | None or cal | <p>1. none<br/>Item no, measured value, unit name</p> <p>2. cal<br/>Item no, final measured value, unit name, single-point fixed value, multi-point fixed value, linear fixed value, origin value</p> <p>Note:<br/>Item no:<br/>1. current 2. voltage 3. switch 4.</p> |



|    |                                               |                            |                                                                                                                 |                                                                                                                                               |
|----|-----------------------------------------------|----------------------------|-----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
|    |                                               |                            |                                                                                                                 | hart                                                                                                                                          |
| 2. | Electricity:function?                         | Read current measured item | None                                                                                                            | Item no [item description]<br>Item no:<br>1. current 2. voltage 3. switch 4. hart<br>Switch:<br>0.mechanical switch 1.npn switch 2.pnp switch |
| 3. | Electricity:function<br><numeric>[,<numeric>] | Set current measured item  | Item no:<br>1. current 2. voltage 3. switch 4. hart<br>Switch:<br>0.mechanical switch 1.npn switch 2.pnp switch | None                                                                                                                                          |
| 4. | Electricity:24venable?                        | Read 24v status            | None                                                                                                            | 0: disable<br>1: enable                                                                                                                       |
| 5. | Electricity:24venable 0 1                     | Set 24v status             | 0: disable<br>1: enable                                                                                         | None                                                                                                                                          |
| 6. | Electricity:zero                              | Electric measure zero      | None                                                                                                            | None                                                                                                                                          |
| 7. | Electricity:czero                             | Electric measure cancel    | None                                                                                                            | None                                                                                                                                          |



|     |                                                 |                            |                                                                                                                                  |                                                                                                                         |
|-----|-------------------------------------------------|----------------------------|----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
|     |                                                 | zero                       |                                                                                                                                  |                                                                                                                         |
| 8.  | Electricity:switch:actions?                     | Read switch test act value | None                                                                                                                             | Separated by space:<br>Act value unit name                                                                              |
| 9.  | Electricity:filter:enable?                      | Read filter status         | None                                                                                                                             | 0: disable<br>1: enable                                                                                                 |
| 10. | Electricity:filter:enable 0 1                   | Set filter status          | 0: disable<br>1: enable                                                                                                          | None                                                                                                                    |
| 11. | Electricity:filter?                             | Read filter parameter      | None                                                                                                                             | First-order filter: 0, first-order filter coefficient<br>Average filter: 1, de-extreme value pairs, filter window size. |
| 12. | Electricity:filter<br>0 1,<numeric>[,<numeric>] | Set filter parameter       | First-order filter: 0,<br>first-order filter coefficient<br>Average filter: 1,<br>de-extreme value pairs,<br>filter window size. | None                                                                                                                    |
| 13. | Electricity:scale:enable?                       | Read scaling status        | None                                                                                                                             | 0: disable<br>1: enable                                                                                                 |
| 14. | Electricity:scale:enable 0 1                    | Set scaling status         | 0: disable<br>1: enable                                                                                                          | None                                                                                                                    |
| 15. | Electricity:scale?                              | Read scaling configuration | None                                                                                                                             | Transfer function: 0 linear 1 square                                                                                    |



|     |                                                                                             |                                 |                                                                                                                                                              |                                                                       |
|-----|---------------------------------------------------------------------------------------------|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
|     |                                                                                             |                                 |                                                                                                                                                              | root<br>Input range<br>Output range<br>Decimal digits of output range |
| 16. | Electricity:scale<br>0 1 2,<numeric>,<numeric>,<numeric>,<numeric>,<unqu<br>ostr>,<numeric> | Set scaling configuration       | Transfer function, input<br>lower limit, input upper<br>limit, output lower limit,<br>output upper limit,<br>output units, decimal<br>digits of output range | None                                                                  |
| 17. | Electricity:minmax:enable?                                                                  | Read min/max function<br>status | None                                                                                                                                                         | 0: disable<br>1: enable                                               |
| 18. | Electricity:minmax:enable<br>0 1                                                            | Set min/max function<br>status  | 0: disable<br>1: enable                                                                                                                                      | None                                                                  |

Table 31 System commands

| No | Commands               | Description                           | Parameter | Returned value                             |
|----|------------------------|---------------------------------------|-----------|--------------------------------------------|
| 1. | System:error?          | Read the execute error<br>information | None      | A message at the stack top of the<br>error |
| 2. | System:lock?           | Read the screen lock<br>status        | None      | 0= unlock<br>1= lock                       |
| 3. | System:lock 0 1 on off | Set the screen lock status            | 0= unlock | None                                       |



|    |                                                                                                                              |                         |                                                                                                                                                                                                                                                |                                                                                                  |
|----|------------------------------------------------------------------------------------------------------------------------------|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
|    |                                                                                                                              |                         | 1= lock                                                                                                                                                                                                                                        |                                                                                                  |
| 4. | System:version?<br>["application\\"\\os:firmware\<br>"\\os:hardware\\"\\wifi:firmw<br>are\\"\\bt:firmware\\"\\hart:dd\<br>"] | Read the device version | "application" = host<br>version, "os:firmware"<br>system firmware<br>version,<br>"os:hardware" system<br>hardware version,<br>" wifi:firmware " wifi<br>version<br>" bt:firmware " Bluetooth<br>version<br>" hart:dd " hart dd file<br>version | Default:<br>No parameter= return host version<br>With parameter= return<br>corresponding version |
| 5. | System:date?                                                                                                                 | Read system date        | None                                                                                                                                                                                                                                           | Date(yyyy,mm,dd)                                                                                 |
| 6. | System:date<br><numeric>,<numeric>,<num<br>eric>                                                                             | Set system date         | Year, month, day                                                                                                                                                                                                                               | None                                                                                             |
| 7. | System:time?                                                                                                                 | Read system time        | None                                                                                                                                                                                                                                           | Time(hh,mm,ss)                                                                                   |
| 8. | System:time<br><numeric>,<numeric>,<num<br>eric>                                                                             | Set system time         | Hour, minute, second                                                                                                                                                                                                                           | None                                                                                             |
| 9. | System:time:format?                                                                                                          | Read system time format | None                                                                                                                                                                                                                                           | Two values, separated by comma,                                                                  |



|     |                                           |                                    |                                                                                |                                  |
|-----|-------------------------------------------|------------------------------------|--------------------------------------------------------------------------------|----------------------------------|
|     |                                           |                                    |                                                                                | 24/12 hours<br>Current time zone |
| 10. | System:time:format<br><boolean>,<numeric> | Set system time format             | Two parameters,<br>separated by comma,<br>24/12 hours<br>Current utc time zone | None                             |
| 11. | System:tbeep?                             | Read the touch beep status         | None                                                                           | 0 disable<br>1 enable            |
| 12. | System:tbeep<br><boolean> on off          | Set the touch beep status          | 0 off disable<br>1 on enable                                                   | None                             |
| 13. | System:pbeep?                             | Read the prompt beep<br>status     | None                                                                           | 0 disable<br>1 enable            |
| 14. | System:pbeep<br><boolean> on off          | Set the prompt beep status         | 0 off disable<br>1 on enable                                                   | None                             |
| 15. | System:orbeep?                            | Read the over range beep<br>status | None                                                                           | 0 disable<br>1 enable            |
| 16. | System:orbeep<br><boolean> on off         | Set the over range beep<br>status  | 0 off disable<br>1 on enable                                                   | None                             |
| 17. | System:stbeep?                            | Read the stable beep<br>status     | None                                                                           | 0 disable<br>1 enable            |
| 18. | System:stbeep<br><boolean> on off         | Set the stable beep status         | 0 off disable<br>1 on enable                                                   | None                             |



|     |                                                 |                                                                           |                                                                                 |                       |
|-----|-------------------------------------------------|---------------------------------------------------------------------------|---------------------------------------------------------------------------------|-----------------------|
| 19. | System: shbeep?                                 | Read the snapshot beep status                                             | None                                                                            | 0 disable<br>1 enable |
| 20. | System: shbeep<br><boolean> on off              | Set the snapshot beep status                                              | 0 off disable<br>1 on enable                                                    | None                  |
| 21. | System:volume?                                  | Read system volume percentage                                             | None                                                                            | Volume percentage     |
| 22. | System:volume <numeric>                         | Set system volume                                                         | Volume percentage                                                               | None                  |
| 23. | System:language?                                | Read current language                                                     | None                                                                            | Current language      |
| 24. | System:language<br><unquostr>[,<boolean>]       | Set current language                                                      | Parameter: language<br>zh-cn<br>Optional: restart or not,<br>restart by default | None                  |
| 25. | System:language:config?                         | Read the list of supported languages                                      | None                                                                            | Language list         |
| 26. | System:language:config<br><quotestr>            | Set the list of supported languages                                       | Language list,<br>separated by comma                                            | None                  |
| 27. | System:brightness?<br>Percentage value          | Read the screen brightness                                                | Percentage or value                                                             | Screen brightness     |
| 28. | System:brightness<br>percentage value,<numeric> | Set the screen brightness<br>Range:<br>Value 200-4096<br>Percentage 0-100 | 1: percentage or value<br>2: brightness                                         | None                  |



|     |                                                    |                                                                                                                                                                                  |                                                                                                                     |                                                                                                                  |
|-----|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
|     |                                                    | When the set value is greater than 4096 or 100%, it will be set to the greatest brightness, when the set value is lower than 200 or 0%, it will be set to the lowest brightness. |                                                                                                                     |                                                                                                                  |
| 29. | System:battery:online?                             | Read the battery online status                                                                                                                                                   | None                                                                                                                | 1 : battery online<br>0 : battery offline                                                                        |
| 30. | System:battery:status?                             | Read the battery status                                                                                                                                                          | None                                                                                                                | 0: battery communication abnormal<br>1: battery communication ok                                                 |
| 31. | System:battery:infomation?                         | Read the current battery level, voltage, current                                                                                                                                 | None                                                                                                                | Current battery level, total level (mah), voltage (v), current (>0 indicates charging, <0 indicates discharging) |
| 32. | Display:acloud:captcha<br>0 1,<unquostr>,<numeric> | Show or close Acloud service verify code                                                                                                                                         | 1:<br>0-close the verify code,<br>1-show the verify code<br>2: string, verify code text<br>3: number, time-out time | None                                                                                                             |

|     |                             |                            |                                                                                                                                           |                                                                                            |
|-----|-----------------------------|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| 33. | System:ble <boolean> on off | Bluetooth on/off           | 1 or on: on<br>0 or off: off                                                                                                              | No return                                                                                  |
| 34. | System:ble:status?          | Read Bluetooth status      | None                                                                                                                                      | 0: unknown;<br>1: booted;<br>2: initialized<br>3: sleep<br>4: broadcasting<br>5: connected |
| 35. | System:ble:info? <unquostr> | Read Bluetooth information | Name: return Bluetooth<br>version information<br>Mac: return Bluetooth<br>mac address<br>Version: return<br>Bluetooth firmware<br>version | See the parameter                                                                          |

Table 32 Data management commands

| No | Commands                                                   | Description       | Parameter                                                                              | Returned value |
|----|------------------------------------------------------------|-------------------|----------------------------------------------------------------------------------------|----------------|
| 1. | Datamanager:count?<br>Leaktest snapshot datalogger psvtest | Read data amount  | Leaktest: leak test<br>Snapshot: snapshot<br>Datalogger: data log<br>Psvtest: psv test | Data amount    |
| 2. | Datamanager:info?                                          | Read data related | 1: leaktest: leak test                                                                 | Information    |



|    |                                                                                   |                                  |                                                                                                                                                              |               |
|----|-----------------------------------------------------------------------------------|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
|    | Leaktest snapshot datalogger psvtest,<numeric>,<numeric>                          | information                      | Snapshot: snapshot<br>Datalogger: data log<br>Psvtest: psv test<br>2: start, start point<br>3: count, length                                                 |               |
| 3. | Datamanager:del<br>leaktest snapshot datalogger psvtest,<unquostr>                | Delete test result               | 1: leaktest: leak test<br>Snapshot: snapshot<br>Datalogger: data log<br>Psvtest: psv test<br>2: the file path that perform the deletion (without quote mark) | None          |
| 4. | Datamanager:length?<br>Leaktest snapshot datalogger psvtest,data image,<unquostr> | Read data length                 | 1: leaktest: leak test<br>Snapshot: snapshot<br>Datalogger: data log<br>Psvtest: psv test<br>2: read data file or image<br>File name (without quote mark)    | Data length   |
| 5. | Datamanager:data?<br>Leaktest snapshot datalogger                                 | Read data in designated location | File name (without quote mark), start point,                                                                                                                 | String format |

|  |                                                        |  |                  |  |
|--|--------------------------------------------------------|--|------------------|--|
|  | r psvtest,data image,<unquotedstr>,<numeric>,<numeric> |  | read data length |  |
|--|--------------------------------------------------------|--|------------------|--|

Table 33 Calibration commands

| No | Commands                                                                                                         | Description                                 | Parameter                                                                                                                                                                                         | Returned value                                                                                                           |
|----|------------------------------------------------------------------------------------------------------------------|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| 1. | Calibration:electricity:data<br>123456,<numeric>,<numeric>,<quotedstr>,<quotedstr>,<numeric>,<numeric>,<numeric> | Write electric calibration data             | 1: 0-linar<br>1-multi-point<br>2: 0-ma measure<br>1-30v measure<br>Calibration point(quoted string, separated by comma)<br>Reference point(quoted string, separated by comma)<br>Year, month, day | None                                                                                                                     |
| 2. | Calibration:electricity:data?<br>123456,<numeric>,<numeric>                                                      | Write electric calibration value            | 1: 0-linar<br>1-multi-point<br>2: 0-ma measure<br>1-30v measure                                                                                                                                   | Multi-point: calibration point list, actual value list, year, month, day<br>Single point: offset value, year, month, day |
| 3. | Calibration:electricity:reset                                                                                    | Reset electric multi-point calibration data | 1: 0-linar<br>1-multi-point                                                                                                                                                                       | None                                                                                                                     |



|    |                                                                                                  |                                          |                                                                                                                                                                               |                                                                                                                                                     |
|----|--------------------------------------------------------------------------------------------------|------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
|    | 123456,<numeric>,<numeric>                                                                       |                                          | 2: 0-ma measure<br>1-30v measure                                                                                                                                              |                                                                                                                                                     |
| 4. | Calibration:barosensor:data? 123456,<numeric>                                                    | Read barometric sensor calibration data  | 0-two points<br>1-offset<br>2-demarcate                                                                                                                                       | With calibration data: standard value 1, measure value 1, standard value 2, measure value 2, year, month, day<br>Without calibration data: no data! |
| 5. | Calibration:barosensor:data 123456,<numeric>,<quoted string>,<quoted string>,<numeric>,<numeric> | Write barometric sensor calibration data | 1: 0-two points<br>1-offset<br>2-demarcate<br>2: standard value(quoted string, separated by comma)<br>3: measure value(quoted string, separated by comma)<br>Year, month, day | None                                                                                                                                                |
| 6. | Calibration:barosensor:reset 123456,<numeric>                                                    | Reset barometric sensor calibration data | 0- Multi-point (reset both two-point and single-point calibration data)                                                                                                       | None                                                                                                                                                |

|  |  |  |                                                                         |  |
|--|--|--|-------------------------------------------------------------------------|--|
|  |  |  | 1- Single-point(reset both two-point and single-point calibration data) |  |
|--|--|--|-------------------------------------------------------------------------|--|

Table 34 HART

| No | Commands                                       | Description                | Parameter                                                                                                                                                                   | Returned value                                                                                                                                                                                      |
|----|------------------------------------------------|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. | Hart:supplymode?                               | Read the power supply mode |                                                                                                                                                                             | 0-ipur internal power and internal resistance;<br>1-eper external power and external resistance;<br>2-epir external power and internal resistance;<br>3-iper internal power and external resistance |
| 2. | Hart:supplymode<br>ipur eper epir iper 0 1 2 3 | Set the power supply mode  | 0-ipur internal power and internal resistance;<br>1-eper external power and external resistance;<br>2-epir external power and internal resistance;<br>3-iper internal power | -                                                                                                                                                                                                   |



|    |                                                            |                               |                                                                                                                                                                                      |                                                                                                                                                                          |
|----|------------------------------------------------------------|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    |                                                            |                               | and external resistance                                                                                                                                                              |                                                                                                                                                                          |
| 3. | Hart:search<br>start stop zero[,<numeric>][,<br><numeric>] | Hart search;                  | Start: start searching;<br>Stop: stop searching;<br>Zero: search only zero<br>Note: the start and stop<br>can be added later in<br>the address range<br>parameter, such<br>as "0,15" | -                                                                                                                                                                        |
| 4. | Hart:devices?                                              | Search device                 | -                                                                                                                                                                                    | List of devices searched (address<br>and device type)                                                                                                                    |
| 5. | Hart:connect<address>                                      | Connect to searched<br>device | Address                                                                                                                                                                              | -                                                                                                                                                                        |
| 6. | Hart:onlydevice:process?                                   | Get process option            | -                                                                                                                                                                                    | Pv: process variable;<br>Ao: analog current;<br>%: scale percentage;<br>Sv: second variable;<br>Tv: third variable;<br>Fv: fourth variable;<br>Loopcurrent: loop current |
| 7. | Hart:onlydevice:process:valu<br>e?                         | Get process value             | Pv: process variable;<br>Ao: analog current;                                                                                                                                         | Null: current variable<br>Or designated value                                                                                                                            |



|     |                                                        |                              |                                                                                                                                                                          |                                                             |
|-----|--------------------------------------------------------|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
|     | [pv ao % sv tv fv loopcurrent]                         |                              | %: scale percentage;<br>Sv: second variable;<br>Tv: third variable;<br>Fv: fourth variable;<br>Loopcurrent: loop current                                                 |                                                             |
| 8.  | Hart:onldevice:process<br>pv ao % sv tv fv loopcurrent | Switch process value         | Pv: process variable;<br>Ao: analog current;<br>%: scale percentage;<br>Sv: second variable;<br>Tv: third variable;<br>Fv: fourth variable;<br>Loopcurrent: loop current | -                                                           |
| 9.  | Hart:onldevice:parameter?<br><name>                    | Read the parameter           | Name: parameter name(quoted string)                                                                                                                                      | Corresponding value                                         |
| 10. | Hart:onldevice:parameter<n<br>ame>,<"value">           | Set the parameter            | Name: parameter name (quoted string)<br>Value: value(quoted string)                                                                                                      | -                                                           |
| 11. | Hart:onldevice:info?                                   | Read hart device information | None or <parameter name>                                                                                                                                                 | Return all parameter values of the device when there are no |



|     |                         |                                                                                                                                          |                                                                                                                                                                                                       |                                                                                                                                                               |
|-----|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
|     |                         |                                                                                                                                          | Name list:<br>Tag<br>Manufacturer<br>Devicetype<br>Deviceid<br>Writeprotect<br>Date<br>Message<br>Descriptor<br>Finalassemble<br>Preambles<br>Universalrev<br>Hardwarerev<br>Softwarerev<br>Devicerev | parameters;<br>Return the corresponding<br>parameter value for designated<br>parameter name                                                                   |
| 12. | Hart:onlydevice:sensor? | Return all parameter values<br>for the sensor or return the<br>corresponding values<br>based on the name of the<br>designated parameters | None or <parameter<br>name><br>Name list:<br>Sn<br>Unit<br>Lrl<br>Url                                                                                                                                 | Return all parameter values of the<br>sensor when there are no<br>parameters;<br>Return the corresponding<br>parameter value for designated<br>parameter name |



|     |                            |                                                                                                                              |                                                                                             |                                                                                                                                                        |
|-----|----------------------------|------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
|     |                            |                                                                                                                              | Minspan                                                                                     |                                                                                                                                                        |
| 13. | Hart:onlydevice:output?    | Return all parameter values of hart output or return the corresponding values based on the name of the designated parameters | None or <parameter name><br>Name list:<br>Unit<br>Lrv<br>Urv<br>Damping<br>Transferfunction | Return all parameter values of the hart output when there are no parameters;<br>Return the corresponding parameter value for designated parameter name |
| 14. | Hart:onlydevice:connected? | Get the hart device connect condition                                                                                        | None                                                                                        | 1 value<br>1=connected, 0=unconnected                                                                                                                  |

Table 35 scpi unit id list

| Unit id | Unit       |
|---------|------------|
| 2000    | Text unit  |
| 32767   | Blank unit |
|         |            |
| 1211    | Ma         |
| 1212    | Ma         |
| 1209    | A          |
| 1240    | V          |



|      |                     |
|------|---------------------|
| 1241 | Mv                  |
| 1281 | $\Omega$            |
| 1284 | K $\omega$          |
| 1283 | M $\omega$          |
| 1000 | K                   |
| 1001 | $^{\circ}\text{C}$  |
| 1002 | $^{\circ}\text{F}$  |
| 1003 | $^{\circ}\text{r}$  |
| 999  | $^{\circ}\text{re}$ |
| 1005 | $^{\circ}$          |
| 1342 | %                   |
|      |                     |
| 1133 | Kpa                 |
| 1130 | Pa                  |
| 1131 | Gpa                 |
| 1132 | Mpa                 |
| 1134 | Mpa                 |
| 1135 | Mpa                 |
| 1136 | Hpa                 |



|      |                     |
|------|---------------------|
| 1137 | Bar                 |
| 1138 | Mbar                |
| 1139 | Torr                |
| 1140 | Atm                 |
| 1141 | Psi                 |
| 1142 | Psia                |
| 1143 | Psig                |
| 1144 | Gf/cm <sup>2</sup>  |
| 1145 | Kgf/cm <sup>2</sup> |
| 1147 | Inh2o@4°c           |
| 1148 | Inh2o@68°f          |
| 1150 | Mmh2o@4°c           |
| 1151 | Mmh2o@20°c          |
| 1153 | Fth2o@4°c           |
| 1154 | Fth2o@68°f          |
| 1156 | Inhg@0°c            |
| 1158 | Mmhg@0°c            |
| 2001 | Mtorr               |
| 2002 | Lb/ft <sup>2</sup>  |



|      |                    |
|------|--------------------|
| 2003 | Tsi                |
| 2004 | Psf                |
| 2005 | Inh2o@60°f         |
| 2006 | Fth2o@60°f         |
| 2007 | Cmh2o@4°c          |
| 2008 | Mh2o@4°c           |
| 2009 | Cmhg@0°c           |
| 2010 | Mhg@0°c            |
| 2011 | Kgf/m <sup>2</sup> |

Table 36 error definition

| No                     | Error code | Error description          | Definition                                                                    |
|------------------------|------------|----------------------------|-------------------------------------------------------------------------------|
| 1                      | 0          | No error                   | No error                                                                      |
| <b>Command error</b>   |            |                            |                                                                               |
| 2                      | 120        | Command parameter error    | Command parameter error                                                       |
| 3                      | -108       | Parameter not allowed      | Too many parameters, or the command without parameters contains parameters    |
| 4                      | -109       | Missing parameter          | Parameter missed                                                              |
| 5                      | -110       | Command header error       | Command header error                                                          |
| 6                      | -114       | Header suffix out of range | Command header suffix is out of range                                         |
| 7                      | -123       | Numeric overflow           | Number overflow, the absolute value of the number exponent is greater than 43 |
| 8                      | -151       | Invalid string data        | Invalid string, such as mismatched quotes                                     |
| 9                      | -171       | Invalid expression         | Invalid expressions, such as mismatched parentheses                           |
| <b>Execution error</b> |            |                            |                                                                               |
| 10                     | -200       | Execution error            | Execution error                                                               |
| 11                     | -221       | Settings conflict          | Settings conflict                                                             |
| 12                     | -222       | Data out of range          | Parameter out of the command's range                                          |
| 13                     | -223       | Too much data              | Too much data beyond processing capacity                                      |
| 14                     | -224       | Illegal parameter value    | Illegal parameter value                                                       |
| 15                     | -230       | Data corrupt or stale      | Invalid data, or the data is being read, and no valid data has been obtained  |



| No | Error code | Error description               | Definition                                                                                                                      |
|----|------------|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| 16 | -240       | Hardware error                  | Hardware error                                                                                                                  |
| 17 | -256       | File name not found             | File name not found                                                                                                             |
| 18 | -282       | Illegal program name            | Illegal program name                                                                                                            |
| 19 | 220        | Measure error                   | Measure error                                                                                                                   |
| 20 | 221        | Failed to set measure function  | Failed to set measure function                                                                                                  |
| 21 | 222        | Failed to read measure value    | Failed to read measure value                                                                                                    |
| 22 | 223        |                                 |                                                                                                                                 |
| 23 | 224        |                                 |                                                                                                                                 |
| 24 | 240        | Control error                   | Control error                                                                                                                   |
| 25 | 241        |                                 |                                                                                                                                 |
| 26 | 242        |                                 |                                                                                                                                 |
| 27 | 243        |                                 |                                                                                                                                 |
| 28 | 260        | Calibration error               | Calibration error                                                                                                               |
| 29 | 261        | Calibration secured             | Calibration secured, cannot perform calibration                                                                                 |
| 30 | 262        | Invalid calibration secure code | Invalid calibration secure code                                                                                                 |
| 31 | 263        | Missing calibration value       | During current/voltage calibration, this error will occur if the calibration value is set without setting the calibration point |
| 32 | 264        | Missing calibration data        | This error occurs when the calibration point is set continuously, but the calibration value is not set                          |



| No                          | Error code | Error description                  | Definition                                                                                               |
|-----------------------------|------------|------------------------------------|----------------------------------------------------------------------------------------------------------|
| 33                          | 265        | Failed to set calibration function | Failed to set calibration function                                                                       |
| 34                          | 266        | Calibration data is not enough     | When saving the calibration data, if the calibration data does not reach 3 points, this error will occur |
| 35                          | 271        | Setion_name_not_found              | Setion name not found                                                                                    |
| 36                          | 272        | Key_name_not_found                 | Key name not found                                                                                       |
| 37                          | 291        | Update secured                     | Update secured                                                                                           |
| 38                          | 292        | Invalid update secure code         | Invalid update secure code                                                                               |
| 39                          | 293        | Not found the service pack         | Not found the service pack                                                                               |
| 40                          | 294        | The service pack unavailable       | The service pack unavailable                                                                             |
| 41                          | 295        | Appupdate not found                | Appupdate.exe not found                                                                                  |
| <b>Device related error</b> |            |                                    |                                                                                                          |
| 42                          | -310       | System error                       | System error                                                                                             |
| 43                          | -311       | Memory error                       | Memory error                                                                                             |
| 44                          | -350       | Queue overflow                     | Queue overflow                                                                                           |
| 45                          | -360       | Communication error                | Communication error                                                                                      |
| 46                          | 301        | Internal module is not connected   | Internal module is not connected                                                                         |
| 47                          | 302        | External module is not connected   | External module is not connected                                                                         |
| 48                          | 303        | Supply module is not connected     | Supply module is not connected                                                                           |
| 49                          | 304        | Vacuum module is not connected     | Vacuum module is not connected                                                                           |
| 50                          | 361        | Open wlan failed                   | Open wlan failed                                                                                         |



| No | Error code | Error description                             | Definition                                    |
|----|------------|-----------------------------------------------|-----------------------------------------------|
| 51 | 362        | Set wlan address mode failed                  | Set wlan address mode failed                  |
| 52 | 363        | Set wlan address failed                       | Set wlan address failed                       |
| 53 | 364        | Communication port to wifi module is not open | Communication port to wifi module is not open |
| 54 | 365        | Wlanisnotconnected                            | Wlan is not connected                         |