

# **CWV SERIES**

### **Environmental CO, Sensors**






## **NOTICE**

- This product is not intended for life or safety applications.
- Do not install this product in hazardous or classified locations.
- Read and understand the instructions before installing this product.
- Turn off all power supplying equipment before working on it.
- The installer is responsible for conformance to all applicable codes.

No responsibility is assumed by Veris Industries for any consequences arising out of the use of this material.

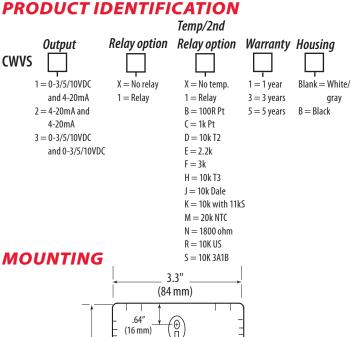

VIIIVG	J = TOK JATO		
	3.3" (84 mm)		
1	(16 mm) (1)	-	
4.6" (116 mm)		+	
		2.2" (54 mm)	
_\	16"	.46"	
	₹ 1.6"	(12 mm)	

#### **SPECIFICATIONS**


Input Voltage	20 to 30VDC, 24VAC		
Analog Output #1	4-20mA (clipped & capped) or 0-3VDC/0-5VDC/0-10VDC		
	(jumper selectable)		
Analog Output #2	4-20mA (clipped & capped) or 0-3VDC/0-5VDC/0-10VDC		
	(jumper selectable)		
Sensor Current Draw	200mA Maximum		
Operating Humidity Range	0-95% RH (noncondensing)		
Operating Temperature Range	0° to 50°C (32° to 122°F)		
Housing Material	High impact ABS plastic		
Relay Contacts (optional)	Form C (SPDT) 1A@30VDC, resistive; 30W max.		
<u>CO2 Transmitter:</u>			
Sensor Type	Non-dispersive infrared (NDIR), diffusion sampling		
Measurement Range	0-2000 ppm		
Accuracy	$\pm 40$ ppm $\pm 8.5\%$ of measured value		
Repeatability	$\pm 30$ ppm $\pm 4.5\%$ of measured value		
Response Time	<60 seconds for 90% step change		

EMC Conformance: EN 61000-6-3:2007+A1:2011 Class B, EN 61000-6-1:2007 EMC Special Note: Connect this product to a DC distribution network or an AC/DC power adaptor with proper surge protection (EN 61000-6-1:2007 specification requirements). RTD/Thermistors are not compensated for internal heating of product.

#### INSTALLATION


- 1. Select a mounting location with good air circulation. For room installations, mount the sensor 4 ½ feet (1.4 m) above the floor.
- 2. Remove the cover. Flush mount the CWV on a wall or on a standard US or European single gang junction box.
- 3. Wire the device. Refer to the wiring diagram.
- 4. Install the cover.

#### **DIMENSIONS**

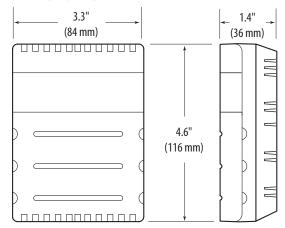



#### WIRING

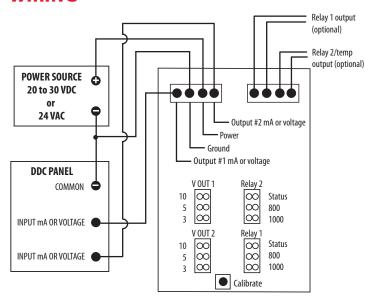

### CONFIGURATION

- 1. If so equipped, select the voltage outputs by jumpering the V Out 1 and/or V Out 2, as indicated at left (10=0-10VDC, 5=0-5VDC, 3=0-3VDC).
- 2. If so equipped, select the relay mode by jumpering the Relay 1 and/or Relay 2 function blocks, as indicated at left (Status=sensor condition, 800=800ppm CO<sub>2</sub> setpoint, 1000=1000ppm CO<sub>2</sub> setpoint).

#### **LED INDICATION**

Green - Power applied to device

Red - Error condition for false reading,  $CO_2$  concentration > 10,000 ppm, insufficient power, or improperly calibrated sensor.

The red LED briefly illuminates for approximately two seconds when the CWV device is initially powered. It then deluminates, indicating normal sensor operation.

### **OUTPUT SCALING**

	CO <sub>2</sub> PPM	0-3 Volt Output	0-5 Volt Output	0-10 Volt Output	mA Output
Outside	300-500	0.45 to 0.75	0.75 to 1.25	1.5 to 2.5	6.4 to 8
Over Ventilated	Under 600	Under 0.9	Under 1.5	Under 3	Under 8.8
Ideal Ventilation	600-900	0.9 to 1.35	1.5 to 2.25	3 to 4.5	8.8 to 11.2
Under Ventilated	Over 900	Over 1.35	Over 2.25	Over 4.5	Over 11.2

#### **CALIBRATION PROCESS**

- 1. Remove the cover and connect a hose to the plastic port located on the sensing module.
- 2. Begin nitrogen gas flow (0 ppm CO<sub>2</sub>). Use a flow rate of 0.3 to 0.5 liter/minute, using the Veris AAO1 Calibration Kit or equivalent.
- 3. Push and hold down the calibration button for 8 seconds.
- 4. Release the calibration button and verify that the analog outputs are at either 4 mA or 0 V. If the outputs are not showing these values, repeat steps 3 and 4.

STEP 1
Calibration Port

Regulator Valve

NITROGEN GAS

Connect hose here

Veris AA01 Calibration Kit

(or equivalent)

<u>STEP 3</u> Push and hold calibration button for 8 seconds



Note: Do not breathe on the CO<sub>2</sub> sensor during the calibration process.