

User's Guide



Thank you!

Thank you for purchasing a Mark-10 Series ES Force Measurement Test Stand. We are confident that you will get many years of great service from this product.

Mark-10 test stands are ruggedly built for many years of service in laboratory and industrial environments.

This User's Guide provides unpacking, setup, and operator instructions, along with dimensions and specifications. For additional information or answers to your questions, our technical support and engineering teams are eager to help you.

Thank you again for your purchase and happy testing!

TABLE OF CONTENTS

ES0	5	2
1	LIST OF INCLUDED ITEMS	2
2	OPTIONAL EQUIPMENT	2
3	UNPACKING AND SETTING UP	3
4	OPERATION	3
5	SPECIFICATIONS	4
6	DIMENSIONS	4
ES1	0 & ES20	5
1	LIST OF INCLUDED ITEMS	5
2	OPTIONAL EQUIPMENT	6
3	UNPACKING AND SETTING UP	6
4	OPERATION	7
5	SPECIFICATIONS	7
6	DIMENSIONS	8
ES3	0	9
1	LIST OF INCLUDED ITEMS	9
2	OPTIONAL EQUIPMENT	10
3	UNPACKING AND SETTING UP	10
4	OPERATION	10
5	SPECIFICATIONS	10
6	DIMENSIONS	11



ES05

1 LIST OF INCLUDED ITEMS

Quantity	Item	
4	Thumb screws for gauge mounting	
1	Allen wrench set	

2 OPTIONAL EQUIPMENT

2.1 AC1060 - Base Plate

Steel base plate has 25 #10-32 threaded holes for fixture mounting.



3 UNPACKING AND SETTING UP

- 1. Carefully unpack the stand and inspect for any damage. Inspect the contents to ensure that you have received a test stand complete with all accessories see **List of Included Items**.
- 2. Place the stand on a firm, flat and level working surface free from vibration to ensure accurate readings.
- 3. Save original packaging materials in case future transportation is required.

4 OPERATION

Mark-10 force gauges with capacities up to 500 lbF [2,500 N] can be mounted directly to the stand without adapters. Mount the gauge using the thumb screws provided.

The loading mechanism can be repositioned along the column by loosening the wing nut on the left side of the housing, repositioning the mechanism as desired, and tightening the wing nut, as illustrated in Fig. 1.

To initiate a compression test, push down on the lever. Note that the lever is spring loaded. To prevent damage to the ES05, keep your hand on the lever until it returns to its original position.

Install the necessary attachments and make sure they are secure, safe to operate, and set up properly for your sample. Then zero out the force gauge and begin operation.

To maintain smooth functioning of the stand, avoid overloads.



Fig. 1
Lever mechanism can be repositioned along the column.

If the optional base plate has been ordered, install it by tightening the four screws provided, as illustrated in Fig. 2.

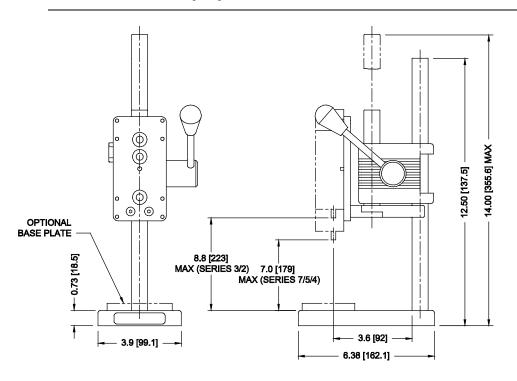



Fig. 2
Optional base plate can be installed with four screws.

5 SPECIFICATIONS

Maximum force	30 lbF [150 N], compression only	
Maximum travel	1.5" [38 mm]	
Weight	6 lb [2.7 kg]	

6 **DIMENSIONS** in [mm]



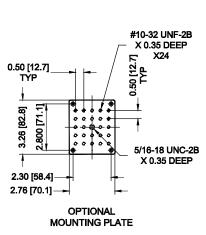

ES10 & ES20

1 LIST OF INCLUDED ITEMS

Quantity	Item
1	Lever (ES10) or handwheel (ES20)
4	Thumb screws for gauge mounting
1	Allen wrench set





2 OPTIONAL EQUIPMENT



2.1 ES001 – dial indicator kit

Measures up to 1" of travel, with 0.001" resolution.



2.2 ES002 - digital indicator kit

Measures up to 1" / 25 mm of travel, with 0.0005" / 0.01 mm resolution. Includes zero and in/mm selector buttons.



2.3 AC1060 - Base plate with threaded holes

Optional mounting plate contains a matrix of threaded holes for grip and fixture mounting.

3 UNPACKING AND SETTING UP

- 1. Carefully unpack the stand and inspect for any damage. Inspect the contents to ensure that you have received a test stand complete with all accessories see **List of Included Items**.
- 2. ES10: Install the loading lever into the hub.
 - ES20: Install the handwheel at the end of the lead screw, then tighten the set screw.
- 3. Place the stand on a firm, flat and level working surface free from vibration to ensure accurate readings. If preferred, the test stand can be secured to a work bench with two screws or bolts through the two clearance holes in the base see **Operation** section for further details.

4 OPERATION

Place the stand on a clean, flat, and level surface. It is recommended that the stand be mounted to the surface with two 5/16 screws through the clearance hole in the base.

Install a force gauge onto the gauge plate with four thumb screws. Mark-10 force gauges with capacities up to 500 lbF / 2,500 N mount directly to the stand without adapters.

The loading lever on the ES10 can be adjusted to allow for ease of operation. Reposition the lever using one of the three tapped holes located in the hub.

If the optional dial indicator kit (ES001) or digital indicator kit (ES002) is purchased separately, it can be installed using the hardware provided.

Install the necessary attachments and make sure they are secure, safe to operate, and set up properly for your sample. Then zero out the force gauge and begin operation.

To maintain smooth functioning of the stand, avoid overloads.




5 SPECIFICATIONS


	ES10	ES20	
Maximum force	100 lbF [500 N]		
Maximum travel	9" [229 mm]		
Loading method	Lever (can be placed in 3 positions for ease of operation)	Top-mounted handwheel	
Travel rate	1.050" [26.7 mm] / lever rev.	0.083" [2.1 mm] / wheel rev.	
Weight (test stand, only)	10 lb [4.5 kg]		

6 **DIMENSIONS** in [mm]

ES10

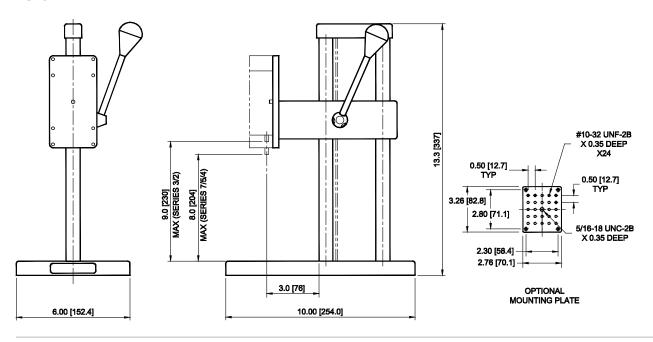

ES20

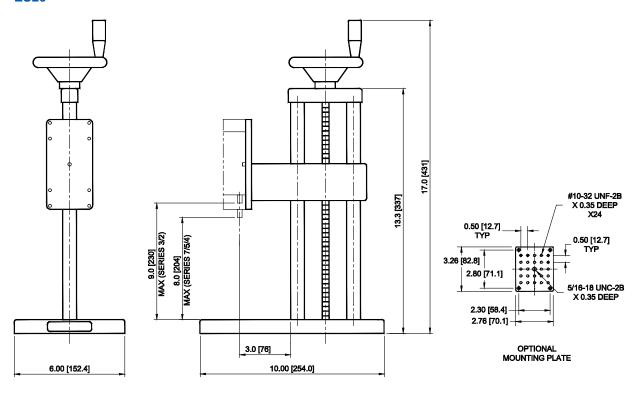



ES30

1 LIST OF INCLUDED ITEMS

2 OPTIONAL EQUIPMENT

2.1 ESM001 - Digital Travel Display Kit

6" [150 mm] travel, 0.0005" [0.01 mm] resolution, SPC output for automated data collection. Requires travel stops kit. To output data to a PC via USB, use communication adapter part no. MU100 and AC1105 cable.



3 UNPACKING AND SETTING UP

- 1. Carefully unpack the stand and inspect for any damage. Inspect the contents to ensure that you have received a test stand complete with all accessories see **List of Included Items**.
- 2. Place the stand on a firm, flat and level working surface free from vibration to ensure accurate readings.
- 3. Save original packaging materials in case future transportation is required.

4 OPERATION

Place the stand on a clean, flat, and level surface. It is recommended that the stand be mounted to the surface with two 5/16 screws through the clearance hole in the base.

Install a force gauge onto the gauge plate with four thumb screws. Mark-10 force gauges with capacities up to 500 lbF / 2,500 N mount directly to the stand without adapters.

Install the necessary attachments and make sure they are secure, safe to operate, and set up properly for your sample. Then zero out the force gauge and begin operation.

The base is removable so that the stand may be used as a component of a larger testing system. Proper care should be taken during installation to avoid injury.

To maintain smooth functioning of the stand, avoid overloads.

5 SPECIFICATIONS

Maximum force	200 lbF [1 kN]	
Maximum travel	13" [330 mm]	
Travel rate	0.05" [1.27 mm] / handwheel rev.	
Weight (test stand, only)	17 lb [7.7 kg]	



6 **DIMENSIONS** in [mm]

