

DIGITAL LIGHT METER

# LIGHT METER SERIES

# **KEW 5204**



**DISTRIBUTOR** 

Kyoritsu reserves the rights to change specifications or designs described in this manual without notice and without obligations.

### 1. SAFETY WARNINGS

This instruction manual contains warnings and safety rules which must be observed by the user to ensure safe operation of the instrument and to retain it in safe condition.

#### **⚠ WARNING**

- Read through and understand instructions contained in this manual before starting using the instrument.
- Save and keep the manual handy to enable quick reference whenever necessary

The symbol riangle indicated on the instrument means that the user must refer to related parts of the manual for safe operation of the instrument. Be sure to carefully read the instructions following each  $\Delta$  symbol in this manual.

- ▲ DANGER : is reserved for conditions and actions that are likely to
  - cause serious or fatal injury.
- ▲ WARNING: is reserved for conditions and actions that can cause serious or fatal injury
- ⚠ CAUTION : is reserved for conditions and actions that can cause


#### minor injury or instrument damage.

#### **⚠ WARNING**

Do not install substitute parts or make any modification to the instrument. Return the instrument to Kyoritsu or your distributor for repair or re-calibration.

### **⚠ CAUTION**

- Do not expose the instrument to the direct sun, extreme temperatures
- ●This instrument isn't dust & water proofed. Keep away from dust and water. ●Be sure to set the Function Selector Switch to the "OFF" position after
- use. When the instrument will not be used for a long period of time, place it in storage after removing the batteries.
- Use a damp cloth and detergent for cleaning the instrument. Do not use abrasives or solvents.
- The instrument should be calibrated once a year or so for the accurate measurement

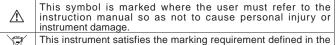

WEEE Directive. This symbol indicates separate collection for

# 5. Measurement

### 5-1 Zero adjust

Please perform zero adjustment before measurement.

electrical and electronic equipment.

Press 0 ADJ button with the Lens Protecting Cover attached to the Light

Sensing Probe.
"CAP-" will auto-appear on the LCD display. After "CAL-" appears, the meter enters the automatic zero adjustment. When automatic zero adjustment is completed, "CAL-" disappears and "0.0"appears. After confirming the "0.0" display, remove the cap to start measuring.


If "ERR1" appears, check the cap to make sure it is on properly.

After the measurement has been completed, press the power button again to turn off the power, and cover the light-detecting surface with the cap for protecting against stray light.

### 5-2 Measurement

Place the light sensing probe parallel to the measuring object and measure it. At this time, please be careful that your own shadow does not hit the sensing probe.

The light sensing probe can be fixed on the meter parallel or perpendicular to the LCD Display. Or it may be detached from the unit to

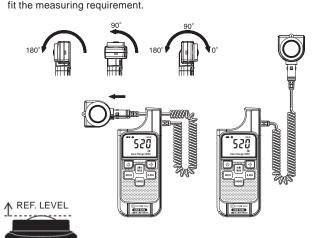

### ■Wide Range 0.1~199900 lux

MAX/MIN function

Automatic Zero Adjust function

Large LCD Display with Backlight

# 3. Name of Parts and Position/Operation

①Lens Protecting Cover


This is used to protect the photocell from scratching and create complete dark environment for the meter to perform dark current calibration.

②Light Sensing Probe/Photocell

③LČD Display

Power button

Push this button to turn on the meter. Please push the button again to turn it off. The unit will automatically turn itself off after 30 minutes if no key operation. To disable the automatic power off function,

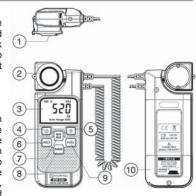

turn the meter off, push and keep holding button, then push power button to turn on.

⑤ Backlight button

Push this button to turn on and off the LCD backlight. The backlight will be automatically off after 30 seconds to save battery power.

**6**HOLD button

The user may hold the present and keep it on the LCD display by pressing the button.

Max/Min button

Push this button to set the meter working under MAX/MIN mode. By pushing this button, the user may swap the LCD reading among current, maximum and minimum reading. Push and hold this key for 3 seconds to exit MAX/MIN mode.

®Range selector button.

The user may use this button to select the preferred measuring or automatically selected by the meter. The available ranges are: AUTO 200, 2000, 20000, 200000 lx

®Battery cabinet cover When battery capacity segment is less than one, the user should replace the battery. The battery cabinet can be opened with a screw driver and two AA type batteries should be installed.



### 4. Specifications

MODEL	KEW 5204							
Light detector	Silicon photo diode							
Measuring Range	0.0∼199,900 lx							
Range	199.9/1,999/19,990/199,900 lx							
Resolution	0.1 lx							
Accuracy	±4%rdg±5dgt (23°C±2°C)							
Angle deviation from cosine characteristics	10° ±1.5% 30° ±3% 60° ±10% 80° ±30%							
Temperature characteristics	±5 % (at 23°C reference and a range of 0 to 40°C)							
Relative spectral sensitivity characteristics	Deviation from spectral luminous efficiency:9% or less							
Response time	Auto range:5s or less Manual range:2s or less							
Auto power off	30 min.							
Dimensions	169(L)x63(W)x37(D)mm							
Weight	210g approx							
Power source	R6(AA)(1.5V) x 2							
Operation Temperature/ Humidity	0°C~40°C,80%RH or less (without condensation)							
Storage Temperature/ Humidity	-10°C~60°C,70%RH or less (without condensation)							
Continuous measuring time	Approx. 80 hours							
Applicable Standards	JIS C 1609-1:2006 IEC61326							
Accessories	Carrying case Instruction Manual R6(AA)(1.5V)×2							

## ADEQUATE LIGHT LEVELS FOR YOUR WORKING OR AT YOUR WORK AREAS.

( IIC 70440 2040)

													(JIS Z9110-2010)						
LUXES (Ix)	3,0	00 2,0	00 1,	500 1,	000	750	50			00 1	50 1	00 7	75 !	50	30	20	15	10	7
OFFICE					Entrance Director ro		r (allie)	nquiry office oom Night-duty ro	oom	Stair			Indoor eme	rgency					
						Council room Electronic con Reception roo Guard station		nputer room m	Library, Tear Dressing roo Toilet, lavato	oom om ory	Warehouse,	Lift, Passage	staircase	,					
FACTORY	_	Extra fine visual work			Design room Drawing room			—	Control room Electric room Air condition room, lavato	n .	Entrance Passage Pa Warehouse	th	Indoor emergency staircase						
					Drawing r	oom	1	Classroom, I	Faculty room, . Gvmnasium	ĺ									
SCHOOL						Electro Experi Readir	ng class onic con mental ng room care roo	nputer room laboratory	Auditorium, room Locker room lavatory, Toil		Passage			-					
HOSPITAL	_	Operating roo				Consultation room Nurse station Pharmacist office Pharmacist's office General examination room Physiological examinatior room, Radioisotope room Funeral chapel			Changing room, lavatory		Ward		Emergency	staircase					
							F   E   N	K-ray room Physiotherap Exercise ma Night-duty ro Endoscopy ro luoroscopy	oom room, X-ray room	_		Ophthalmic	dark room		_				
STORE	Most important part of display			Lift lobby, Esca			Negatiation room		pom et Passage, Re		esting room	ing room							
					Register, F	ii, rackayiiiy stariu													
RESTAURANT	_					Cookro Dining Counte	oom table	100000	Waiting room Guest room lavatory, Toil	n	Porch, Pass	age		-					
THEATRE CONCERT HALL						Ticket	office		Spectator se Electric roon Mechanical lavatory, Toil	n room	Entrance Resting roor Projection ro Passage	n iom				ing room	Projection		
								Stall, Green Monitoring re		oom Stair						(during performance)		(during performance)	
INN, HOTEL					Front desi Counter, 0	Office	0	Carriage por Dining room	rch	Stair		Important pa	arts of garder	1					
	_					Cuisin			Banqueting Lobby, lavate	hall, Salle ory, Toilet	Game room, Entrance, Pa Bathroom Undressing	•							
BEAUTY SALON				Hair dressir	ng, Hair dyei	ng Hair cu Dressi	ut, Shav	ing		Stair			7						
BARBAR SHOP				Hair set, Ma	ake-up	Diessi		Register	Toilet inside	the shop	Passage								