

THREE-PHASE POWER QUALITY ANALYZER

PowerPad[®] Model 3945-B

Display and record waveforms, transients, trend data and events simultaneously!



- ▶ Display real-time color waveforms
- ▶ Direct access keys to display waveforms, transients, harmonic bargraphs, events, trend recordings, power statistics and much more
- ▶ Color-coded voltage and current inputs for each phase
- ▶ Compact size, rugged construction with over-molded protective rubber housing stands up to rigorous field use
- ▶ 1/4 VGA (320 x 240) color LCD
- ▶ True RMS single-, two- and three-phase measurements, plus DC
- ▶ Includes DataView[®] software for data storage, analysis and report generation

FEATURES

- ▶ True RMS single-, two- and three-phase measurements at 256 samples/cycle, plus DC
- ▶ Real-time color waveforms
- ▶ Easy-to-use on-screen setup
- ▶ Automatic current probe recognition and scaling
- ▶ True RMS voltage and current measurement
- ▶ Measures DC volts, amps and power
- ▶ Display and capture voltage, current and power harmonics to 50th order, including direction, in real time
- ▶ Capture transients down to 1/256th of a cycle
- ▶ Phasor diagram display
- ▶ Peak voltage and current
- ▶ Nominal frequency from 40 to 70Hz
- ▶ VA, VAR and W per phase and total
- ▶ kVAh, VARh and kWh per phase and total
- ▶ Neutral current display
- ▶ Crest factors for current and voltage
- ▶ Transformer K-factor display
- ▶ Power Factor, displacement PF display
- ▶ Captures up to 50 transients
- ▶ Short-term flicker display
- ▶ Phase unbalance (current and voltage)
- ▶ Harmonic Distortion (total and individual) from 1st to 50th
- ▶ Alarms, surges and sags
- ▶ Records date and characteristics of disturbances
- ▶ Immediate printout directly to a printer
- ▶ Screen snapshot function captures waveforms or other information on the display
- ▶ Optically isolated RS-232 communication port
- ▶ Includes DataView[®] software for data storage, real-time display, analysis and report generation
- ▶ EN 61010, 600V Cat. IV



Tilt-out stand facilitates bench top operation for convenient viewing of display.

Wouldn't it be nice if you could look inside your electrical system and see what's going on? Troubleshooting would be so much easier if you could see the volts, amps and harmonic content in real time and take pictures to document and analyze. Now you can do just that and more with AEMC's PowerPad[®]. The full color graphical display lets you see and analyze each signal clearly. Its high speed sample rate, at 256 samples per cycle, provides excellent fidelity in reproducing waveforms and capturing transients that happen as fast as 62.5 μ s.

PowerPad[®]'s 4MB of memory is conveniently partitioned to let you store four different types of data, synchronized or independent of each other. You can store up to 12 screen snapshots, up to 50 captured transients that contain four cycles for each active input, and 4096 alarm events. You can also record trend data for days, weeks or even months.

Six direct access function buttons quickly let you see:

Waveforms – Display Volts, Amps, THD and Crest Factor by phase or for all phases. You can display all the voltage inputs on one screen, phase-to-phase or phase-to-neutral. Real-time phasor diagrams can be displayed for volts and amps, also by phase or for all phases including phase unbalance.

Harmonics – Display Harmonics out to the 50th for Volts, Amps and VA. Individual Harmonics are displayed as a percentage and in real value. Harmonic direction and sequencing can also be displayed.

Transients – Set, capture and display transients. You select the threshold and the number of transients to capture. PowerPad[®] then captures four waveforms for each transient; the triggering waveform as well as one pre- and two post-triggered waveforms. As many as 1200 waveforms can be captured.

APPLICATIONS

- ▶ Verification of power distribution circuits
- ▶ Measurement and recording of power system quality (kW, VA, VAR)
- ▶ Energy metering (kVAh, VARh, kWh)
- ▶ In plant troubleshooting of power distribution panels and individual machinery
- ▶ Monitor pad mount transformers
- ▶ Determine harmonic problems originating from source or load
- ▶ Monitor phase unbalances
- ▶ Determine transformer K-factor
- ▶ And much, much more



Measure all three phases of voltage and current simultaneously.



Power quality analysis on a three-phase panel using the AmpFlex® flexible current probes.

Alarms Events – Configure, capture and display up to 4096 alarm events based on up to ten different trigger variables. Each captured alarm event will show the phase, the variable and the value as well as the time and duration.

Record – Set up and record trend data at selectable rates from one sample/second to one sample every 15 minutes on as many as 22 different variables for all phases. See the recorded data on screen, zoom in and out and scroll the time axis to analyze the data.

Power & Energy – Display Watts, VARs and VA by phase and total. Accumulate totals and see whether the energy is inductive or capacitive.

If you're not convinced yet, consider these other functions and features:

- PowerPad® uses current probes that auto configure the instrument's current channel for range and scale.
- PowerPad® comes with an online help system that gives you clear information about the functions and buttons for each screen.
- PowerPad® comes with all options and accessories needed to capture, display, download, analyze and store data. No add-on accessories are required that increase your cost. PowerPad® is supplied with AEMC's DataView® graphing/analysis software package at no additional cost (a \$395.00 value). The software lets you completely configure and capture data in real time on your computer. You can download all stored data from PowerPad® and print reports from a library of pre-designed templates or create your own custom templates and reports.



In addition to all of this, PowerPad® speaks six different languages. At the press of a button, information can be displayed in English, Spanish, French, Portuguese, Italian and German.

Arrange for a demonstration today!

FUNCTIONAL DISPLAYS

A sampling of PowerPad®'s data and waveform screen displays – available at the press of a button.


Configuration

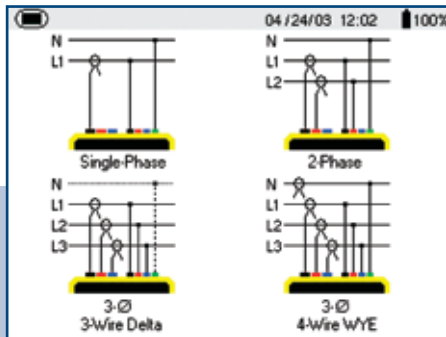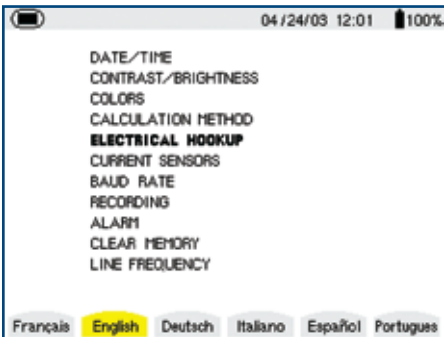

PowerPad®'s direct access system lets you see the important information you need at the press of a button. Quickly review waveforms, harmonics, transients, alarms and recorded data on screen. Setup is straightforward using a combination of graphic and text prompts to quickly configure PowerPad® for the job site.


Configuration is simple and straightforward. Simply press the setup button and select the function you wish to configure. For example, to configure the input, select the desired hookup from the graphical choices for single-, two- and three-phase. Neutral current is calculated in the 4-wire hookup.

Snapshot Mode

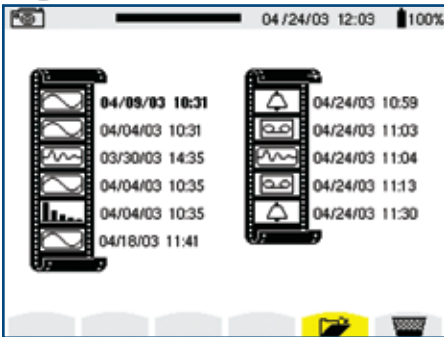


You can store up to 12 screen snapshots simply by pressing the camera button while the desired information from any of the instrument's modes is on the display. Any of the stored snapshots can be selected and displayed by selecting it from the list.

Printing

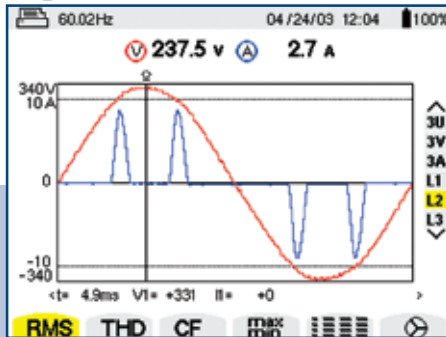




Information on screen (real-time or stored data) can be sent to a printer using the serial interface by simply pressing the print button.

Transient Mode


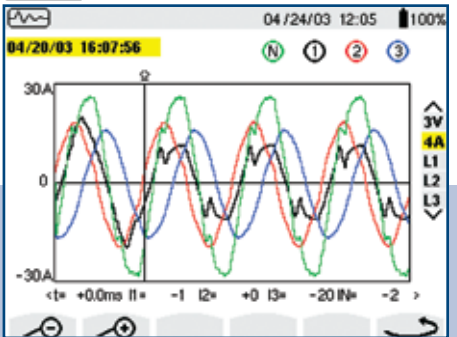


Display transients that were captured – each transient consisting of one pre-triggered cycle, the triggered cycle and two post-triggered cycles. All inputs are stored when a transient is captured. Up to 50 transients can be stored, each consisting of four cycles and up to six inputs for a total of 1200 transient waveforms.

Harmonics Mode

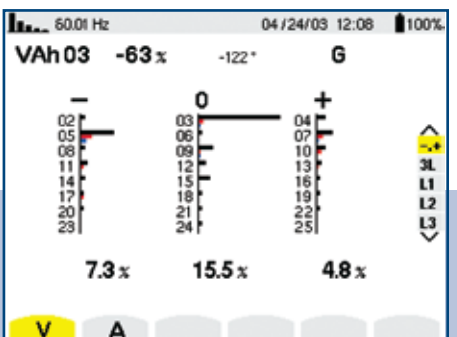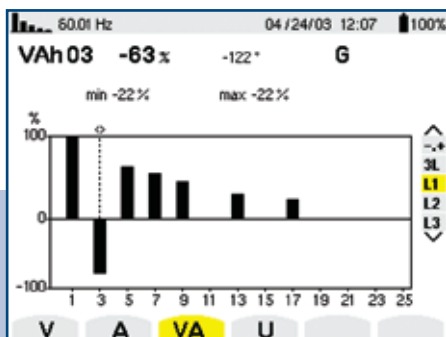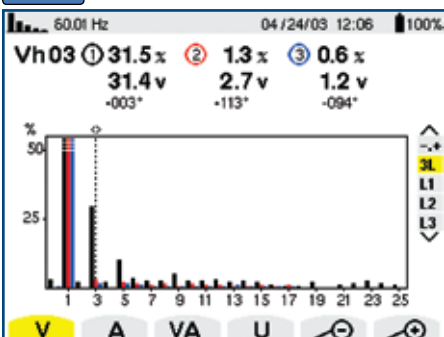

Voltage, current and power harmonics can be displayed in real time, in bargraph and text form, and stored in memory. Individual harmonics can be analyzed by moving the horizontal cursor to that harmonic. Harmonic direction (source-to-load or load-to-source) can be displayed for power harmonics. Harmonic sequencing (negative, zero and positive) can be displayed for volts or amps for all phases.


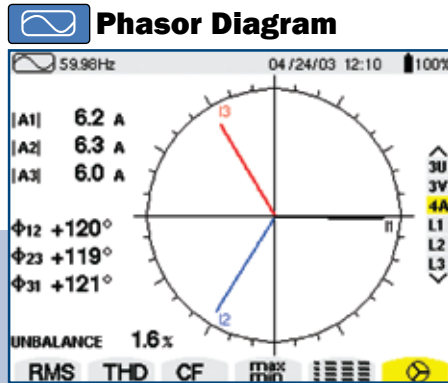
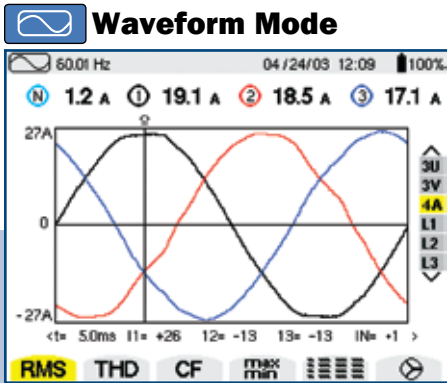


Alarms Mode



Date/Time	Function	Value	Duration
09/20/02 15:04	L1 Tan	0.10	4s
	L1 Arms	1A	5s65ms
	L2 Arms	0A	5s66ms
	L3 Arms	0A	5s66ms
	L1 Tan	0.10	7s
	L1 W	58W	7s
	L1 Arms	1A	7s74ms
	L2 Arms	0A	7s74ms
	L3 Arms	0A	7s74ms
10/16/02 09:22	L1 W	847W	35s
	L2 W	1636W	35s

Real-time waveforms can be displayed for any and all inputs. In RMS, THD and Crest Factor presentations, Phasor Diagrams can be displayed graphically, showing the phase relationship as well as actual values for phase-to-phase voltage and current. Percent unbalance is also displayed.

Up to 4096 alarm conditions can be recorded and displayed. Each alarm shows date, time, function, value and duration (down to 10ms).

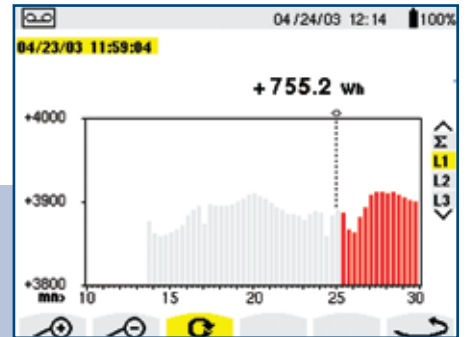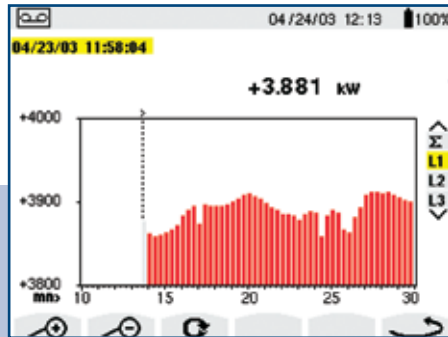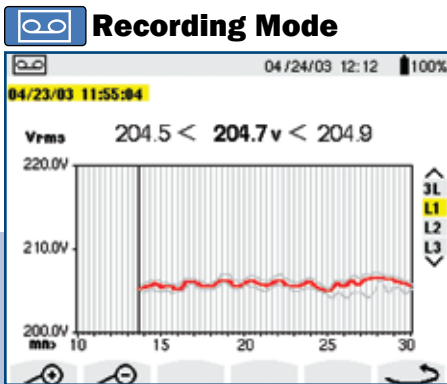

Trend recording from one to 22 variables and from one to six inputs can be programmed, stored and displayed at storage rates between one second and 15 minutes. Data can be analyzed on screen by moving the horizontal cursor to see MIN, MAX and instantaneous values as well as time and date. The time axis can be zoomed in or out. Power and energy consumption can also be recorded and displayed.

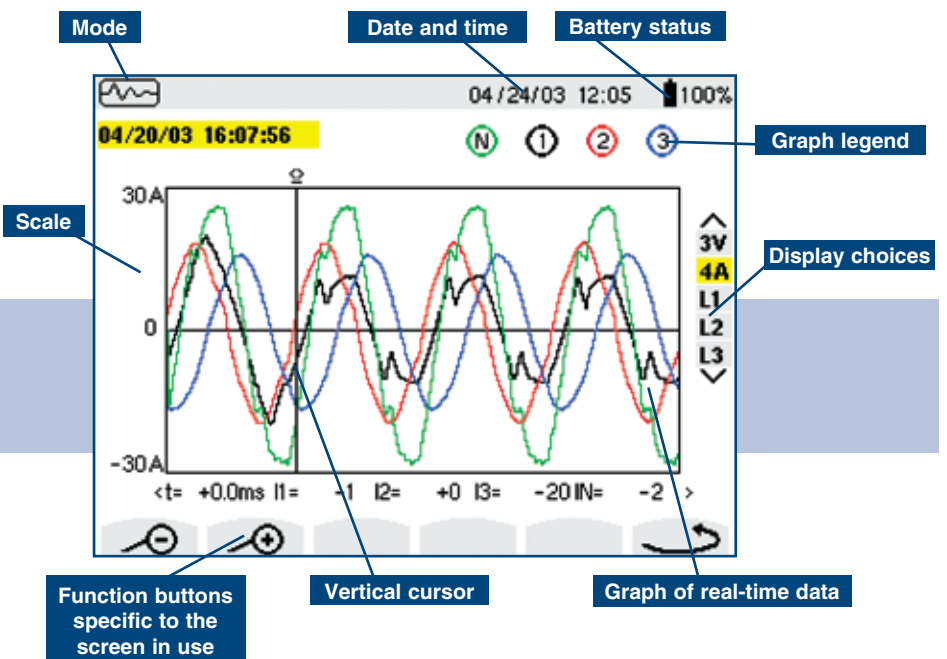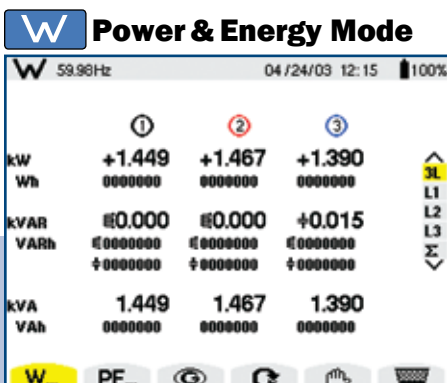

Power and Energy can be displayed by phase or total, including kW, Watt-hours, VAR hours, VA and VA hours. The energy can be totalized and the inductive and capacitive components are also displayed.

SPECIFICATIONS

MODEL	3945-B		
ELECTRICAL			
Sampling Frequency	256 samples per cycle		
Data Storage	4MB partitioned for waveforms, transients, alarms and trend recording		
Voltage (TRMS)	Phase-to-Phase: 960V	Phase-to-Neutral: 480V	
Current (TRMS)	MN Clamp: 0 to 6A/120A or 0 to 240A MR Clamp: 0 to 1000A _{AC} , 0 to 1400A _{DC}	SR Clamp: 0 to 1200A AmpFlex [®] : 0 to 6500A ¹	
MEASUREMENT	RANGE	RESOLUTION	ACCURACY
Single-Phase RMS Voltages	15 to 480V	0.1V	±0.5% ± 2cts
Phase-to-Phase RMS Voltages	15 to 960V	0.1V	±0.5% ± 2cts
DC Voltage Component	15 to 680V	0.1V	±1% ± 2cts
Single-Phase Peak Voltages	15 to 680V	1V	±(1% + 5cts)
Phase-to-Phase Peak Voltages	15 to 1360V	1V	±(1% + 5cts)
Frequency (Hz)	40 to 69Hz	0.01Hz	±0.01Hz
Current Probes (Arms)			
MN Clamp	0 to 240A	0.1A	±(0.5% + 2cts)
SR Clamp	0 to 1200A	0.1A; 1A ≥ 1000A	±(0.5% + 2cts)
AmpFlex [®] Probe	10 to 6500A	0.1A; 1A ≥ 1000A	±(0.5% + 1A)
Active (Real) Power (kW)	0 to 9999kW	4 digits (10,000ct)	±1% ± 1ct @ PF ≥ 0.8
Reactive Power (kVAR)	0 to 9999kVAR	4 digits (10,000ct)	±1% ± 1ct @ PF ≤ 0.8
Apparent Power (kVA)	0 to 9999kVA	4 digits (10,000ct)	±1% ± 1ct
Power Factor (PF & DPF)	-1.000 to 1.000	0.001	±(1.5% + 0.01)
Active Energy (kWh)	0 to 9999MWh	4 digits (10,000ct)	±1% ± 1ct @ PF ≥ 0.8
Reactive Energy (kVARh)	0 to 9999MVARh	4 digits (10,000ct)	±1% ± 1ct @ PF ≤ 0.8
Apparent Energy (kVAh)	0 to 9999MVAh	4 digits (10,000ct)	±1% ± 1ct
Unbalance (V & A)	0 to 100%	0.1%	±1% ± 1ct
Phase Angle (V-A, A-A, V-V)	-179° to +180°	1°	±2° ± 1ct
Harmonics (1 st to 50 th) F = 40 to 69Hz (V ³ 50V, A > nom/100)	0 to 999%	0.1%	±1% + 5cts
Total Harmonic Distortion (V & A)	0 to 999%	0.1%	±1% + 5cts
K-factor (A _{kf})	1 to 99.99	0.01	±5% ± 1ct
Flicker (P _{ST})	0.00 to 9.99	0.01	-
Power Source	9.6V NiMH rechargeable battery pack AC supply: 110/230V _{AC} ±20% (50/60Hz)		
Battery Life	≥8 hrs with display on; ≤35 hrs with display off (record mode)		
MECHANICAL			
Dimensions	9.5 x 7 x 2" (240 x 180 x 55mm)		
Weight	4.6 lbs (2.1kg)		
DISPLAY			
Display Type	1/4 VGA (320 x 240) color LCD		
ENVIRONMENTAL			
Operating Temperature	32° to 122°F (0° to 50°C)		
Storage Temperature	-4° to +122°F (-20° to +50°C)		
SAFETY			
Safety Rating	EN 61010-1, 600V Cat. IV ² , Pollution Degree 2		
Double Insulation <input type="checkbox"/>	Yes		
CE Mark	Yes		


⁽¹⁾Crest Factor at 6500A = 1 ⁽²⁾When used with SR193 or AmpFlex[®] probes.
600V Cat. III with MN193 or MR193 probes.

SOFTWARE

DataView® Data Analysis and Reporting Software

Configure all functions of the PowerPad® Model 3945-B

- ▶ Display and analyze real-time data on your PC
- ▶ Configure all PowerPad® functions and parameters from your PC
- ▶ Customize views, templates and reports to your exact needs
- ▶ Create and store a complete library of configurations that can be uploaded to the PowerPad® as needed
- ▶ Zoom in and out and pan through sections of the graph to analyze the data
- ▶ Display waveforms, trend graphs, harmonic spectrums, text summaries, transients, event logs and stored alarms
- ▶ Print reports using standard or custom templates you design

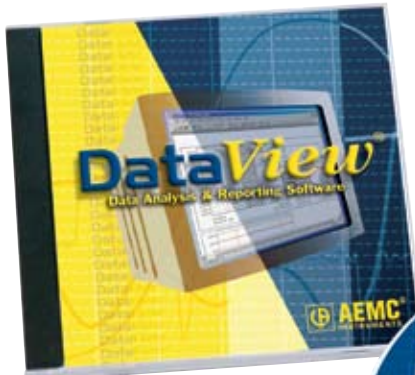

DataView® is included with the PowerPad® Model 3945-B.




DataView® software provides a convenient way to configure and control power analysis tests from your computer. Through the use of clear and easy-to-use tabbed dialog boxes, all PowerPad® functions can be configured and tests can be initiated. Results can be displayed in real time and stored in your PC. Reports may be printed along with the operator's comments and analysis.

DataView®

Minimum System Requirements:


- ▶ Windows 2000/XP/Vista® operating system
- ▶ 128MB of RAM for Windows 2000 (256MB recommended)
256MB of RAM for Windows XP
512MB of RAM for Windows Vista®
- ▶ 80MB of hard disk space (200MB recommended)
- ▶ CD-ROM drive

Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.

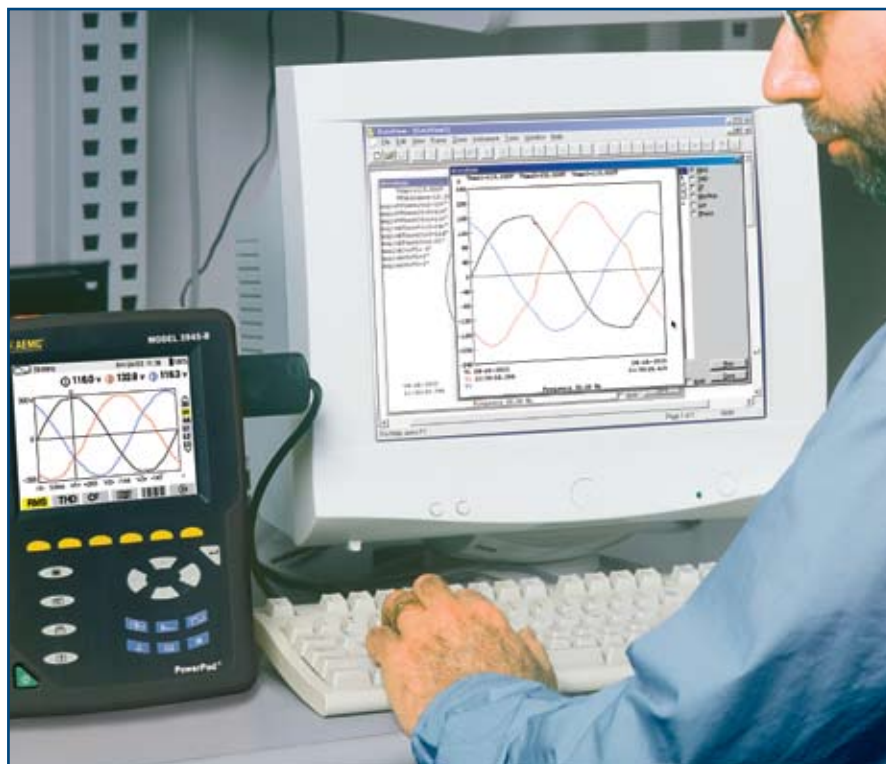


Display waveforms in real time on your computer.


DataView® Screens

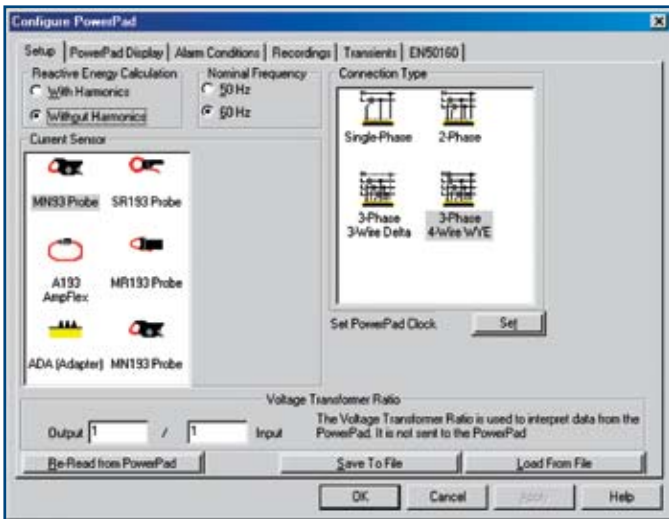


Clear and easy setup of all functions from one tabbed dialog box.

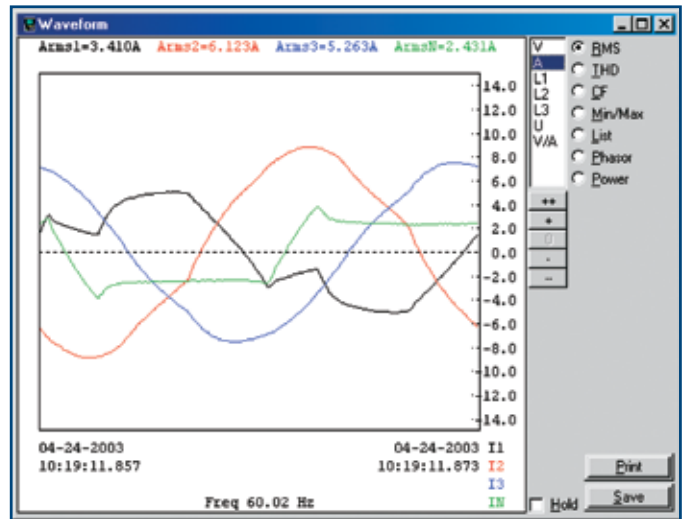

Display real-time waveforms by phase, parameter or total.

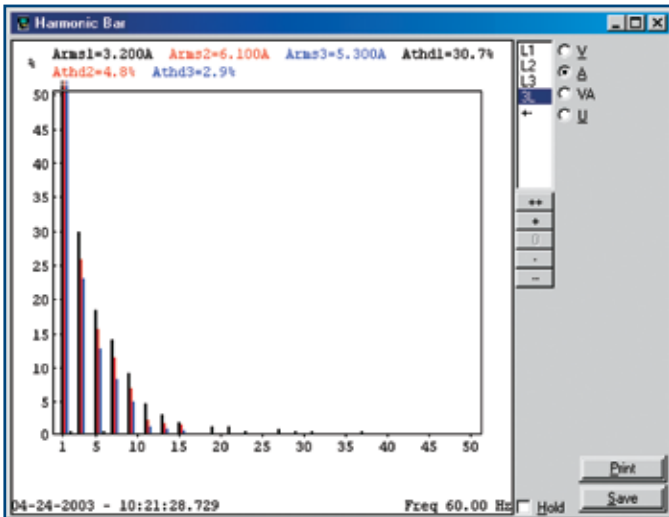

Display all harmonics from 1st to 50th in bargraph form for voltage, current and power.

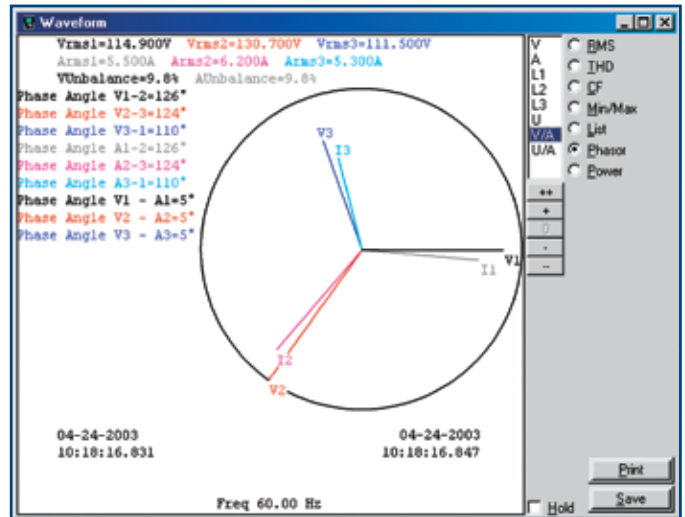

Display real-time phasor diagrams. Includes unbalance for both voltage and current.

W	=	359.966	Phase to Display:	1
VAR	=	-114.487		2
VA	=	377.734		3
Wh Source	=	0.601		Sum
Wh Load	=	0.000		
VARh Capacitive Source	=	0.191		
VARh Capacitive Load	=	0.000		
VARh Inductive Source	=	0.000		
VARh Inductive Load	=	0.000		
VAh Source	=	0.631		
VAh Load	=	0.000		
PF	=	0.953		
DPF	=	0.997		
Tan	=	-0.078		

Display power and energy parameters – both instantaneous and total.

h	*	h	*	h	*	h	*	
H00	0.0	0	H01	100.0	0	H02	0.0	0
H04	0.0	0	H05	2.2	-127	H06	0.0	0
H08	0.0	0	H09	0.3	142	H10	0.0	0
H12	0.0	0	H13	0.4	34	H14	0.0	0
H16	0.0	0	H17	0.2	-72	H18	0.0	0
H20	0.0	0	H21	0.1	164	H22	0.0	0
H24	0.0	0	H25	0.0	0	H26	0.0	0
H28	0.0	0	H29	0.0	0	H30	0.0	0
H32	0.0	0	H33	0.0	0	H34	0.0	0
H36	0.0	0	H37	0.0	0	H38	0.0	0
H40	0.0	0	H41	0.0	0	H42	0.0	0
H44	0.0	0	H45	0.0	0	H46	0.0	0
H48	0.0	0	H49	0.0	0	H50	0.0	0

Display harmonics in a text table from harmonic 0 (DC) through the 50th.

DataView® Sample Reports

Transient Report

Database: C:\Program Files\DataView Samples\PowerPad\Transient.dvb


Operator: AEMC Instruments
Joe
200 Foxborough Blvd
Foxborough Elvd, MA
508-698-2115

Comments: Transient Analysis of phase drop out on


Test Site: ABI Systems
Plant Mgr
123 Any Street
Any City, MA 12345

Recording Start Date: 04-24-2003 - 10:30:27
Recording Duration: 0 (s)
Instrument ID: Model: 3945 - 1 1 100132

Transient Report

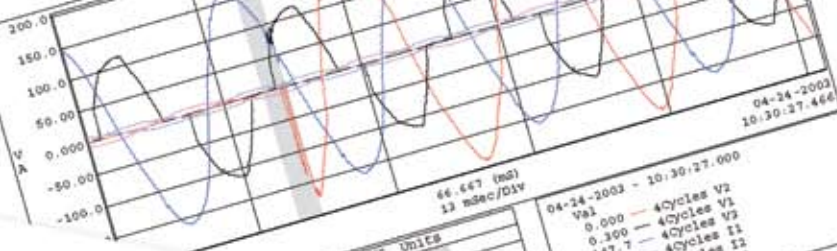

Channel Name: Waveform V1
Frequency: 60.00 Hz
VoltageRatio: 1.000

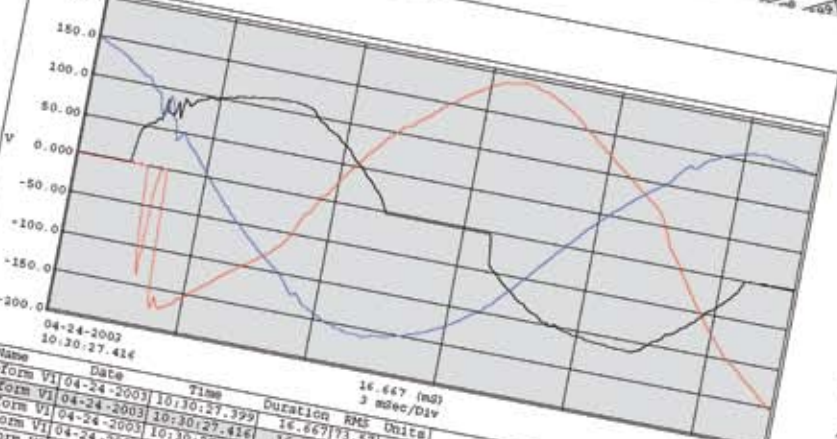

RMS Units	V
110.7	V
73.90	V
73.81	V
113.26	V
113.2	V
114.2	V
113.5	V
113.2	V
113.2	V

04-24-2003 - 10:30:27.000
Val 1 - 4Cycles V2
0.000 - 4Cycles V1
0.300 - 4Cycles V2
147.7 - 4Cycles I1
-7.100 - 4Cycles I2
7.100 - 4Cycles I3


Start Date: 04-24-2003
Start Time: 10:30:27.400
Duration: 66.667 (ms)
Frequency: 60.00 Hz
Magnitude Of Transient: -137.0
Data Point Of Transient: 28.00
VoltageRatio: 1.000
CurrentRatio: 1.000

Date	Time	Duration (ms)
04-24-2003	10:30:27.416	2.083
04-24-2003	10:30:27.418	416

Name	Date	Time	Duration (ms)	RMS Units
Waveform V1	04-24-2003	10:30:27.399	16.667	73.90
Waveform V1	04-24-2003	10:30:27.426	16.667	73.90
Waveform V1	04-24-2003	10:30:27.433	16.667	73.81
Waveform V2	04-24-2003	10:30:27.399	16.667	113.26
Waveform V2	04-24-2003	10:30:27.450	16.667	113.26
Waveform V2	04-24-2003	10:30:27.416	16.667	115.9
Waveform V2	04-24-2003	10:30:27.433	16.667	113.26
Waveform V2	04-24-2003	10:30:27.450	16.667	113.26
Waveform V3	04-24-2003	10:30:27.399	16.667	114.2
Waveform V3	04-24-2003	10:30:27.416	16.667	113.5
Waveform V3	04-24-2003	10:30:27.433	16.667	113.2
Waveform V3	04-24-2003	10:30:27.450	16.667	113.2



Reports can be displayed on your PC and printed. Each report includes all test results in a tabular and graphic format, as well as operator and test site information. Comments typed by the operator will also be included.

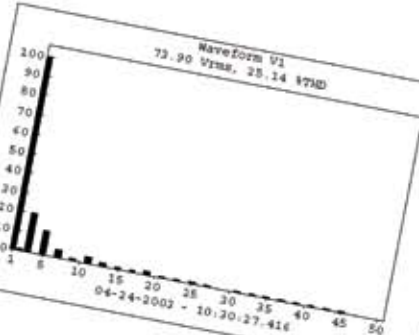

Waveform V1		
H01	100.0	H18
H02	1.2	H19
H03	20.5	H20
H04	0.3	H21
H05	32.4	H22
H06	0.4	H23
H07	4.2	H24
H08	0.4	H25
H09	1.2	H26
H10	3.7	H27
H11	0.1	H28
H12	2.2	H29
H13	0.2	H30
H14	1.6	H31
H15	0.3	H32
H16	1.4	H33
H17	0.5	H34
		H35
		H36
		H37
		H38
		H39
		H40
		H41
		H42
		H43
		H44
		H45
		H46
		H47
		H48
		H49
		H50

CONSTRUCTION

Current probe inputs

Voltage inputs

1/4 VGA (320 x 240) Color LCD

Optically coupled bi-directional RS-232 port

Hand strap

Line power connector

Six variable function buttons

Instrument configuration button

Snapshot button

Print button

Help button

ON/OFF button

Enter button
Cursor movement, browsing and selection buttons

Direct display mode buttons

Dirt resistant overmold



Current probe inputs

Voltage inputs

The color-coded input connectors provide dedicated current probe inputs and voltage inputs.



Line power connector

Optically coupled bi-directional RS-232 port

The connections located on the side of the Model 3945-B provide optically isolated RS-232 communication port and line power from 85 to 256V_{AC} (50/60Hz).

ACCESSORIES

A complete family of current measurement probes to meet most AC (or DC) measurement applications up to 6500Arms.



Set of three color-coded SR193 (1200A) current probes
Catalog #2140.10 (10 ft leads); Catalog # 2124.25 (30 ft leads)



Set of three low current color-coded MN93 (240A) current probes
Catalog #2140.09 (10 ft leads); Catalog #2140.24 (30 ft. leads)



Set of three color-coded AmpFlex®193-36 (6500A) flexible current probes
with 36" sensors Catalog #2140.12 (10 ft leads);
Catalog #2140.27 (30 ft leads)



Set of three color-coded AmpFlex®193-24 (6500A) flexible current probes with
24" sensors Catalog #2140.11 (10 ft leads);
Catalog #2140.26 (30 ft leads)



Set of three low current color-coded MN193 (6A/120A) current probes
Catalog #2140.14 (10 ft leads); Catalog #2140.29 (30 ft leads)




Set of three AC/DC color-coded MR193 (1000Aac/1400Aac) current probes
Catalog #2140.13 (10 ft leads); Catalog #2140.30 (30 ft leads)



MR193 probe (black connector) (1000Aac/1400Aac)
Catalog #2140.28 (10 ft leads)

The 5A Adapter Box facilitates the use of current probes with current outputs for use with PowerPad®. Ratios are programmable up to 2999:1 or 2999:5. The Adapter Box works with single-, two- or three-phase current inputs.

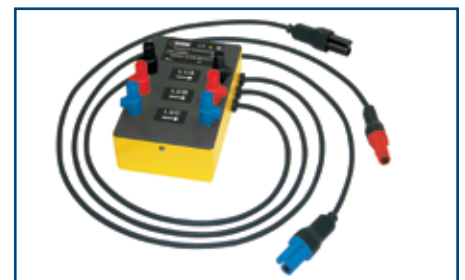

5A Adapter Box
Catalog #2140.17



All models include three color-coded current probes (MN93 example shown), four color-coded 10 ft voltage leads, four color-coded alligator clips, RS-232 DB9F optically coupled serial cable, NiMH battery, US 120V power cord, DataView® software, carrying bag, soft carrying pouch and user manual.

ORDERING INFORMATION	CATALOG NO.
PowerPad® Model 3945-B w/MN93	Cat. #2130.75
Includes set of three color-coded 240A MN93 probes with 10 ft leads, four 10 ft color-coded voltage leads, four color-coded alligator clips, RS-232 DB9F optically coupled serial cable, NiMH battery, US 120V power cord, DataView® software, carrying bag, soft carrying pouch and user manual	
PowerPad® Model 3945-B w/SR193	Cat. #2130.76
Includes set of three color-coded 1200A SR193 probes with 10 ft leads, four 10 ft color-coded voltage leads, four color-coded alligator clips, RS-232 DB9F optically coupled serial cable, NiMH battery, US 120V power cord, DataView® software, carrying bag, soft carrying pouch and user manual	
PowerPad® Model 3945-B w/24" AmpFlex® 193-24	Cat. #2130.77
Includes set of three color-coded 6500A 24" AmpFlex® 193-24 probes with 10 ft leads, four 10 ft color-coded voltage leads, four color-coded alligator clips, RS-232 DB9F optically coupled serial cable, NiMH battery, US 120V power cord, DataView® software, carrying bag, soft carrying pouch and user manual	
PowerPad® Model 3945-B w/36" AmpFlex® 193-36	Cat. #2130.78
Includes set of three color-coded 6500A 36" AmpFlex® 193-36 probes with 10 ft leads, four 10 ft color-coded voltage leads, four color-coded alligator clips, RS-232 DB9F optically coupled serial cable, NiMH battery, US 120V power cord, DataView® software, carrying bag, soft carrying pouch and user manual	
PowerPad® Model 3945-B w/MR193	Cat. #2130.79
Includes set of three color-coded 1000AAC/1400ADC MR193 probes with 10 ft leads, four 10 ft color-coded voltage leads, four color-coded alligator clips, RS-232 DB9F optically coupled serial cable, NiMH battery, US 120V power cord, DataView® software, carrying bag, soft carrying pouch and user manual	
PowerPad® Model 3945-B w/MN193	Cat. #2130.80
Includes set of three color-coded 6A/120A MN193 probes with 10 ft leads, four 10 ft color-coded voltage leads, four color-coded alligator clips, RS-232 DB9F optically coupled serial cable, NiMH battery, US 120V power cord, DataView® software, carrying bag, soft carrying pouch and user manual	
Accessories (Optional)	
Set of three color-coded MN93 probes (240A) with 10 ft leads	Cat. #2140.09
Set of three color-coded SR193 probes (1200A) with 10 ft leads.	Cat. #2140.10
Set of three color-coded 24" AmpFlex® 193-24 probes (6500A) with 10 ft leads.	Cat. #2140.11
Set of three color-coded 36" AmpFlex® 193-36 probes (6500A) with 10 ft leads.	Cat. #2140.12
Set of three color-coded MR193 probes (1000AAC/1400ADC) with 10 ft leads.	Cat. #2140.13
Set of three color-coded MN193 probes (6A/120A) with 10 ft leads.	Cat. #2140.14
5A Adapter box.	Cat. #2140.17
Set of four color-coded 30 ft voltage leads	Cat. #2140.23
Set of three color-coded MN93-30 probes (200A) with 30 ft leads	Cat. #2140.24
Set of three color-coded SR193-30 probes (1200A) with 30 ft leads	Cat. #2140.25
Set of three color-coded 24" AmpFlex® 193-24-30 probes (6500A) with 30 ft leads	Cat. #2140.26
Set of three color-coded 36" AmpFlex® 193-36-30 probes (6500A) with 30 ft leads	Cat. #2140.27
MR193-BK probe (black connector) (1000AAC/1400ADC)	Cat. #2140.28
Set of three color-coded MN193-30 probes (5A/100A) with 30 ft leads	Cat. #2140.29
Set of three color-coded MR193-30 probes (1000AAC/1400ADC) with 30 ft leads.	Cat. #2140.30

AEMC ONE SOURCE®
For All Your Electrical Test & Measurement Instruments

AEMC®
INSTRUMENTS

Call the AEMC® Instruments Technical Assistance Hotline for immediate consultation with an applications engineer: **(800) 343-1391**

Export Department: (978) 526-7667 • Fax (978) 526-7605 • E-mail: export@aemc.com

Chauvin Arnoux®, Inc. d.b.a AEMC® Instruments • 200 Foxborough Blvd. • Foxborough, MA 02035 USA • (800) 343-1391 • (508) 698-2115 • Fax (508) 698-2118

Visit our website at www.aemc.com 950.BR-POWERPAD_0908Rev08 Printed in the USA

Chauvin Arnoux One Source™