

## V120


**DANGER**
**HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**


- Follow safe electrical work practices. See NFPA 70E in the USA, or applicable local codes.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Read, understand and follow the instructions before installing this product.
- Turn off all power supplying equipment before working on or inside the equipment.
- Use a properly rated voltage sensing device to confirm power is off.

**DO NOT DEPEND ON THIS PRODUCT FOR VOLTAGE INDICATION**

**Failure to follow these instructions will result in death or serious injury.**

**NOTICE**

- This product is not intended for life or safety applications.
- Do not install this product in hazardous or classified locations.
- The installer is responsible for conformance to all applicable codes.
- Mount this product inside a suitable fire and electrical enclosure.

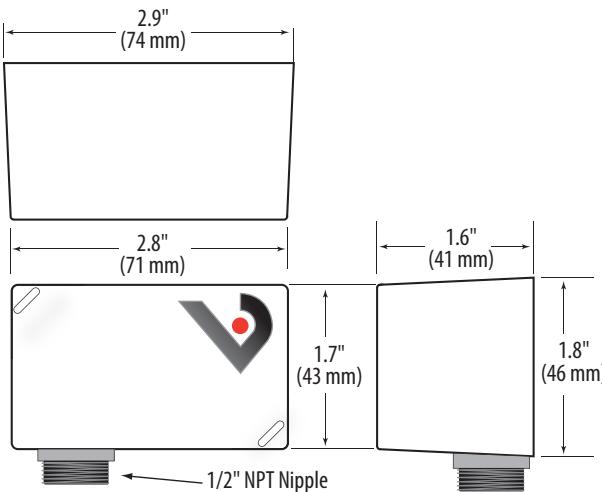**DIMENSIONS**


## V120

**20A SPDT Enclosed Relay****Installer's Specifications**

Operating Temperature	-34°C to 55°C (-29° to 131°F)
Operating Humidity	10-90% non condensing
Expected Relay Life	Electrical (at rated current): 100,000 cycles Mechanical (unpowered): 10,000,000 cycles
Relay Status	LED ON=energized
<b>Wire Specifications:</b>	
Lead Length	14" (356mm) min.
Gauge	UL1015; Coil: 18 AWG; Contacts: 12 AWG
Insulation Class	600 VAC RMS
Agency Approvals	UL508 enclosed device listing, pollution degree 2

**INSTALLATION**


**Disconnect and lock out all power sources before beginning the installation.**

- Using the threaded nipple, connect the relay to the desired enclosure through a knock out hole.
- Secure with the conduit nut provided.
- Connect coil wires:
  - Choose the coil common lead (white with yellow stripe) and connect it to the (-) source termination point.
  - Choose either the low voltage (10-30VAC/DC, white with blue stripe) or high voltage (120VAC, white with black stripe) lead, depending on the application requirements, and connect it to the (+) source termination point.\*
- Connect relay contacts:
  - Choose the relay common wire (yellow) and connect to the switched load.
  - Choose the relay N.O. (orange) and/or\* N.C. (blue) lead and connect to the switched load.


- Secure the enclosure and reconnect power.

\*Isolate or insulate all non-terminated wires according to local electrical code requirements, i.e. wire nut.

## WIRING COLOR CODES

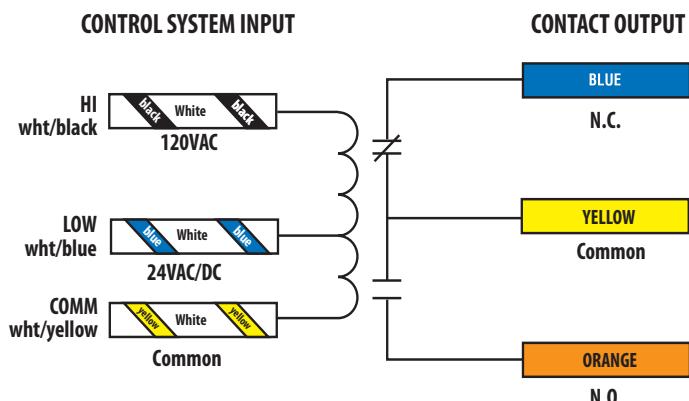

## WIRING EXAMPLE

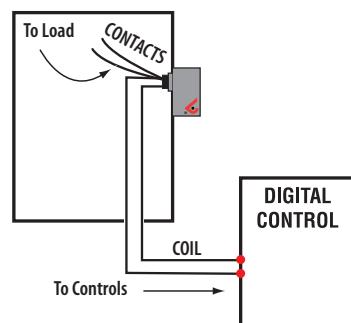

## **CONTACT AND COIL SPECIFICATIONS**

## TYPICAL COIL PERFORMANCE

Voltage	Coil	Current
24V.....	AC	DC
120V.....	75mA	32mA
	42mA	-

## CONTACT RATINGS

<b>Resistive</b> .....	20A@277VAC, 28VDC
<b>Motor</b> .....	120VAC, 1HP
	277VAC, 2HP
<b>Pilot Duty</b> .....	A300
<b>Ballast</b> .....	277VAC, 20A N.O.
	277VAC, 10A N.C.
<b>Tungsten</b> .....	120VAC, 10A N.O.
	120VAC, 2A N.C.

## POWER SOURCE

