

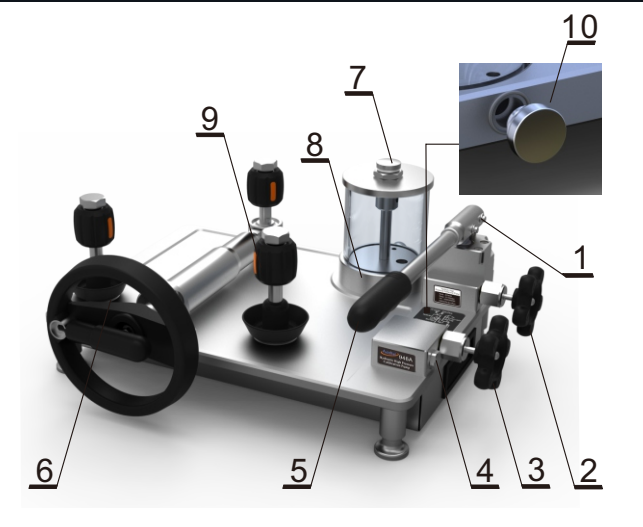


Views and Hydraulic Schematic

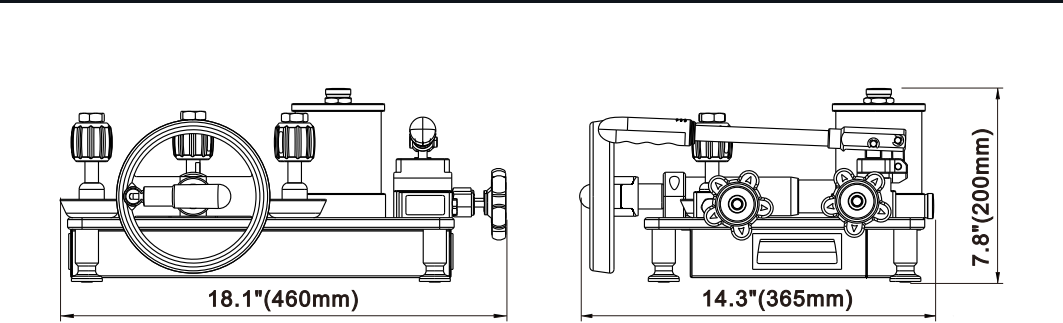

- 1 – Pre-pressure Pump
- 2 – Isolation Valve
- 3 – Vent Valve
- 4 – Filter
- 5 – Pre-pressure pump handle
- 6 – High-pressure and fine adjustment handle
- 7 – Reservoir cover vent valve
- 8 – Reservoir
- 9 – Quick connector
- 10 – Liquid drain valve

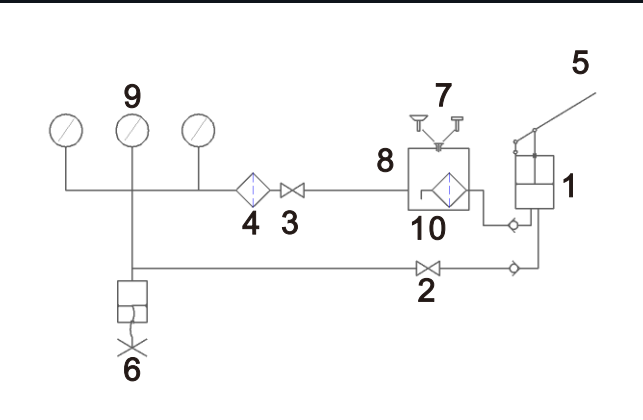

Warnings and cautions


- Operate the pump in the rated pressure range of 15,000 psi (1,000 bar) and do not exceed the safety pressure of 18,000 psi (1,200 bar).
- Close all valves and handles and tighten the ports when transporting the pump.
- Always keep the reservoir cover vent valve(#7)open during operation.
- Change media immediately if it is contaminated.
- Keep media level between 1/4 and 3/4 of the liquid reservoir filled.
- Keep the connection threads clean and remove any particles or dirt on the threads.
- Do not over tighten the valves, connectors and handles to avoid damage.
- Do not use the pre-pressure pump to generate more than 8,700 psi (600 bar)
- Additel is not liable for any safety problems or damages caused by misuse or incorrect operation.

Specification

- **Pressure range:** 0 to 15,000 psi (1,000 bar) positive pressure
 - **Temperature:** (5 ~ 50) °C **Storage temperature:** (-25 ~ 70) °C
 - **Humidity range:** < 95%
 - **Adjustment resolution:** 0.015 psi (1 mbar)
 - **Safety pressure:** < 18,000 psi (1,200 bar)
 - **Pressure media:** Mineral oil or deionized water
 - **Reservoir capacity:** 420 ml (25.6 in³)
 - **Size:** Height: 7.8" (200 mm) Base: 18.1" (460 mm) x 14.3" (365 mm)
 - **Weight:** 26.5 lb (12 kg)
 - **Material:** SS, aluminum, copper, Buna-N
- Remark: Please drain the liquid in transportation.*

Troubleshooting

Problem	Cause	Solution
Can not to generate pressure with the pre-pressure pump lever (#5)	Vent valve(#3) is open	Close Vent valve(#3)
	O-ring is broken	Replace O-ring
	Not enough media is in the reservoir.	Fill more media
Hard to generate pressure with the pre-pressure pump lever (#5)	Isolation valve(#2) is closed	Open the isolation valve(#2)
	Lever raised too high when above 2,900 psi	Lift the lever in small angel
	Pre-pressure pump max pressure of 8,700 psi (600 bar) is reached	Use High-pressure handle(#6)
Hard to turn the Valves or handles	Too much power used in last operation	Close vent valve smoothly
	Hard to close isolation valve in high pressure	Use more force
	Hard to turn the High-pressure Handle(#6)	Use more force
	Not enough lubrication on screw thread	Apply more lubrication

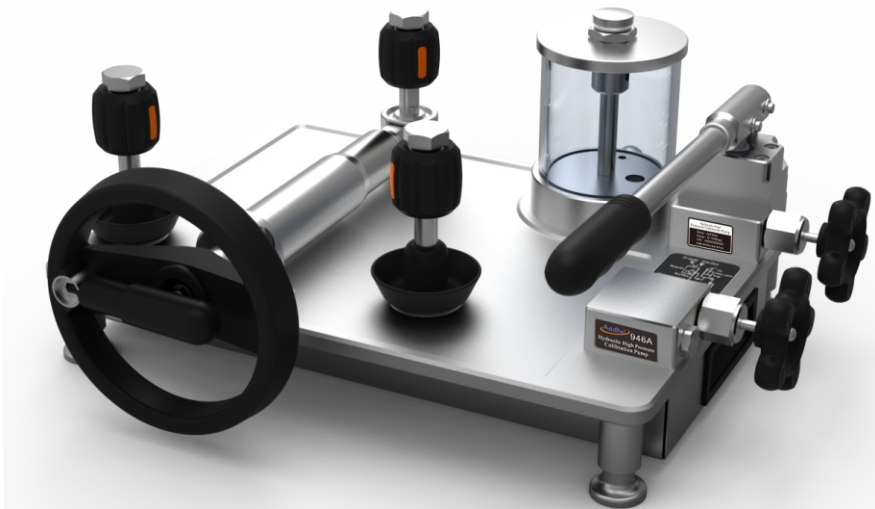

Additel 946A

Hydraulic High Pressure Calibration Pump User's Manual


[Version number:1811V03]



Basic Operation

Connection

A

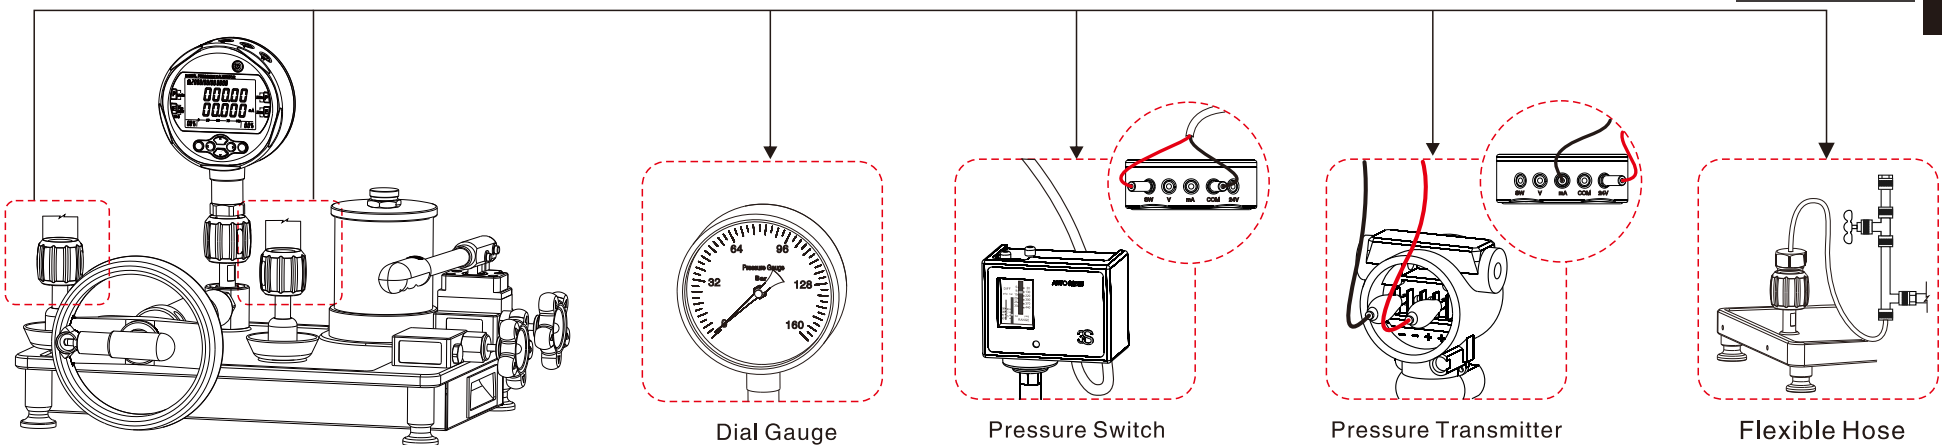

Dial Gauge


Pressure Switch

Pressure Transmitter

Flexible Hose


Preparation

B

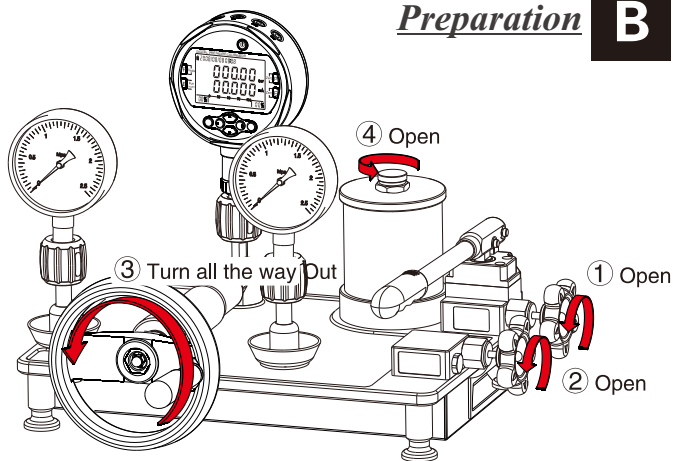


Pressurizing

C

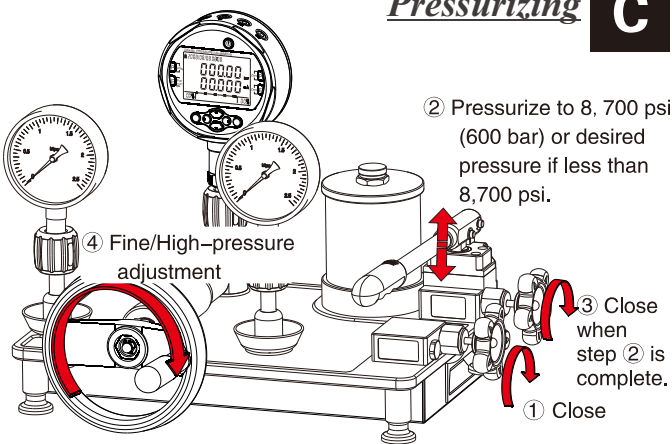

Depressurizing


D

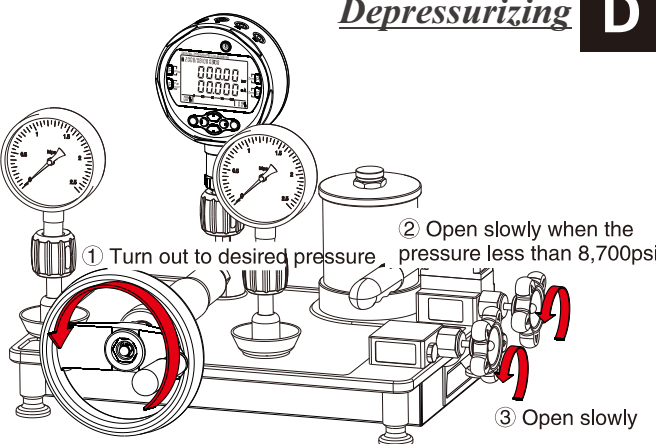

Maintenance


Screw

A

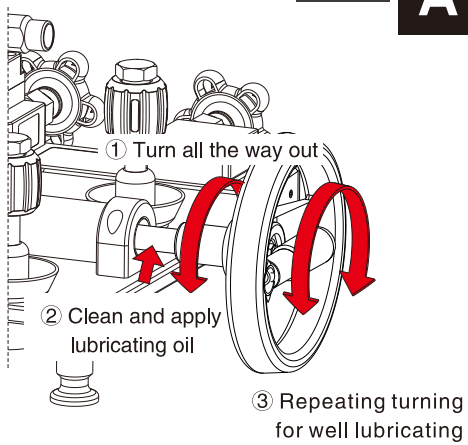


Pin & Roll

B

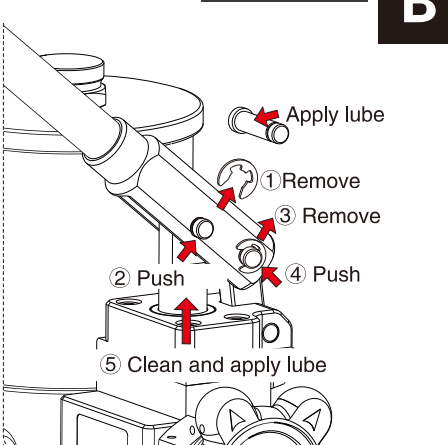


Filter

C

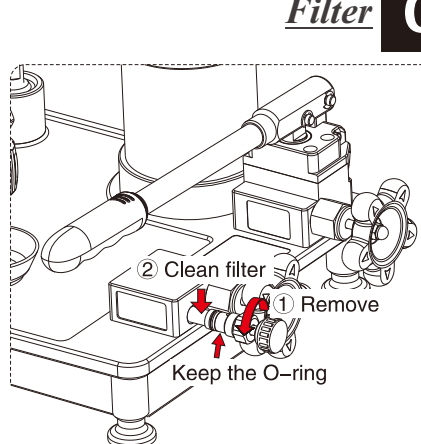

Reservoir

D

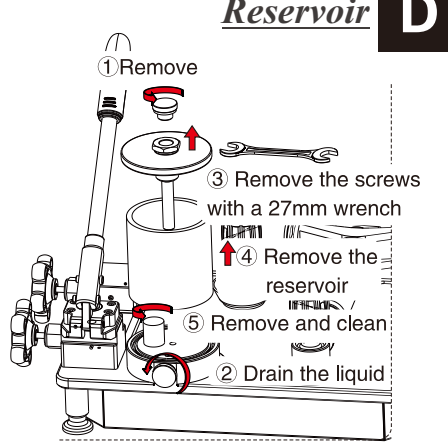

After maintenance, assembly with reverse order.

Remark:

A: Additel has made a concerted effort to provide complete and current information for the proper use of the equipment. The product specifications and other information contained this manual are subject to change without notice.
B: Above pictures are just for reference.