

EL-WiFi-21CFR-ULT

21CFR Ultra Low Temperature Cryogenic Vaccine WiFi Data Logger

Your data, anytime, anywhere



- Can be installed as part of a 21CFR compliant system with additional controls including permission-based use, authority level sign-off and full system audit
- Measurement range -100 to +100°C (-148 to +212°F)
- T-type probe on 1m cable
- Wirelessly stream and view data on the EasyLog 21CFR Cloud
- Configurable high and low alarms with indicator
- Easy sensor set-up using free 21CFR WiFi Sensor Software

The EL-WiFi-21CFR-ULT is designed to monitor vaccines in cryogenic dry ice storage, in accordance with 21CFR part 11 data security standards.

Data is streamed wirelessly over any compatible WiFi network to be viewed on the 21CFR Cloud. During configuration, the sensor will search for an existing wireless network whilst physically connected to the PC. It can then be placed anywhere within range of the network. If the sensor temporarily loses connectivity with the network, it will log readings until it is able to communicate again with the 21CFR Cloud (max 30 days at 10-second sample interval).

The sensor is IEEE 802.11bgn* (2.4GHz) compliant, supports WEP, WPA/WPA2 encryption and enterprise networks (PEAP, TTLS, FAST).

The EL-WiFi-21CFR-ULT has a protection rating of IP40 and the probe tip IP67. The unit is freestanding, but it can be attached to a wall or surface using the bracket provided. The unit can be clipped in and out of the bracket as required.



SPECIFICATIONS

	Minimum	Typical	Maximum	Unit
Battery life		>6		Months
Temperature measurement range	-100 (-148)		+100 (+212)	°C (°F)
USB supply voltage (@500mA)	4.5	5.0	5.5	Vdc
Operating temperature range (logger)	-20 (-4)		+60 (+140)	°C (°F)
Logging period (user configurable)	10 sec	10 min	12 hrs	
Transmission period (user configurable)	1 min	1 hr	24 hrs	
Temperature measurement resolution		0.1 (0.2)		°C (°F)
Temperature display resolution		0.1		
Accuracy		±2.5 (±4.5)		°C (°F)
IP Rating	Logger IP40, Probe Tip IP67 (Bung fully inserted, not permanently powered, thermocouple connector fitted and fully inserted, device mounted vertically.)			
Dimensions	82 x 70 x 23mm (3.22 x 2.75 x 0.91")**			
Probe dimensions	300 x Ø 1.5mm, 1m cable (11.8 x Ø 0.05, 39.3" cable)			

* MAC Address starting 98:8B:AD:2..... only. **Excluding mounting bracket.

21CFR COMPLIANCE

Permission based use and access	✓
Authority based action sign-off	✓
Data records cannot be edited or deleted	✓
Complete system audit trail	✓
For a detailed compliance checklist, please visit www.lascarelectronics.com/markets/21cfr/	

ACCESSORIES

PSU-5VDC-USB-USA	USB Mains Power Adapter for USA
PSU USB-UK	USB Mains Power Adapter for UK
PSU USB-EU	USB Mains Power Adapter for EU
EL-P-TC-T-ULT	Replacement T-type Thermocouple probe

INCLUDED IN THE BOX

EL-WIFI WALL BRACKET	Wall mounting bracket for EL-WiFi sensors
EL-P-TC-T-ULT	Thermocouple probe
CABLE USB A-MICRO B	USB Type A to Micro B



CALIBRATION CERTIFICATES NOW AVAILABLE

Lascar now offers a Traceable Calibration Certificate Service on Temperature Data Loggers. Using reference equipment which has been calibrated by a UKAS/NIST accredited laboratory and using apparatus traceable to national or international standards. For more information, please visit .



EL-WiFi-21CFR-ULT

21CFR Ultra Low Temperature
Cryogenic Vaccine WiFi Data Logger

Your data, anytime, anywhere




21CFR WIFI SENSOR SOFTWARE

EasyLog 21CFR WiFi software* is available as a free download from . Easy to install and use, EasyLog 21CFR WiFi Sensor Software allows easy sensor set-up and connection of sensors to a WiFi network and the 21CFR Cloud.

21CFR CLOUD

21CFR Cloud subscription delivers all of the flexibility of a remote monitoring system: Interact with sensors via any internet-enabled device; manage and monitor sensors; access event logs and set up email alerts; assign authorisation levels to user accounts and view comprehensive audit trail records. Unlike the standard EasyLog Cloud service, 21CFR Cloud includes other controls such as permission-based use, authority sign-off and full system audit to ensure data monitored and collected is regulated to 21CFR Part 11 standard.

For full pricing information and to create an account. Any queries or questions, please do not hesitate to contact our team.

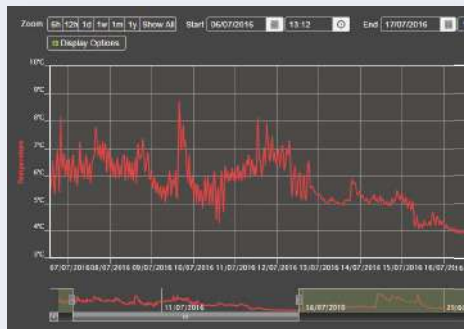

Detailed data reporting



Authority sign-off on actions



Detailed system audit reporting

A Cloud account subscription is created during the WiFi sensor set-up process using EasyLog 21CFR WiFi Sensor Software. 21CFR WiFi Sensors are only compatible with the 21CFR Cloud .

When setting up your logger, make sure you select the T-Type probe.

Battery Life and Power Supply

The battery can be recharged (unit must be between 0 - 40°C) via a PC, a USB +5V wall adapter, or a portable USB battery pack using the USB lead provided. It can also be permanently powered by a USB wall adapter or USB battery pack. Readings may be affected while the internal battery is being charged. However, once charged, continued connection of the charger will have no effect.

Battery life is dependent on: transmission period, WiFi encryption method, WiFi encryption key rotation frequency (determined by the router/access point), signal strength between router/access point and WiFi device, presence volume and type of WiFi traffic from other devices, sample rate and operating temperature.

Specifications liable to change without prior warning

*Requires Windows 7, 8.1, 10



Find Quality Products Online at:

www.GlobalTestSupply.com

sales@GlobalTestSupply.com