



Instruction Manual

Vortex Mixer, Heavy Duty, VXHDDG

Vortex Mixer, Heavy Duty, VXHDAL

Vortex Mixer, Microplate, VXMPDG

Vortex Mixer, Microplate, VXMPAL



Revision 10
2/14/2020

TABLE OF CONTENTS

Package Contents	1
Service Information	1
Installation	2
Maintenance & Servicing	2
Environmental Conditions	2
Equipment Disposal	2
Safety Instructions	3
Standards & Regulations	3
Specifications	4
Vortex Mixer Control Panels	4-5
Introduction	6
Operating Instructions	6-7
Head/Accessory Installation Instructions	8
Troubleshooting	9

PACKAGE CONTENTS

Heavy Duty Vortex Mixer, Analog or Digital
 Power Cord
 (1) cup head
 (1) universal holder
 (1) universal holder cover
 (1) foam insert (1.5-2.0 mL microtubes, holds 38)
 Instruction manual

OR

Microplate Vortex Mixer, Analog or Digital
 Power Cord
 (1) cup head
 (1) microplate holder, single
 Instruction manual
 Warranty card

SERVICE INFORMATION

If the troubleshooting section does not resolve or describe your problem, contact your authorized OHAUS service agent. For service assistance or technical support in the United States call toll-free between 8:00 AM and 5:00 PM EST. An OHAUS product service specialist will be available to provide assistance. Outside the USA, please visit our web site to locate the Ohaus office nearest you.

Serial Number: _____

Date of Purchase: _____

Supplier: _____

INSTALLATION

Upon receiving the Ohaus Vortex Mixer, check to ensure that no damage has occurred during shipment. It is important that any damage that occurred in transport is detected at the time of unpacking. If you do find such damage the carrier must be notified immediately.

After unpacking, remove the protective coverings from the feet and place the Vortex Mixer on a level bench or table, away from explosive vapors. Ensure that the surface on which the unit is clean and free of dust. Always place the unit on a sturdy work surface.

The Vortex Mixer is supplied with a power cord that should be plugged into a properly grounded outlet. If the supplied power cord does not meet your needs, please use an approved power cord that suits local codes and electric supply. Replacement of the plug must be made by a qualified electrician.

MAINTENANCE & SERVICING

The Vortex Mixer is built for long, trouble-free, dependable service. No lubrication or other technical user maintenance is required. The unit should be given the care normally required for any electrical appliance. Avoid wetting or unnecessary exposure to fumes. Spills should be removed promptly. **DO NOT** use a cleaning agent or solvent on the front panel which is abrasive or harmful to plastics, nor one which is flammable. Always ensure the power is disconnected from the unit prior to any cleaning. If the unit ever requires service, contact your Ohaus representative.

ENVIRONMENTAL CONDITIONS

Operating Conditions: Indoor use only.

Temperature: 4 to 40°C (39 to 104°F)

Humidity: 20% to 85% relative humidity, non-condensing

Altitude: 0 to 6,562 ft. (2000 M) above sea level

Non-Operating Storage:

Temperature: -20 to 65°C (-4 to 149°F)

Humidity: 20% to 85% relative humidity, non-condensing

Installation Category II and Pollution Degree 2 in accordance with IEC 664.

EQUIPMENT DISPOSAL




This equipment must not be disposed of with unsorted waste. It is your responsibility to correctly dispose of the equipment at life-cycle-end by handing it over to an authorized facility for separate collection and recycling. It is also your responsibility to decontaminate the equipment in case of biological, chemical, and/or radiological contamination, so as to protect the persons involved in the disposal and recycling of the equipment from health hazards.

For more information about where you can drop off your waste of equipment, please contact your local dealer from whom you originally purchased this equipment. By doing so, you will help to conserve natural and environmental resources and you will ensure that your equipment is recycled in a manner that protects human health.


SAFETY INSTRUCTIONS

Please read the entire instruction manual before operating the Vortex Mixer.

 **WARNING! DO NOT** use the Vortex Mixer in a hazardous atmosphere or with hazardous materials for which the unit was not designed. Also, the user should be aware that the protection provided by the equipment may be impaired if used with accessories not provided or recommended by the manufacturer, or used in a manner not specified by the manufacturer.


Always operate unit on a level surface for best performance and maximum safety.

DO NOT lift the Vortex Mixer by the head. All heads, including cup head, are removable. They can pop off if lifted by them.

 **CAUTION!** To avoid electrical shock, completely cut off power to the unit by disconnecting the power cord from the wall outlet. Disconnect unit from the power supply prior to maintenance and servicing.

Spills should be removed promptly. **DO NOT** immerse the unit for cleaning.





DO NOT operate the unit if it shows signs of electrical or mechanical damage.

 Earth Ground - Protective Conductor Terminal

 Alternating Current

STANDARDS & REGULATIONS

Compliance to the following standards and regulations is indicated by the corresponding mark on the product.

Mark	Standards and Regulations
	OHAUS Corporation declares that the VXHD, VXMP series mixers comply with directives 2011/65/EU, 2014/30/EU, 2014/35/EU and standards EN 50581, EN 61010-1, EN 61010-2-051, EN 61326-1. The full text of the EU declaration of conformity is available at the following internet address
	This product complies with directive 2012/19/EU. Please dispose of this product in accordance with local regulations at the collecting point specified for electrical and electronic equipment. For disposal instructions in Europe, refer to
	EN 61326-1
	CAN/CSA C22.2 61010-1, CAN/CSA C22.2 61010-2-051 UL 61010-1, UL 61010-2-051

Global Notice
Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Canada Notice
This Class A digital apparatus complies with Canadian ICES-003.

FCC Notice
NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by Ohaus Corporation could void the user's authority to operate the equipment.


HEAVY DUTY VORTEX MIXER SPECIFICATIONS

Overall dimensions (L x W x H):		9.5 x 6.6 x 6.3" (24.1 x 16.8 x 16.5cm)
Electrical (50/60 Hz):	120 volts:	0.25 amps, 30 watts
	230 volts:	0.13 amps, 30 watts
Fuses:		5mm x 20mm, 5 amp 250 volt quick acting
Speed range:	On Mode:	300-2500rpm
	Touch Mode:	300-3500rpm
Orbit:		0.194" (4.9mm)
Duty rating:		Continuous duty
Controls:	Analog:	See page 4
	Digital:	See page 5
Capacity:		2.5lbs (1.1kg)
Ship weight:		15lbs (6.8kg)

MICROPLATE VORTEX MIXER SPECIFICATIONS

Overall dimensions (L x W x H):		10.5 x 5.4 x 4.5" (26.6 x 13.7 x 11.4cm)
Electrical (50/60 Hz):	120 volts:	0.25 amps, 30 watts
	230 volts:	0.13 amps, 30 watts
Fuses:		5mm x 20mm, 5 amp 250 volt quick acting
Speed range:	On Mode:	300-2500rpm
	Touch Mode:	300-3500rpm
Orbit:		0.138" (3.5mm)
Duty rating:		Continuous duty
Controls:	Analog:	See page 4
	Digital:	See page 5
Capacity:		2 Microplates
Ship weight:		12lbs (5.4kg)

ANALOG VORTEX MIXER CONTROL PANEL

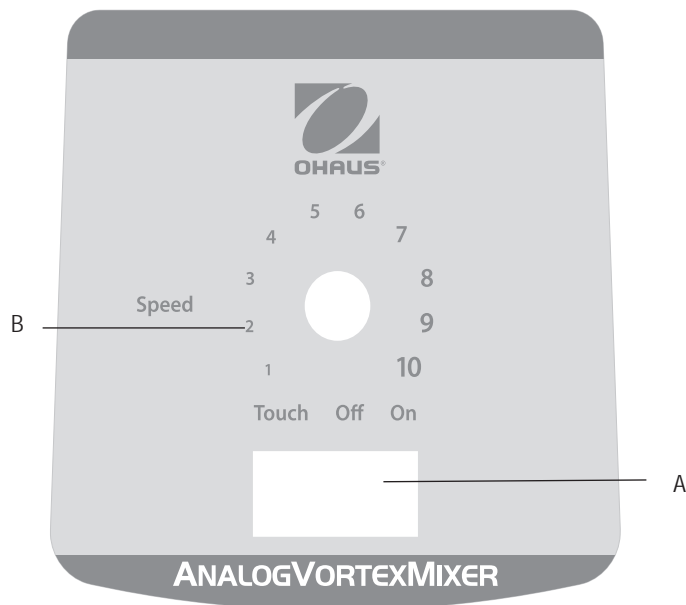


The front panel of the Analog Vortex Mixer contains all the switches and control knob needed to operate the unit.

A. 3-way rocker switch: touch/off/on rocker switch starts/stops the vortexing function.

B. Speed control: The speed control knob controls the vortexing speed. User should turn knob clockwise until the vortexer reaches the desired speed.

DIGITAL VORTEX MIXER CONTROL PANEL

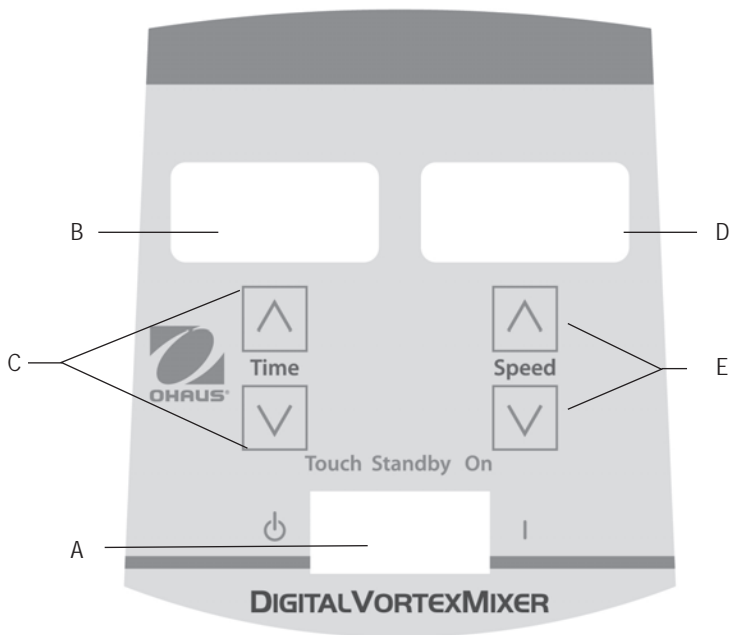

The front panel of the Digital Vortex Mixer contains all the switches, controls and displays needed to operate the unit.

- A. 3-way rocker switch:** touch/standby/on rocker switch starts/stops the vortexing function.
- B. Time display:** Displays accumulated time (continuous mode) or how much time is remaining (timed mode). The display range is from 0 to 9,999 minutes in one (1) second increments. The display will indicate minutes and seconds until the timer reaches 99 minutes and 59 seconds (99:59), then the display will automatically display minutes up to 9,999.
- C. Up/down arrows for set-point control.**
- D. Speed display:** Displays the speed of the Vortex Mixer.
- E. Up/down arrows for set-point control.**

VORTEX MIXER INTRODUCTION

Your Vortex Mixer is ready for most one-handed applications. The Vortex Mixer operates by mixing samples just prior to testing.

TOUCH MODE OPERATION

NOTE: Due to the robust mechanical design of this unit, more downward force is required to operate this unit in Touch Mode to mix single tubes as compared to other models. Another option is to set your unit to the ON mode for mixing a single tube.

OPERATING TIP

To ensure the stability of your vortex mixer, it is very important to start with a smooth, clean work surface and the mixers (4) feet. If the mixer starts to “walk”, remove the power to the unit and clean the work surface and the (4) feet with isopropyl alcohol.

ANALOG VORTEX MIXER OPERATING INSTRUCTIONS

1. Make sure the 3-way rocker switch is in the center, off position. Plug the power cord into a properly grounded outlet.
2. For continuous operation, push the rocker switch to the right, on position. For intermittent/touch operation, push the rocker switch to the left, touch position.
3. In either case, turn the speed knob to the desired setting. In the on position, you will see the head in motion immediately. In the touch position, the vessel you are using must be pushed down on the head attachment to achieve motion. To get the desired mix, vary the speed, using the speed knob, and/or vary the angle of contact and pressure against the head.
4. When finished with either continuous or intermittent/touch operation, return rocker switch to the center, off position.
5. The continuous, on mode is for the accessories.
6. The intermittent, touch mode is intended for short mixing times of one (1) minute or less at full speed.
7. To completely cut off power to the unit, disconnect the power cord from the wall outlet.

DIGITAL VORTEX MIXER OPERATING INSTRUCTIONS

1. Make sure the 3-way rocker switch is in the center, standby position. Plug the power cord into a properly grounded outlet. The unit is now on and in a standby mode.
2. For continuous operation, push the rocker switch to the right, on position. For intermittent/touch operation, push the rocker switch to the left, touch position.
3. In either case, set the speed. In the on position, you will see the head in motion immediately. In the touch position, the vessel you are using must be pushed down on the head attachment to achieve motion. To get the desired mix, vary the speed, using the speed up/down arrows, and/or vary the angle of contact and pressure against the head.
4. When finished with either continuous or intermittent/touch mode, return rocker switch to the center, standby position.
5. The continuous, on mode is for accessories.
6. The intermittent, touch mode is intended for short mixing times of one (1) minute or less at full speed.
7. To completely cut off power to the unit, disconnect the power cord from the wall outlet.

Beeper Reference:

To silence the beeper operation (except for error codes), with the unit in standby mode, remove accessories or cup head. Press and hold the head mount. Press the time down arrow. Release the time down arrow. Release the head mount. To restore to factory setting, repeat procedure.

Setting speed:

To set the speed press the up/down arrows below the speed display until you reach the desired speed.

- Speed while running in the on position is 300 to 2500rpm
- Speed while running in the touch position is 300 to 3500rpm

Setting time:

Time operation works in both touch and on positions.

- To run in timed mode (programmed time), start by pressing the rocker switch to the left, touch position. Press the up/down arrows below the time display until you reach the desired time. While running unit in timed mode, the time display will show time remaining, counting down to zero (0:00). Four (4) audible beeps will indicate the count down function is complete. The time display will default back to the set time.
- To run in continuous mode (accumulated time), reset the timer to zero (0:00) before running. Time display will show the accumulated time and run until you press the rocker switch to the center, standby position.

ACCESSORY INSTALLATION INSTRUCTIONS (ALL UNITS)

Installing the cup head, microplate trays, universal holder or other head attachments:

1. Move the 3-way rocker switch to the center, off/standby position.
 2. Place accessory on head mount of the unit, aligning the square on the bottom of the accessory with the square on the top of the unit. Lower accessory until it is sitting on the head mount.
 3. Turn the accessory counter-clockwise until it snaps into place (approximately 1/8 of a turn). Add samples to attachments after the accessory is secured onto the Vortex Mixer. Be sure samples are secure before turning unit on.
 4. To remove an installed accessory, move the 3-way rocker switch to the center, off/standby position. Turn the accessory clockwise (approximately 1/8 of a turn) and then lift the accessory straight up. Remove samples before removing the accessories.
- To load a microplate into the microplate tray, position the microplate against the foam bumpers first, then push down the other side to ensure a secure fit. To release a microplate, push it against the microplate tray's foam bumper and lift to remove.
 - Maximum speed may vary when vortexing microplates. Speed may be dependant on the height of the skirt on the microplate or material of the microplate.
 - Rubber vibration dampeners on the bottom of the microplate tray and universal holder may need to be reinserted into the proper position when vortexing at high speeds. Squeeze firmly as you maneuver it back into position.

ACCESSORY INSTALLATION INSTRUCTIONS (HEAVY DUTY VORTEX MIXER)

Installing the vessel holders:

1. Attach the Universal Holder to the vortex mixer.
2. Place the Grip Mat in the bottom of the Universal Holder.
3. Place the flask on top of the Grip Mat, in the center of the holder.
4. Pull the center hole of the Vessel Holder over the sample container.
5. With the arrow on the Vessel Holder close to the front of the unit, the straps should line up with the posts of the Universal Holder.
6. Push the hole on the strap over the posts on the holder. Secure the strap so that it fits into the slot on the holder. Repeat this for the remaining two straps.
7. Be sure the sample is secure before turning unit on.

Installing the Universal Holder Cover:

1. Place the Foam Insert into the Universal Holder.
2. Lay the Universal Holder Cover on top of the foam, and align the edges.
3. Push the hole on the cover down over the post on the holder. Squeeze the strap so that it fits into the slot on the holder, leaving the cover sitting flat on the foam. Repeat this process for the remaining two posts.
4. To remove the accessory cover, secure the straps and pull straight up.

TROUBLESHOOTING (ALL UNITS)

Error	Cause of Error	How to Fix
<p>Analog Models Motor does not run in the touch or on mode</p> <p>Digital Models E3 Error</p>	<p>Analog and Digital Models There is no motion on the motor or the motor is not working properly</p>	<p>Analog and Digital Models</p> <ol style="list-style-type: none"> 1. Turn the rocker switch to the center off/standby position 2. Check to verify the load has not been exceeded 3. Check and clear any possible obstructions of the head mount 4. If the unit still does not work, please contact your Ohaus representative

RISOLUZIONE PROBLEMI (TUTTE LE UNITÀ)

Errore	Causa dell'errore	Soluzione
<p>Modelli analogici Il motore non funziona in modalità touch o on</p> <p>Modelli digitali Errore E3</p>	<p>Modelli analogici o digitali Non c'è movimento nel motore o non funziona correttamente</p>	<p>Modelli analogici o digitali</p> <ol style="list-style-type: none"> 1. Girare la manopola oscillante al centro in posizione off/standby 2. Controllare che non sia stato superato il carico massimo 3. Controllare ed eliminare qualsiasi ostacolo alla testa del dispositivo. 4. Se l'unità continua a non funzionare contattare il rappresentante Ohaus