

# Leica DISTO™ D510

The original laser distance meter



- when it has to be **right**

**Leica**  
Geosystems

## Table of Contents

EN

### Instrument Set-up ----- 2

Introduction	2
Overview	2
Basic measuring screen	3
Selection screen	3
Pointfinder (Viewscreen)	4
Insert batteries	4

### Operations ----- 5

Switching ON/OFF	5
Clear	5
Message Codes	5
Multifunctional endpiece	5
Permanent / Minimum-Maximum measuring	5
Add / Subtract	6
Pointfinder (Viewscreen)	6

### Settings ----- 7

Overview	7
Tilt units	7
Distance units	8
Beep ON/OFF	8
Digital level ON/OFF	8
De-/Activate keypad lock	9
Unlock keypad	9
Personalized favorites	9
Illumination	9
De-/Activate Bluetooth Smart	10
Calibration of tilt sensor (Tilt Calibration)	11
Reset	12
Offset	12

### Functions ----- 13

Overview	13
Timer	13
Calculator	13
Adjusting measuring reference/tripod	14

Memory	14
Measuring single distance	15
Smart Horizontal Mode	15
Height-profile measurement	16
Area	17
Volume	18
Triangular area	19
Long range mode	19
Inclination tracking	20
Sloped objects	20
Height tracking	21
Trapezium	22
Stake out	23
Pythagoras (2-point)	24
Pythagoras (3-point)	25

### Technical Data ----- 26

### Message Codes ----- 27

### Care ----- 27

### Warranty ----- 27


### Safety Instructions ----- 27


Areas of responsibility	27
Permitted use	28
Prohibited use	28
Hazards in use	28
Limits of use	28
Disposal	28
Electromagnetic Compatibility (EMC)	29
Use of the product with Bluetooth®	29
Laser classification	29
Labelling	29

## Instrument Set-up

EN

### Introduction

 The safety instructions and the user manual should be read through carefully before the product is used for the first time.

 The person responsible for the product must ensure that all users understand these directions and adhere to them.


The symbols used have the following meanings:

#### **WARNING**


Indicates a potentially hazardous situation or an unintended use which, if not avoided, will result in death or serious injury.

#### **CAUTION**

Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor injury and/or appreciable material, financial and environmental damage.

 Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.


### Overview

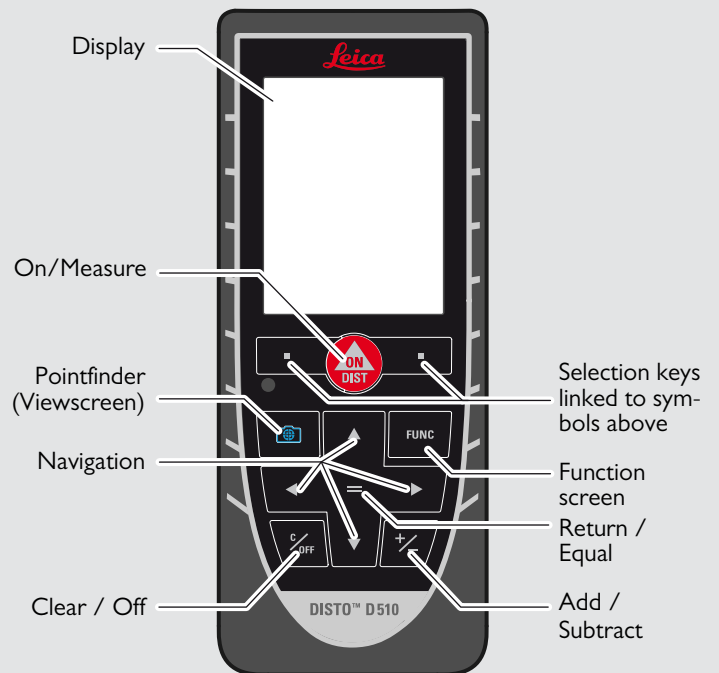


## Instrument Set-up

EN

### Basic measuring screen

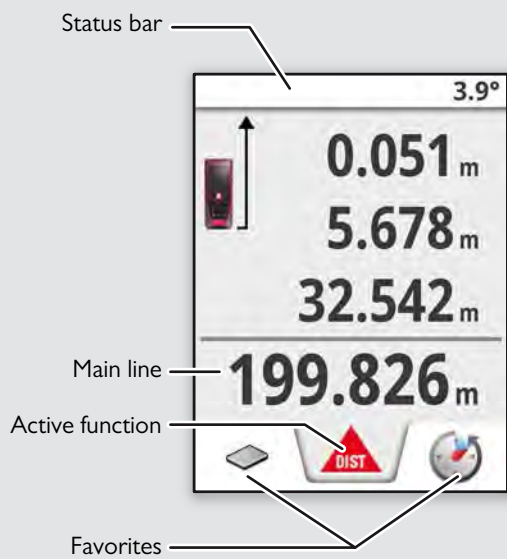


### Selection screen

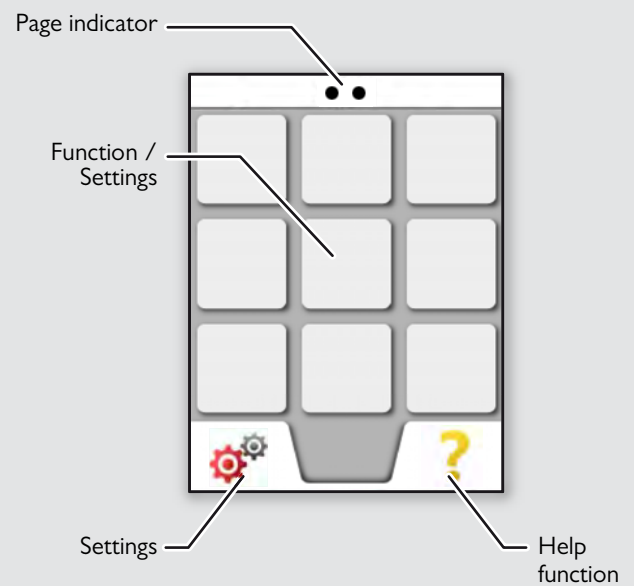


## Instrument Set-up

EN

### Pointfinder (Viewscreen)

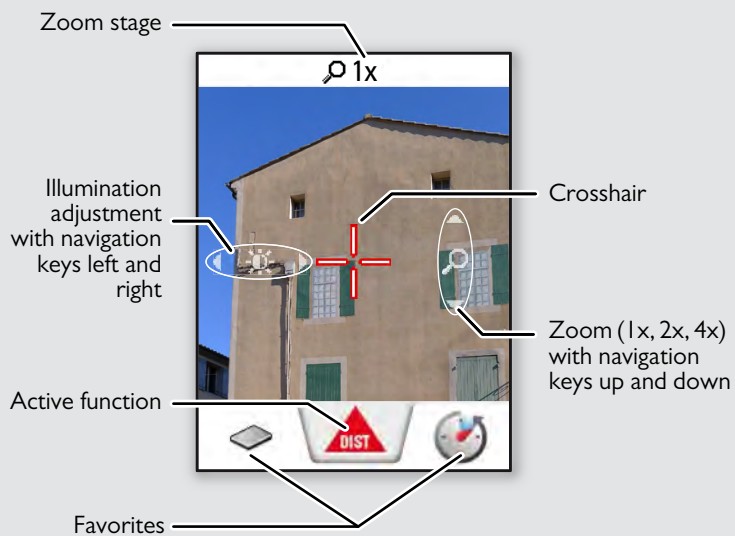


### Insert batteries

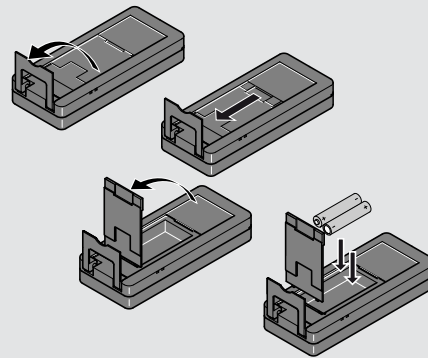

i


To ensure a reliable use, do not use zinc-carbon batteries. We recommend using high quality batteries. Change batteries when battery symbol is flashing.

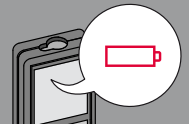

## Operations

EN

### Switching ON/OFF

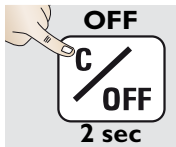


Device is turned OFF.




Press ON button 2 sec to start continuous laser mode. If no key is pressed for 180 sec, the device switches off automatically.

### Clear

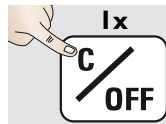

Undo last action.

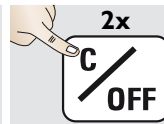



Leave actual function, go to default operation mode.

### Message Codes

If the info icon appears with a number, observe the instructions in section "Message Codes". Example:




### Multifunctional endpiece

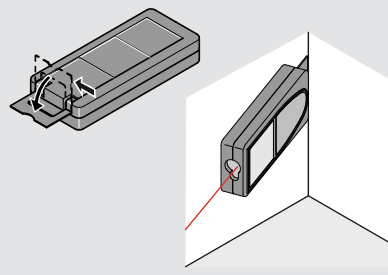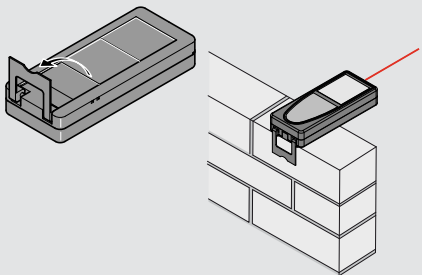

The orientation of the endpiece is automatically detected and the zero point is accordingly adjusted.

### Permanent / Minimum-Maximum measuring

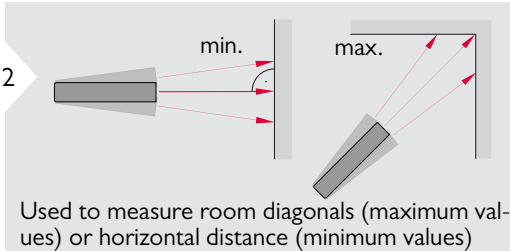

The minimum and maximum distance measured is displayed (min, max.). The last value measured is displayed in the main line.




Stops permanent / minimum-maximum measuring.

Leica DISTO™ D510 792312

5




## Overview

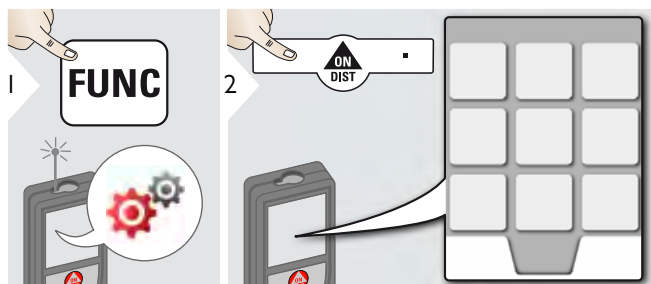

	Tilt units
	Distance units
	Beep
	Digital level
	Keypad lock
	Favorites
	Illumination
	Bluetooth®
	Tilt calibration
	Reset
	Offset

## Tilt units

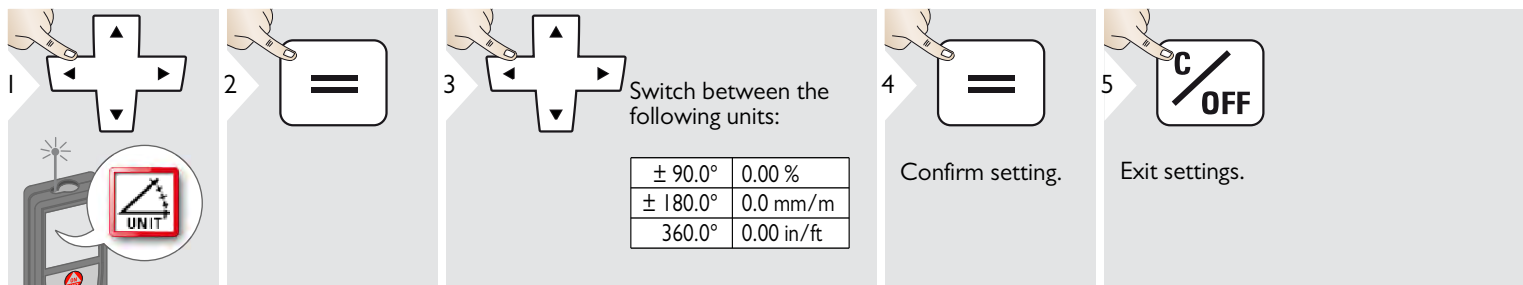

## Settings

EN

### Distance units

Switch between the following units:

0.0000 m	0.00 ft
0.000 m	0'00" 1/32
0.00 m	0.00 in
0 mm	0 in 1/32
	0.000 yd

Confirm setting.

Exit settings.

### Beep ON/OFF

To switch ON, repeat procedure.

Exit settings.


### Digital level ON/OFF

To switch ON, repeat procedure.


Exit settings.

The digital level is displayed in the status line.


## De-/Activate keypad lock

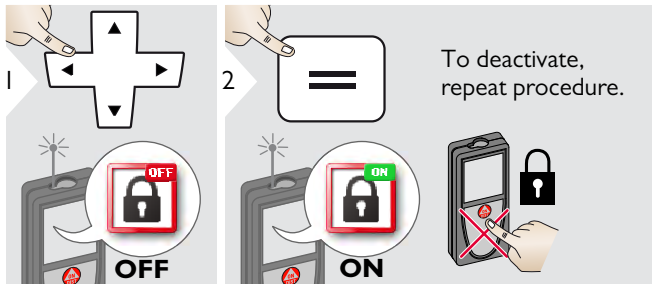


## Unlock keypad

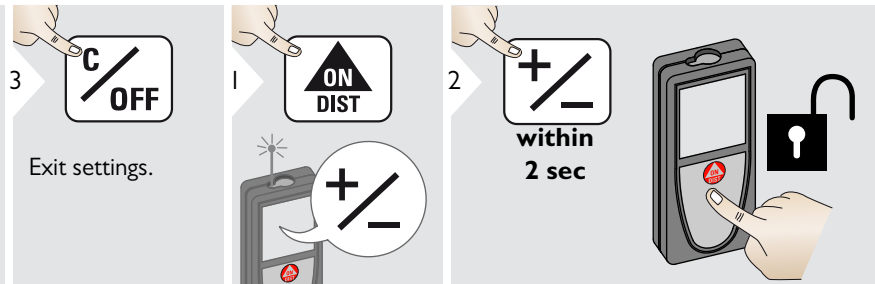


## Personalized favorites

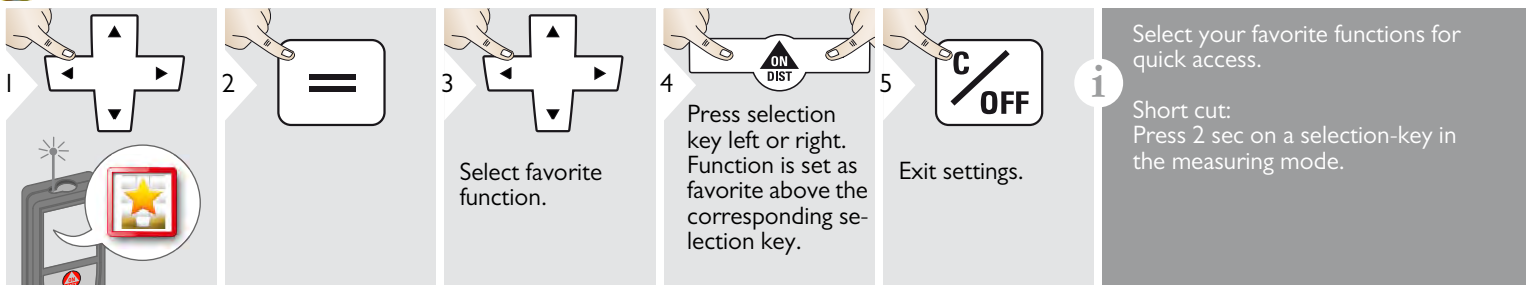

## Illumination

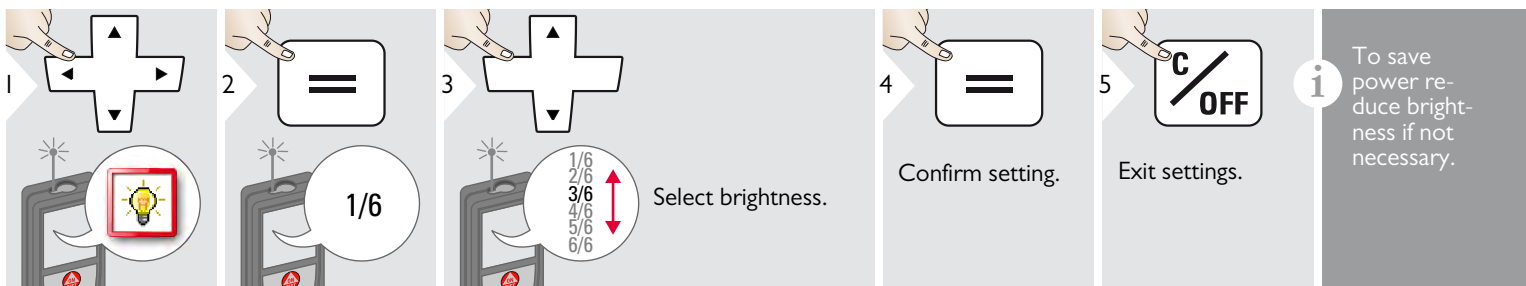

### De-/Activate Bluetooth Smart

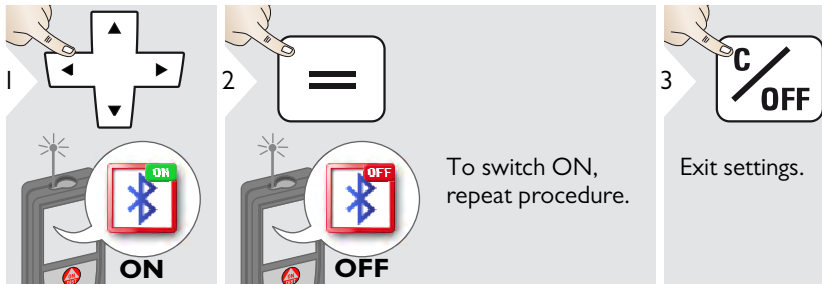

i


Default mode:  
Bluetooth is switched on.  
Bluetooth icon in status line is displayed if device is connected with Bluetooth.

i






Switch on Bluetooth Smart in Settings.  
Connect the device with your smart phone, pad, laptop, ...  
A blue Bluetooth symbol appears on the laser distance meter if the connection is established.  
Bluetooth switches off as soon as the laser distance meter is switched off.  
The efficient and innovative Bluetooth Smart module (with the new Bluetooth standard V4.0) works together with all Bluetooth Smart Ready devices. All other Bluetooth devices do not support the energy saving Bluetooth Smart Module, which is integrated in the device.

We provide no warranty for free DISTO™ software and offer no support for it. We accept no liability whatsoever arising from the use of the free software and we are not obliged to provide corrections nor to develop upgrades. A wide range of commercial software can be found on our homepage. Apps for Android® or Mac iOS can be found in special internet shops.  
For more details, see our homepage.








Calibration of tilt sensor (Tilt Calibration)

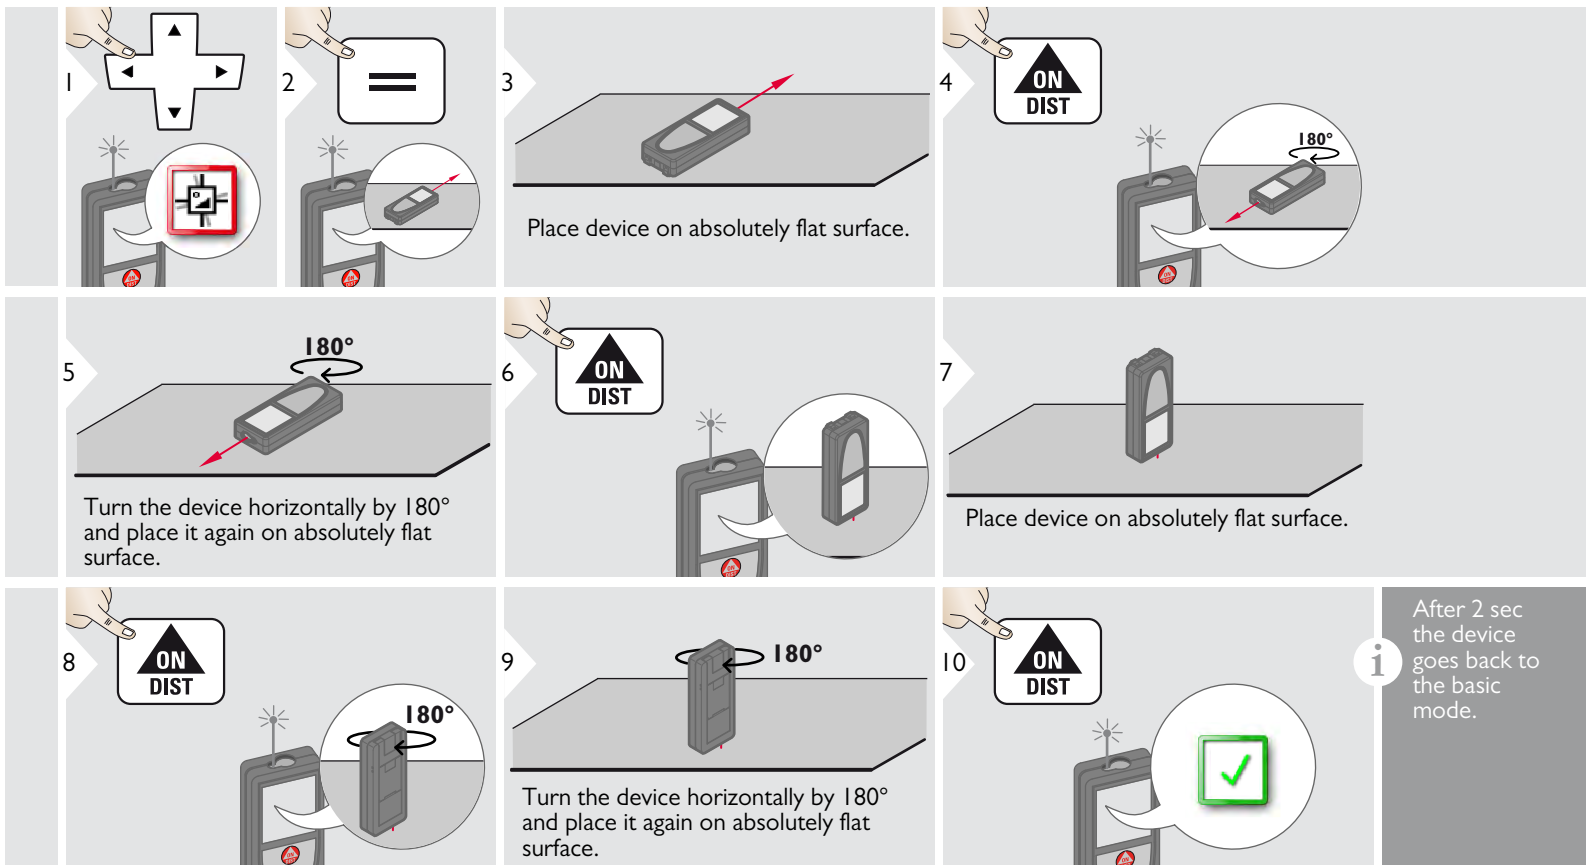



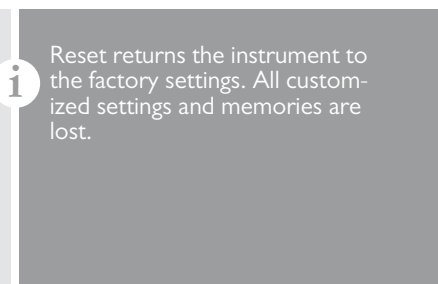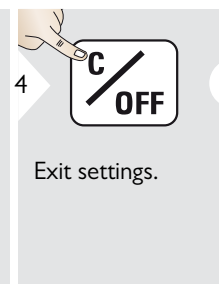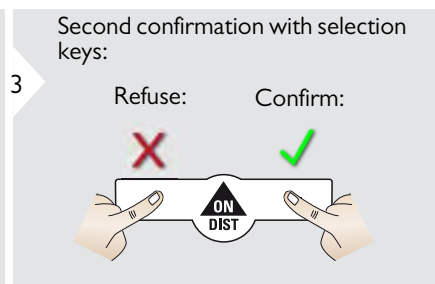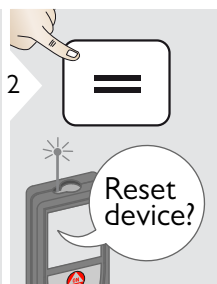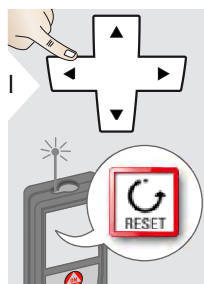



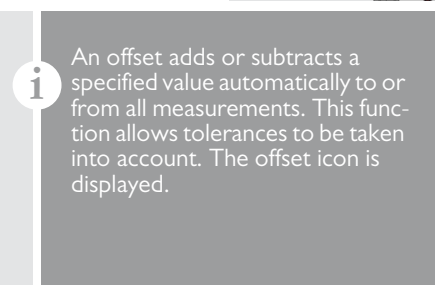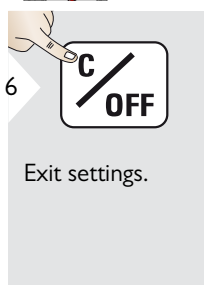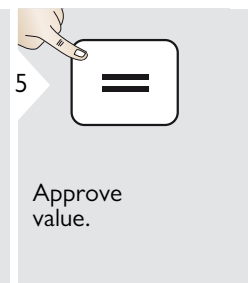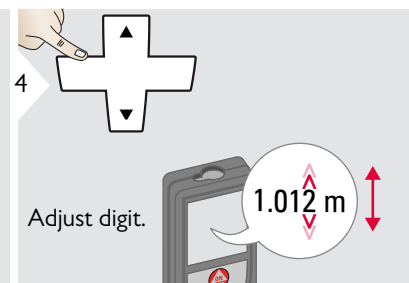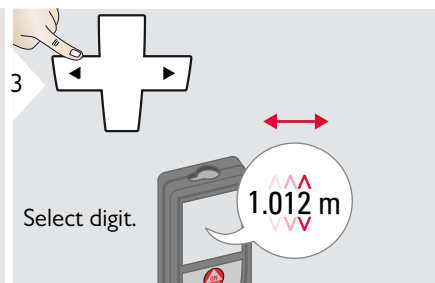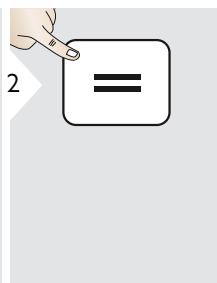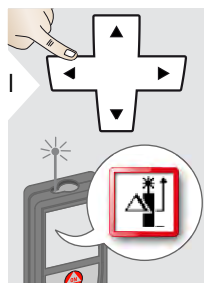













## Reset







## Offset



**Overview**

 	 Timer	 Height-profile Measurement	 Measuring on sloped objects
	 Calculator	 Area	 Height Tracking
	 Adjusting measuring reference	 Volume	 Trapezium
	 Memory	 Triangle area	 Stake out
	 Single Distance Measurement	 Long Range Mode	 Pythagoras 1
	 Smart Horizontal Mode	 Inclination Tracking	 Pythagoras 2

**Timer**

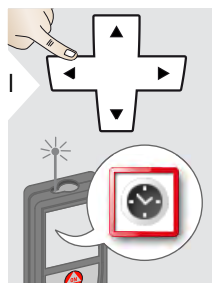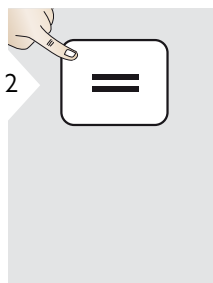
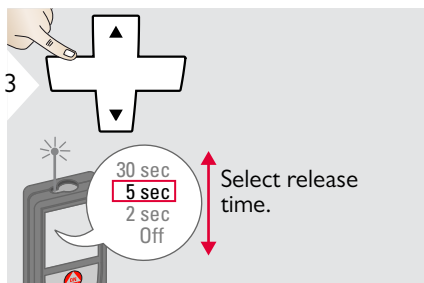
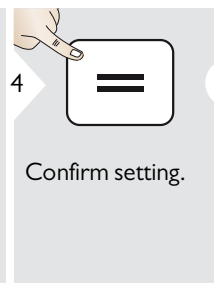





Select release time.

Confirm setting.

**i** The self release starts if ON/Measure key is pressed.

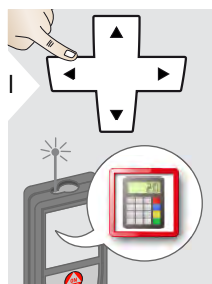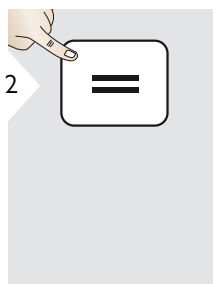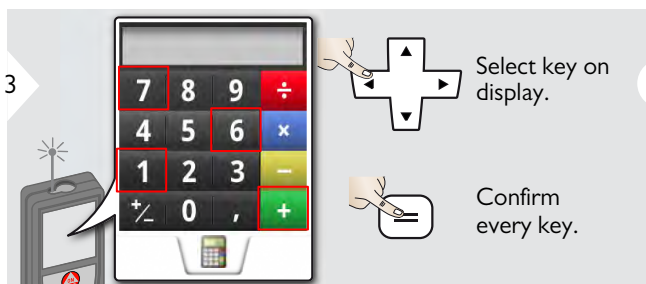**Calculator**

Select key on display.

Confirm every key.

**i** The measurement result from the main line is taken over to the calculator and can be used for further calculations. Ft/in fractions are converted into Meters.

**Adjusting measuring reference/tripod**

1

2

3

4

Confirm setting.

Distance is measured from the rear of the device (standard setting).

Distance is measured from the front of the device (lock symbol = permanently).

Distance is measured from the tripod thread permanently.

**i** If device is switched off, reference goes back to standard setting (rear of the device).

**Memory**

1

2

3

4


Switch between measurements.

12.208 m  
6.554 m  
23.889 m

Use Up/Down navigation keys to show more results.

**i** Short cut


**Measuring single distance**

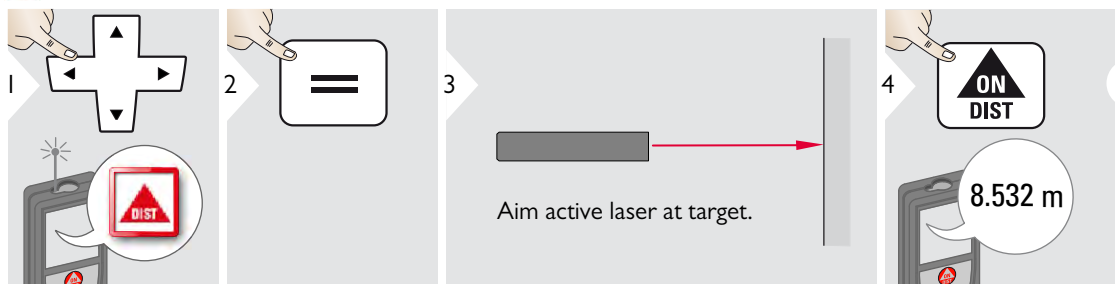

**i**


**Target surfaces:**  
Measuring errors can occur when measuring to colourless liquids, glass, styrofoam or semi-permeable surfaces or when aiming at high gloss surfaces. Against dark surfaces the measuring time increases.

**Smart Horizontal Mode**


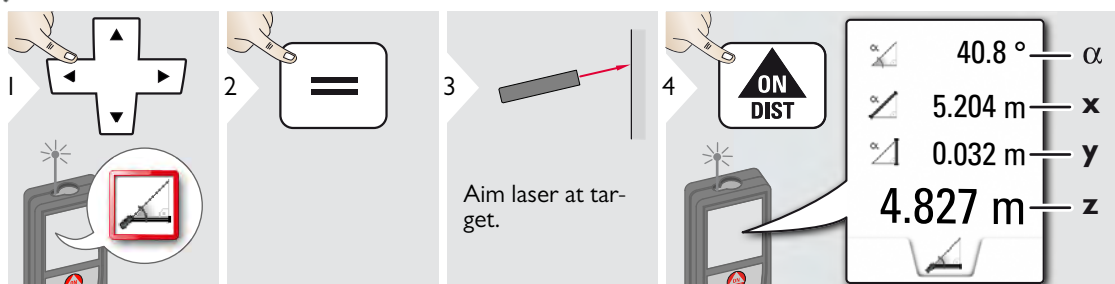


(up to 360° and a transverse tilt of  $\pm 10^\circ$ )

**Height-profile measurement**

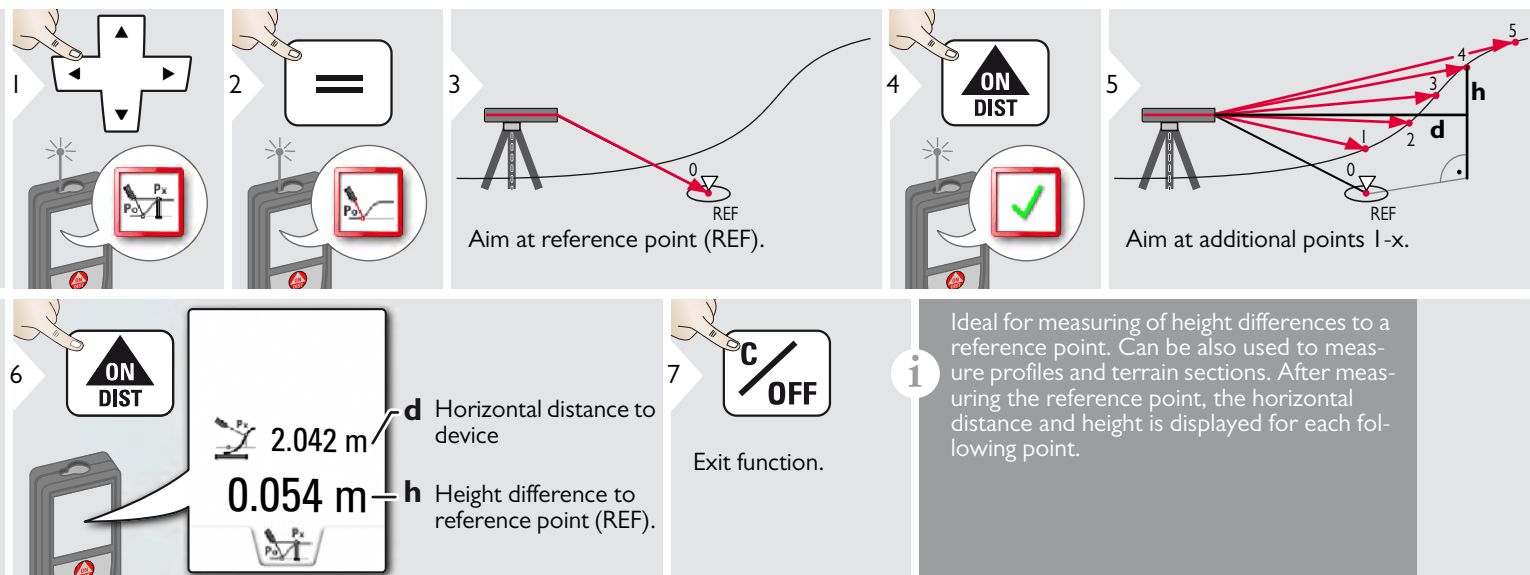


**Area**

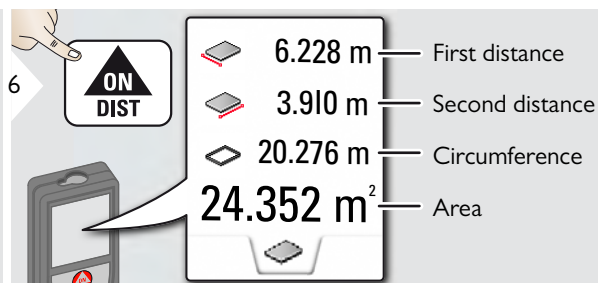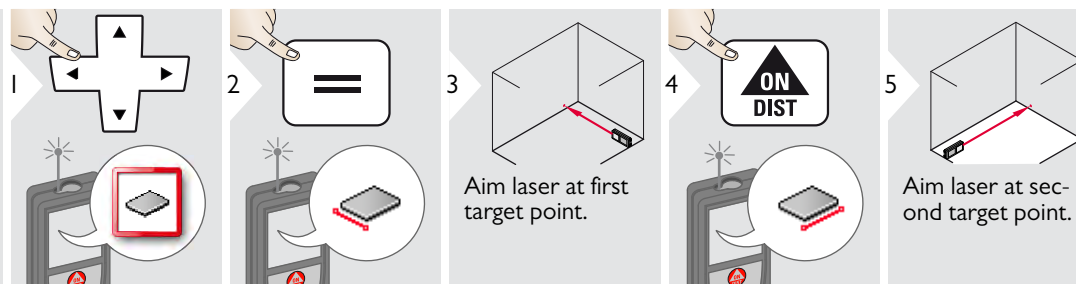


The result is shown in the main line and the measured value above.  
Partial Measurements / Painter function:  
Press + or - after starting the first measurement. Measure and add or subtract distances. Finish with DIST. Measure 2nd length.


**Volume**

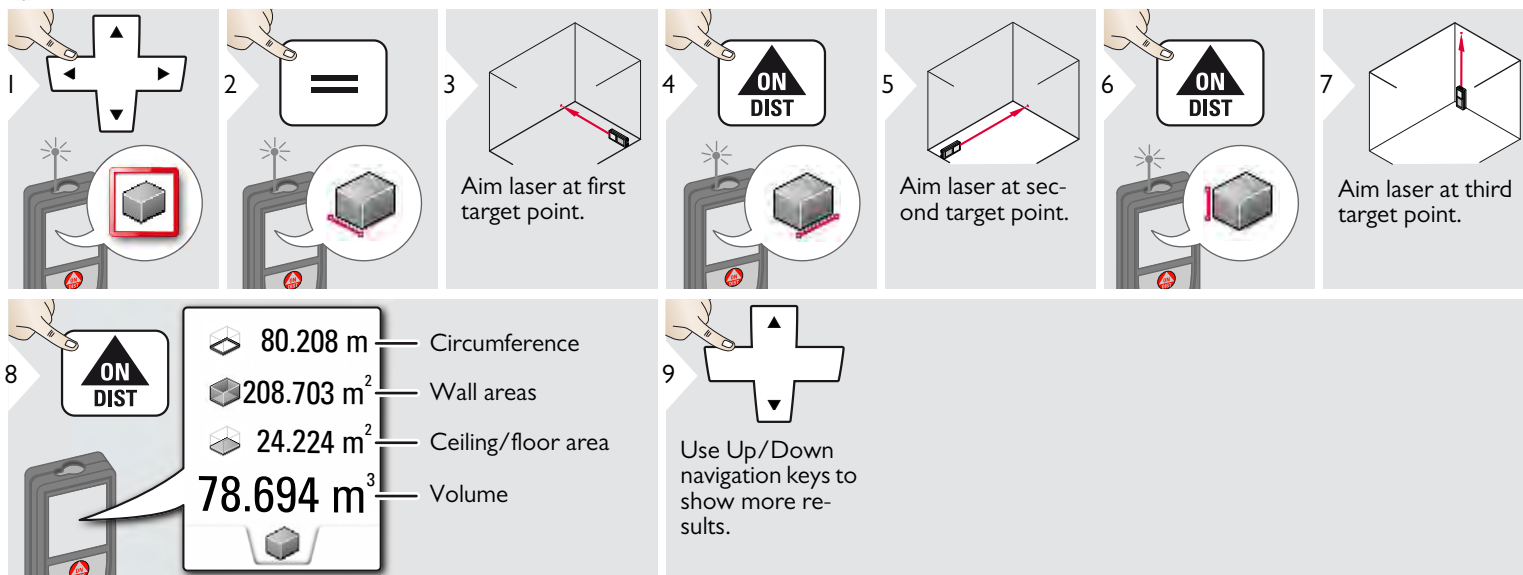


**Triangular area**

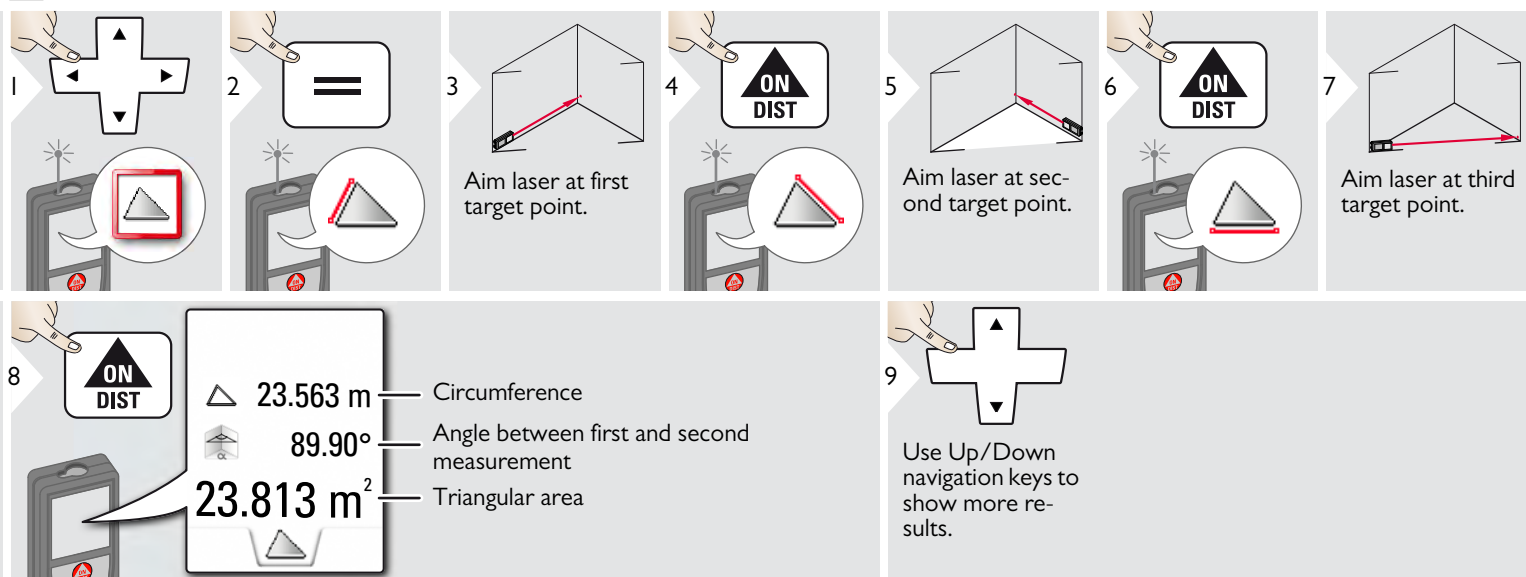

**Long range mode**



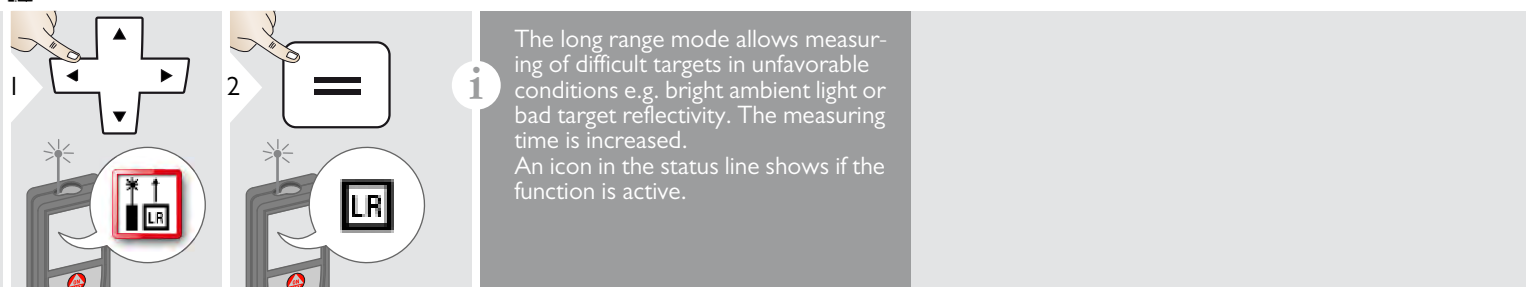


### **Inclination tracking**

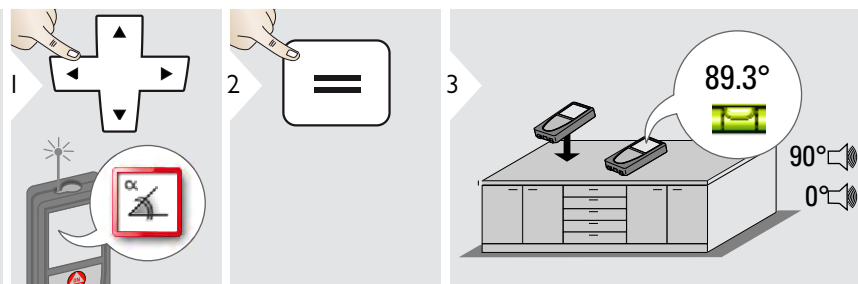

**i** Inclination is permanently displayed. Instrument beeps at 0° and 90°. Ideal for horizontal or vertical adjustments.

### **Sloped objects**

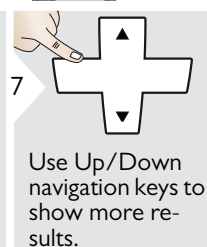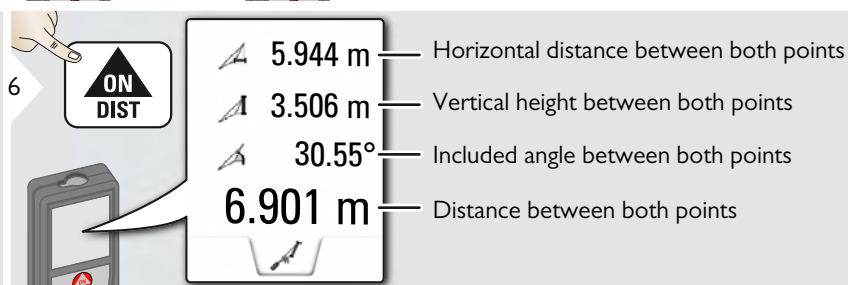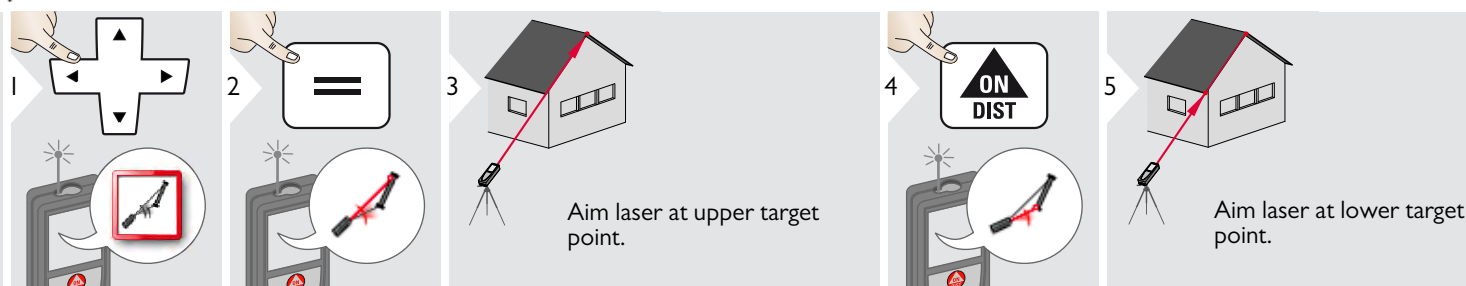

**i** Indirect distance measuring between 2 points with additional results. Ideal for applications such as length and slope of roof, height of chimneys, ... It is important, that the instrument is positioned in the same vertical plane as the 2 measured points. The plane is defined of the line between the 2 points.

## Height tracking

**1**

**2**

**3**

Aim laser at lower point.

**4**

**5**

Aim laser at upper points and angle/height tracking starts automatically.

**6**

6.932 m — **x**

**9.827 m** — **y** = Tracking height if device is turned on tripod

**7**


Stops height tracking and displays last measurement.

**8**

Use Up/Down navigation keys to show more results.

**i** Heights of buildings or trees without suitable reflective points can be determined. At the bottom point, distance and tilt is measured - which needs a reflective laser target. The upper point can be targeted with the pointfinder / crosshair and does not need a reflective laser target as only the inclination is measured.





**Trapezium**

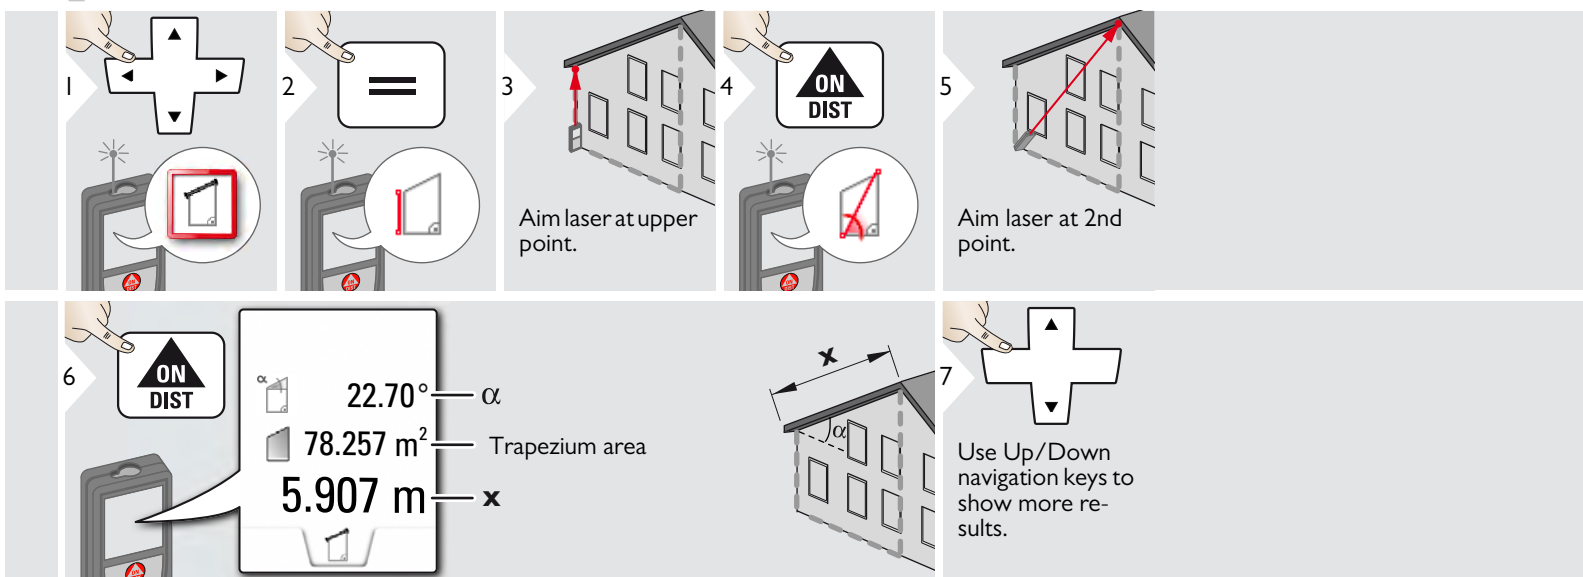


**Stake out**

**i**


Two different distances (a and b) can be entered to mark off defined measured lengths.

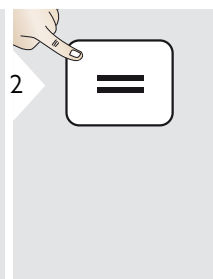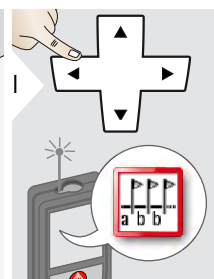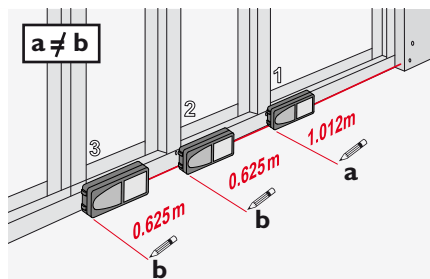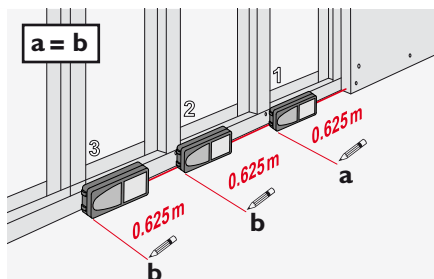



**3**

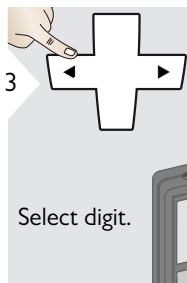


Select digit.

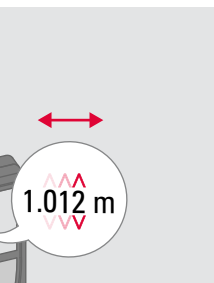


Adjust digit.

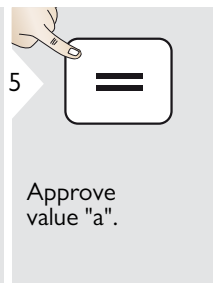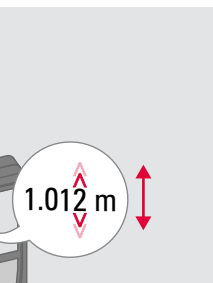

Approve value "a".

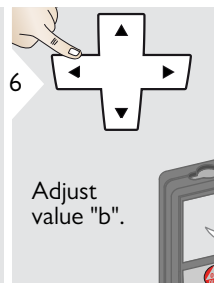


Adjust value "b".

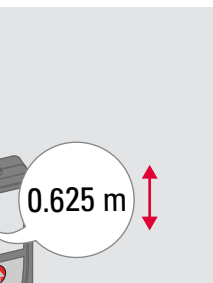

**7**



Approve value "b" and start measurement.

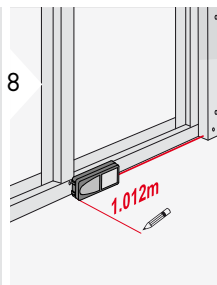


**8**

Move device slowly along the stake-out line. The distance to the next stake out point is displayed.




0.240 m is missing up to next 0.625 m distance.

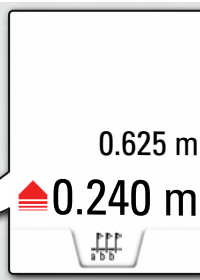

**i**

When approaching a stake out point to less than 0.1 m the instrument starts to beep. The function can be stopped by pressing the CLEAR/OFF button.

**Pythagoras (2-point)**

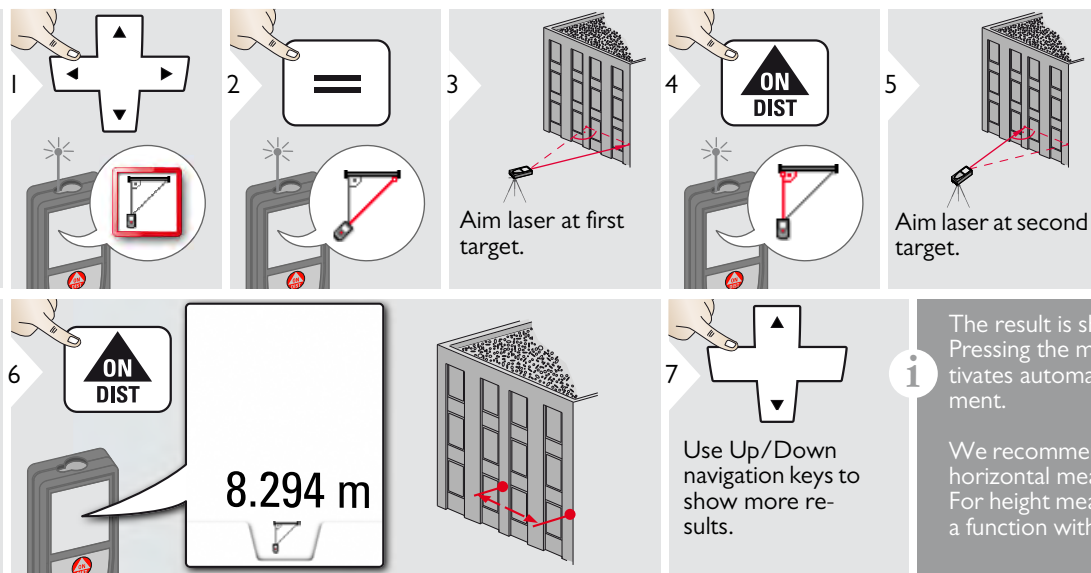

The result is shown in the main line.  
Pressing the measuring key for 2 sec in the function activates automatically Minimum or Maximum measurement.

We recommend to use the pythagoras only for indirect horizontal measuring.  
For height measuring (vertical) it is more precise to use a function with the inclination measuring.

**Pythagoras (3-point)**

1. Press the cross key.

2. Press the equals key.

3. Aim laser at first target.

4. Press the ON DIST key.

5. Aim laser at second target.

6. Press the ON DIST key.

7. Aim laser at third target.

8. The result is shown in the main line. Pressing the measuring key for 2 sec in the function activates automatically Minimum or Maximum measurement.

9. Use Up/Down navigation keys to show more results.

The result is shown in the main line. Pressing the measuring key for 2 sec in the function activates automatically Minimum or Maximum measurement.

We recommend to use the pythagoras only for indirect horizontal measuring. For height measuring (vertical) it is more precise to use a function with inclination measurement.

## Technical Data

EN

Distance measurement	
<b>Typical Measuring Tolerance*</b>	± 1.0 mm / ~1/16" ***
<b>Maximum Measuring Tolerance**</b>	± 2.0 mm / 0.08 in ***
<b>Typical Range*</b>	200 m / 660 ft
<b>Range at unfavourable condition ****</b>	80 m / 260 ft
<b>Smallest unit displayed</b>	0.1 mm / 1/32 in
<b>Power Range Technology™</b>	yes
<b>Ø laser point at distances</b>	6 / 30 / 60 mm (10 / 50 / 100 m)
Tilt measurement	
<b>Measuring tolerance to laser beam*****</b>	± 0.2°
<b>Measuring tolerance to housing*****</b>	± 0.2°
<b>Range</b>	360°
General	
<b>Laser class</b>	2
<b>Laser type</b>	635 nm, < 1 mW
<b>Protection class</b>	IP65 (dust tight and jet water protected)
<b>Autom. laser switch off</b>	after 90 s
<b>Autom. power switch-off</b>	after 180 s
<b>Bluetooth® Smart</b>	Bluetooth v4.0
<b>Battery durability (2 x AA)</b>	up to 5000 measurements
<b>Dimension (H x D x W)</b>	143 x 58 x 29 mm 5.6 x 2.28 x 1.14 in
<b>Weight (with batteries)</b>	198 g / 6.37 oz
<b>Temperature range:</b>	
- Storage	-25 to 70 °C -13 to 158 °F
- Operation	-10 to 50 °C 14 to 122 °F

\* applies for 100 % target reflectivity (white painted wall), low background illumination, 25 °C

\*\* applies for 10 to 100 % target reflectivity, high background illumination, -10 °C to +50 °C

\*\*\* Tolerances apply from 0.05 m to 10 m with a confidence level of 95%. The maximum tolerance may deteriorate to 0.1 mm/m between 10 m to 30 m, to 0.20 mm/m between 30 m to 100 m and to 0.30 mm/m for distances above 100 m

\*\*\*\* applies for 100 % target reflectivity, background illumination of approximately 30'000 lux  
\*\*\*\*\* after user calibration. Additional angle related deviation of +/- 0.01° per degree up to +/- 45° in each quadrant. Applies at room temperature. For the whole operating temperature range the maximum deviation increases by +/- 0.1°.

**i** For accurate indirect results, the use of a tripod is recommended. For accurate tilt measurements a transverse tilt should be avoided.

Functions	
<b>Distance measuring</b>	yes
<b>Min/Max measuring</b>	yes
<b>Permanent measuring</b>	yes
<b>Stake-out</b>	yes
<b>Addition/Subtraction</b>	yes
<b>Area</b>	yes
<b>Triangle area</b>	yes
<b>Volume</b>	yes
<b>Trapezium</b>	yes
<b>Painter function (area with partial measur.)</b>	yes
<b>Pythagoras</b>	2-point, 3-point
<b>Smart Horizontal Mode / Indirect height</b>	yes
<b>Height-profile measurement</b>	yes
<b>Inclination tracking</b>	yes
<b>Sloped objects</b>	yes
<b>Height tracking</b>	yes
<b>Memory</b>	30 displays
<b>Beep</b>	yes
<b>Illuminated colour display</b>	yes
<b>Multifunctional endpiece</b>	yes
<b>Pointfinder (Viewscreen)</b>	4xZoom
<b>Digital Level</b>	yes
<b>Bluetooth® Smart</b>	yes
<b>Personalized Favorites</b>	yes
<b>Timer</b>	yes
<b>Long Range Mode</b>	yes
<b>Calculator</b>	yes

## Message Codes

If the message **Error** does not disappear after switching on the device repeatedly, contact the dealer.

If the message **InFo** appears with a number, press the Clear button and observe the following instructions:

No.	Cause	Correction
156	Transverse tilt greater than 10°	Hold the instrument without any transverse tilt.
162	Calibration mistake	Make sure, the device is placed on a absolutely horizontal and flat surface. Repeat the calibration procedure. If the mistake still occurs, contact your dealer.
204	Calculation error	Perform measurement again.
240	Data transfer error	Repeat procedure.
252	Temperature too high	Let device cool down.
253	Temperature too low	Warm device up.
255	Received signal too weak, measuring time too long	Change target surface (e.g. white paper).
256	Received signal too high	Change target surface (e.g. white paper).
257	Too much background light	Shadow target area.
258	Measurement outside of measuring range	Correct range.
260	Laser beam interrupted	Repeat measurement.

## Care

- Clean the device with a damp, soft cloth.
- Never immerse the device in water.
- Never use aggressive cleaning agents or solvents.

## Warranty

### Lifetime Manufacturer's Warranty

Warranty coverage for the entire usage time of the product according to Leica Geosystems International Limited Warranty. Free of charge repair or replacement for all products that suffer defects as a result of faults in materials or manufacturing, for the entire life of the product.

### 3 Years no Cost

Guaranteed service should the product become defective and require servicing under normal conditions of use, as described in the user manual, at no additional charge.

## Safety Instructions

EN

The person responsible for the instrument must ensure that all users understand these directions and adhere to them.

### Areas of responsibility

#### Responsibilities of the manufacturer of the original equipment:

#### Responsibilities of the person in charge of the instrument:

- To understand the safety instructions on the product and the instructions in the User Manual.
- To be familiar with local safety regulations relating to accident prevention.
- Always prevent access to the product by unauthorised personnel.

## Safety Instructions

EN

### Permitted use

- Measuring distances
- Tilt measurement
- Data transfer with Bluetooth®

### Prohibited use

- Using the product without instruction
- Using outside the stated limits
- Deactivation of safety systems and removal of explanatory and hazard labels
- Opening of the equipment by using tools (screwdrivers, etc.)
- Carrying out modification or conversion of the product
- Use of accessories from other manufacturers without express approval
- Deliberate dazzling of third parties; also in the dark
- Inadequate safeguards at the surveying site (e.g. when measuring on roads, construction sites, etc.)
- Deliberate or irresponsible behaviour on scaffolding, when using ladders, when measuring near machines which are running or near parts of machines or installations which are unprotected
- Aiming directly in the sun

### Hazards in use

#### **WARNING**

Watch out for erroneous measurements if the instrument is defective or if it has been dropped or has been misused or modified. Carry out periodic test measurements. Particularly after the instrument has been subject to abnormal use, and before, during and after important measurements.

#### **CAUTION**

Never attempt to repair the product yourself. In case of damage, contact a local dealer.

#### **WARNING**

Changes or modifications not expressly approved could void the user's authority to operate the equipment.

### Limits of use



Refer to section "Technical data".

The device is designed for use in areas permanently habitable by humans. Do not use the product in explosion hazardous areas or in aggressive environments.

### Disposal

#### **CAUTION**

Flat batteries must not be disposed of with household waste. Care for the environment and take them to the collection points provided in accordance with national or local regulations.

The product must not be disposed with household waste.

Dispose of the product appropriately in accordance with the national regulations in force in your country.



Adhere to the national and country specific regulations.

Product specific treatment and waste management can be downloaded from our homepage.

## Safety Instructions

EN

### Electromagnetic Compatibility (EMC)

#### **WARNING**

The device conforms to the most stringent requirements of the relevant standards and regulations.

Yet, the possibility of causing interference in other devices cannot be totally excluded.

### Use of the product with Bluetooth®

#### **WARNING**


Electromagnetic radiation can cause disturbances in other equipment, in installations (e.g. medical ones such as pacemakers or hearing aids) and in aircraft. It can also affect humans and animals.

#### **Precautions:**

Although this product conforms to the most stringent standards and regulations, the possibility of harm to people and animals cannot totally excluded.

- Do not use the product near petrol stations, chemical plants, in areas with a potentially explosive atmosphere and where blasting takes place.
- Do not use the product near medical equipment.
- Do not use the product in airplanes.
- Do not use the product near your body for extended periods.

### Laser classification

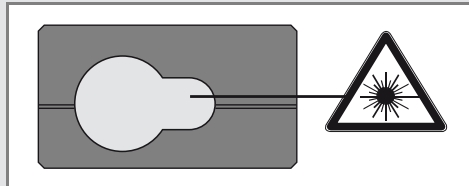

The device produces visible laser beams, which are emitted from the instrument: It is a Class 2 laser product in accordance with:

- IEC60825-1 : 2007 „Radiation safety of laser products“

#### **Laser Class 2 products:**

Do not stare into the laser beam or direct it towards other people unnecessarily. Eye protection is normally afforded by aversion responses including the blink reflex.



#### **WARNING**

Looking directly into the beam with optical aids (e.g. binoculars, telescopes) can be hazardous.

#### **CAUTION**

Looking into the laser beam may be hazardous to the eyes.

### Labelling

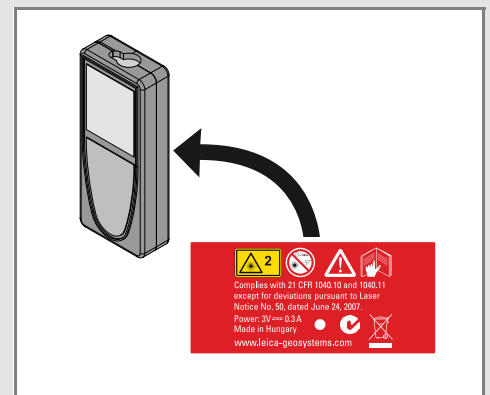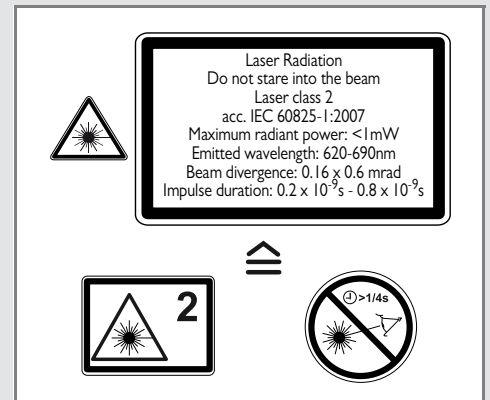

Subject to change (drawings, descriptions and technical data) without prior notice.



Leica Geosystems AG, Heerbrugg, Switzerland has been certified as being equipped with a quality system which meets the International Standards of Quality Management and Quality Systems (ISO standard 9001) and Environmental Management Systems (ISO standard 14001).

Total Quality Management - Our commitment to total customer satisfaction. Ask your local Leica Geosystems agent for more information about our TQM program.

Pat. No.: WO 9427164, WO 9818019, WO 0244754, WO 0216964,  
US 5949531, EP 1195617, US 7030969, US 8279421 B2,  
Patents pending

- when it has to be **right**

**Leica**  
**Geosystems**