

HIOKI

LR5092-20

Instruction Manual

DATA COLLECTOR



! Be sure to read this manual before using the instrument. ▶ p.3

✓ When using the instrument for the first time

Part Names/Functions ▶ p.10

Preparation for Use ▶ p.15

📖 Troubleshooting

Troubleshooting ▶ p.130

Error Display ▶ p.132

EN

Mar. 2021 Revised edition 4
LR5092B980-04 21-03H



Contents

Introduction	1
Verifying Package Contents	2
Safety Information	3
Operating Precautions	4
Preparation for Use to Data Analysis	6

Chapter 1

Overview	9
----------------	---

1.1 Product Overview and Features	9
1.2 Part Names/Functions	10
1.3 Basic Button Operations and Display Organization	11

Chapter 2

Preparation for Use	15
---------------------------	----

2.1 Installing (or Replacing) the Battery	15
■ Battery Status Indicator	16
■ When the logger will not be used for long time	16
2.2 Inserting an SD Card (When Necessary)	17
■ SD Memory Cards for which Operation is Guaranteed	18
2.3 Turning the Power On/Off	19
2.4 Inspection Before Use	20

Chapter 3

Settings (When Necessary)	21
---------------------------------	----

3.1 Making Settings with the Collector	21
3.2 Settings List	22
3.3 Sending Measurement Condition Settings to Logger	26
3.4 Receiving Measurement Condition Settings from Logger	27
3.5 Verifying Recording/Setting Status of Logger	28
3.6 Starting and Stopping Recording on Logger	29

Chapter 4	
Collecting and Browsing Data	31
4.1 Collecting Recorded Data of Logger	31
■ One-touch Collection (Collecting Data Easily by Just Pressing COLLECT Button)	31
■ Selecting the Data Save Destination and Then Performing Collection	35
Chapter 5	
Data Management	39
5.1 Displaying Data List	39
■ Displaying List of Data in Collector Memory	39
■ Displaying List of Data in SD Memory Card	40
■ File Structure in SD Memory Card	41
5.2 Moving Data in Collector Memory to SD Memory Card	42
5.3 Saving and Importing Setting Conditions	46
5.4 Clearing Data	49
■ Clearing Data from Collector Memory	49
■ Clearing Data from SD Memory Card	51
5.5 Initializing SD Memory Card	54
Chapter 6	
Collector System Settings	55
6.1 Displaying and Changing Collector System Settings	55
■ One-touch Collection	55
■ Startup Display	57
■ Language Setting	58
■ Clock Setting	59
6.2 Performing Self Checks	60
■ Firmware	60
■ LCD	61
■ Buttons and Buzzers	62
■ SD Card	63
6.3 Initializing the Collector (Restoring to Factory Default State)	64

Chapter 7	
Using the LR5000 Utility Program	65
7.1 Installing the PC Application Program	65
■ LR5000 Utility Program Screens	69
7.2 Setting the Collector from the LR5000 Utility Program	72
7.3 Saving Setting Data from the LR5000 Utility Program to the SD Memory Card	83
7.4 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display	85
7.5 Manually Importing (Saving) Recorded Data to a Computer, and Graph Display	94
7.6 Importing Recorded Data from SD Memory Card to Computer and Displaying Graph	97
7.7 Displaying a Graph of Saved Recording Data	101
7.8 Processing Recorded Data	103
■ Scaling	105
■ Calculating Electric Power	106
■ Calculating Energy Cost	107
■ Calculating Operating Rate	108
■ Integration	109
■ Calculating Dew-Point Temperature	110
■ Two-Data-Item Arithmetic Calculations	111
■ Converting Over-Threshold Data Values	112
7.9 Printing Recorded Data	113
7.10 Organizing Data	114
■ Copying and Moving Data	115
■ Deleting Data	116
■ Combining Data	117
■ Extracting Data	118
7.11 Options Settings (LR5000 Utility Program)	119
■ Changing the Saving Method for Imported Data	120
■ Changing the Connection Monitoring Method, and Logger Settings Displays	121

Chapter 8	
Specifications	123
8.1 Main Unit General Specifications	123
8.2 Functions	125
Chapter 9	
Maintenance and Service	129
■ Requesting Repairs	129
■ When the logger will not be used for long time	129
■ Lifespan of Backup Battery	129
9.1 Cleaning	129
9.2 Troubleshooting	130
9.3 Error Display	132
9.4 Disposing of the Logger	135
Index	index i

Introduction

Thank you for purchasing the HIOKI "Model LR5092-20 Data Collector." To obtain maximum performance from the instrument, please read this manual first, and keep it handy for future reference.

Trade Marks

- Microsoft and Excel are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- The SD logo is a trademark of SD-3C, LLC. 

Notation

	Indicates a prohibited action.
(p.)	Indicates the location of reference information.
	Indicates hints on operation and troubleshooting.
*	Indicates that descriptive information is provided below.
[]	Menus, commands, dialogs, buttons in a dialog, and other names on the screen and the keys are indicated in brackets.
SET (Bold characters)	Bold characters within the text indicate operating key labels.
Windows	Unless otherwise specified, "Windows" represents Windows 7 or Windows 10.
Dialog	Dialog box represents a Windows dialog box.

◆ Mouse Operation

Click	Press and quickly release the left button of the mouse.
Right-click	Press and quickly release the right button of the mouse.
Double click	Double click: Quickly click the left button of the mouse twice.
Drag	While holding down the left button of the mouse, move the mouse and then release the left button to deposit the chosen item in the desired position.
Activate	Click on a window on the screen to activate that window.

2

Verifying Package Contents

Verifying Package Contents

When you receive the instrument, inspect it carefully to ensure that no damage occurred during shipping. In particular, check the accessories, panel switches, and connectors. If damage is evident, or if it fails to operate according to the specifications, contact your dealer or Hioki representative.

Quantities in parentheses ().

☐ LR5092-20 (1)	<u>Accessories</u>	
	☐ LR6 alkaline battery (2)	☐ USB cable (1 m) (1)
		
	☐ LR5000 Utility Program CD (PC application software)* (1)	☐ Instruction manual (1)
		
	*:The latest version can be downloaded from our web site.	
	☐ Operation manual (1)	
		

Transporting Precautions

Use the original packing materials when transporting the logger, if possible. Pack the logger so that it will not sustain damage during shipping, and include a description of existing damage. We do not take any responsibility for damage incurred during shipping.

Safety Information

This manual contains information and warnings essential for safe operation of the instrument and for maintaining it in safe operating condition. Before using it, be sure to carefully read the following safety precautions.



This logger is designed to comply with IEC 61010 Safety Standards, and has been thoroughly tested for safety prior to shipment. However, mishandling during use could result in injury or death, as well as damage to the logger. However, using the logger in a way not described in this manual may negate the provided safety features.

Be certain that you understand the instructions and precautions in the manual before use. We disclaim any responsibility for accidents or injuries not resulting directly from logger defects.

Safety Symbols

Markings on the logger have the following meanings.



In the manual, the  symbol indicates particularly important information that the user should read before using the instrument.



The  symbol printed on the instrument indicates that the user should refer to a corresponding topic in the manual (marked with the  symbol) before using the relevant function.



Indicates the ON side of the power switch.



Indicates the OFF side of the power switch.



Indicates DC (Direct Current).

Symbols for Various Standards

Markings on the logger have the following meanings.



Indicates that the product complies with standards imposed by EU directives.



This symbol indicates that the product conforms to safety regulations set out by the EC Directive.

4

Operating Precautions

Danger Levels

The following symbols in this manual indicate the relative importance of cautions and warnings.

 DANGER	Indicates that incorrect operation presents an extreme hazard that could result in serious injury or death to the user.
 WARNING	Indicates that incorrect operation presents a significant hazard that could result in serious injury or death to the user.
 CAUTION	Indicates that incorrect operation presents a possibility of injury to the user or damage to the instrument.
 NOTE	Indicates advisory items related to performance or correct operation of the instrument.

Operating Precautions

Follow these precautions to ensure safe operation and to obtain the full benefits of the various functions.

Installation Precautions

Operating temperature and humidity: 0 to 40°C, 80%RH or less (non-condensating)
Storage temperature and humidity: -10 to 50°C, 80%RH or less (non-condensating)

Avoid the following locations that could cause an accident or damage to the logger.

	Exposed to direct sunlight Exposed to high temperature		In the presence of corrosive or explosive gases
	Exposed to oil, other chemicals, or solvents Exposed to high humidity or condensation		Exposed to strong electromagnetic fields Near electromagnetic radiators
	Exposed to high levels of particulate dust		Near induction heating systems (e.g., high-frequency induction heating systems and IH cooking utensils)
	Subject to vibration		

Avoiding Collector Damage

CAUTION

To avoid damage to the instrument, protect it from physical shock when transporting and handling. Be especially careful to avoid physical shock from dropping.

CD Handling

CAUTION

- Always hold the disc by the edges, so as not to make fingerprints on the disc or scratch the printing. Never touch the recorded side of the disc. Do not place the disc directly on anything hard.
- Do not wet the disc with volatile alcohol or water, as there is a possibility of the label printing disappearing.
- To write on the disc label surface, use a spirit-based felt pen. Do not use a ball-point pen or hard-tipped pen, because there is a danger of scratching the surface and corrupting the data. Do not use adhesive labels.
- Do not expose the disc directly to the sun's rays, or keep it in conditions of high temperature or humidity, as there is a danger of warping, with consequent loss of data.
- To remove dirt, dust, or fingerprints from the disc, wipe with a dry cloth, or use a CD cleaner. Always wipe from the inside to the outside, and do no wipe with circular movements. Never use abrasives or solvent cleaners.
- Hioki shall not be held liable for any problems with a computer system that arises from the use of this CD, or for any problem related to the purchase of a Hioki product.

Preliminary Checks

Before using the instrument the first time, verify that it operates normally to ensure that the no damage occurred during storage or shipping. If you find any damage, contact your dealer or Hioki representative.

WARNING

Before using the instrument, make sure that the insulation on the USB cable is undamaged and that no bare conductors are improperly exposed. Using the device in such conditions could cause an electric shock, so contact your dealer or Hioki representative for replacements.

6

Preparation for Use to Data Analysis


Preparation for Use to Data Analysis

The steps from measurement preparation to data analysis are illustrated with a typical usage example for the collector.


Example Case: The variations in the temperature and humidity of a warehouse have been measured with eight LR5001 Temperature/Humidity Loggers. Collect the data of all loggers, send the data to a computer, and analyze and store the data on the computer.


Required Items:

Quantities in parentheses ().

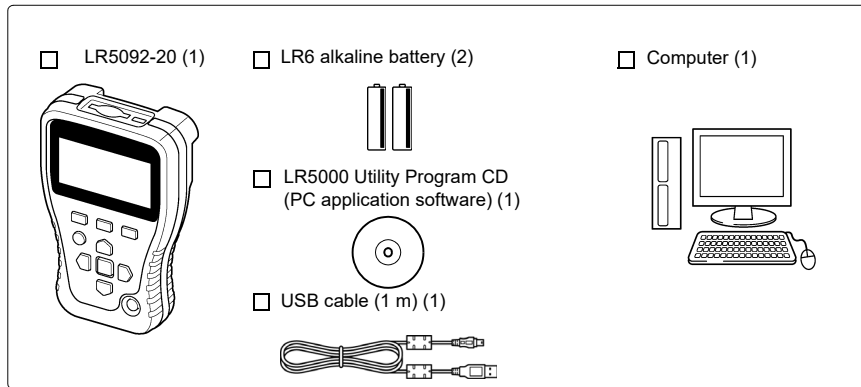

Procedure:

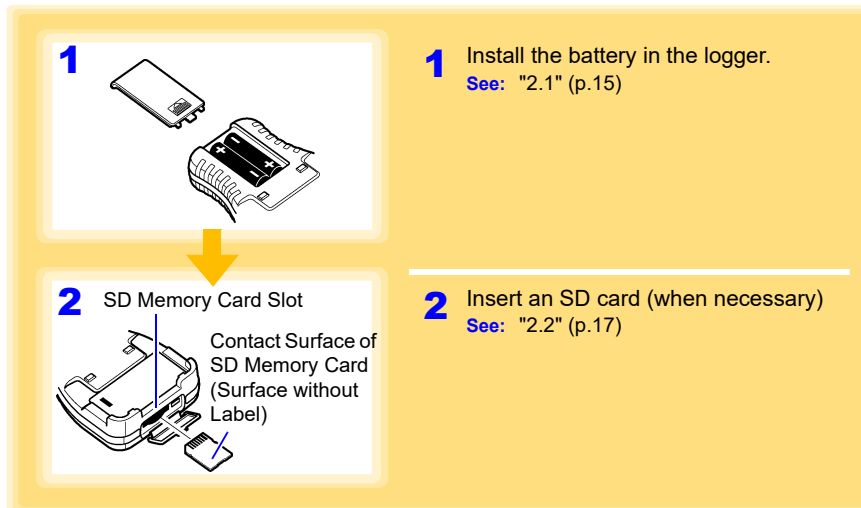

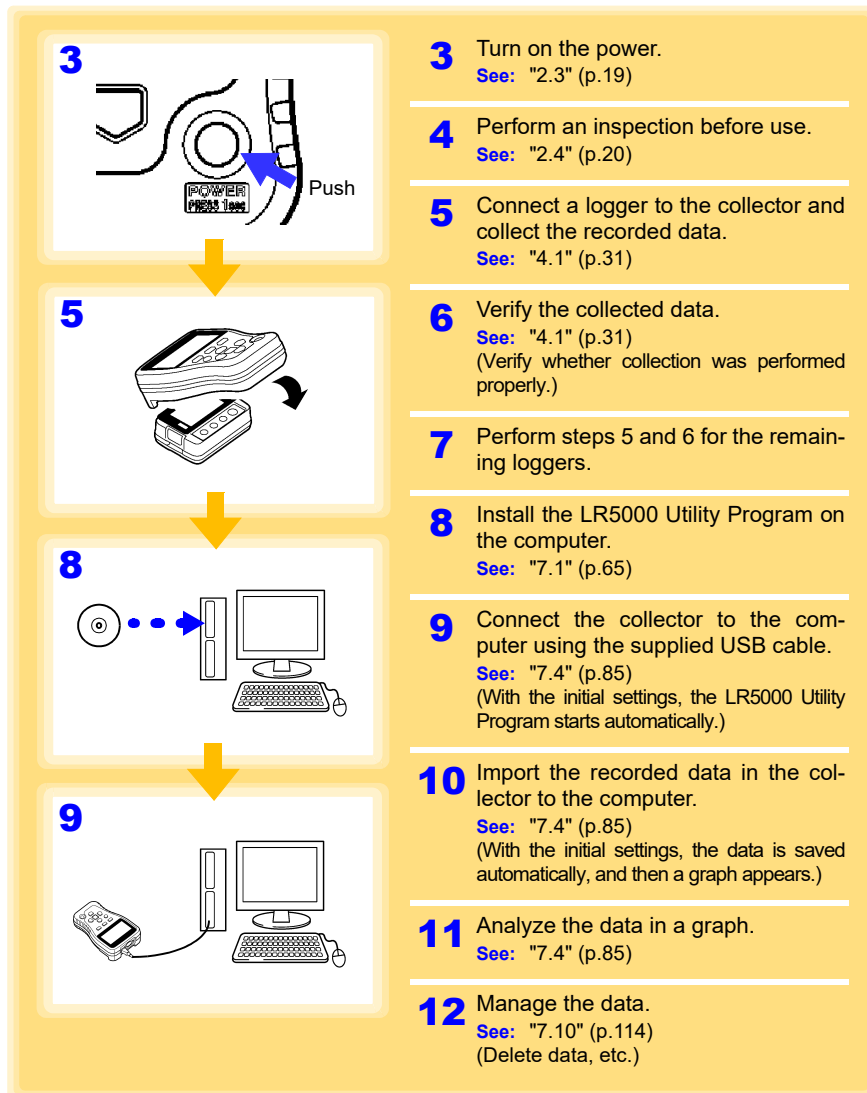

The settings of a logger can be made with the collector or the LR5000 Utility Program.

See: "3.1" (p.21), "7.2" (p.72), "7.3" (p.83)



The collector can control the starting and stopping of recording on the logger.

See: "3.6" (p.29)



How can data be printed?

See: "7.9" (p.113)

Overview

Chapter 1

1

Chapter 1 Overview

1.1 Product Overview and Features

This instrument is a compact data collector that can set the measurement conditions and import the recording data of the LR5000-series loggers. This is useful when you are using multiple loggers.

SD Memory Card Support


You can easily transfer data to a computer.

See: "SD Memory Cards for which Operation is Guaranteed" (p.18)



Large Display Shows Recorded Data as Numerical Values and a Graph

You can check the recorded data imported from a logger on site.





Manage and Browse Data with the LR5000 Utility Program

The LR5000 Utility Program is very easy to install. After installation, data management and browsing is easy with auto-start, data display and saving.



For home, office, factory, and warehouse environment measurements

Suitable for ESCO, HACCP, and ISO environmental measurements.

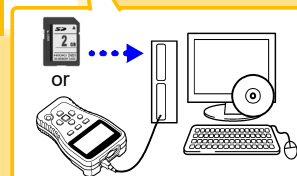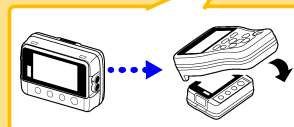


1.2 Part Names/Functions

Front

Display (p.11)

The backlight turns off if no operation is performed for approximately 30 seconds. The backlight turns on again when a button is pressed or communication is performed.

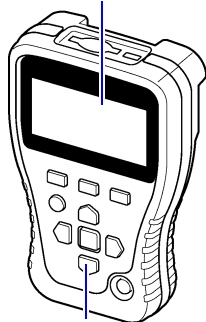

Operating Buttons

Back

USB Port (p.72)


Connect a computer using the supplied USB cable.

SD Memory Card Slot (p.17)

Insert an SD memory card


IR Port (p.31)

Enables communication with the IR port of logger.

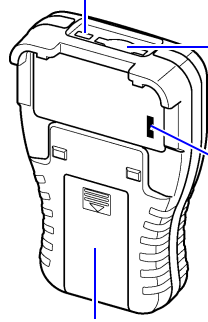

Battery Cover (p.15)

Operating Buttons

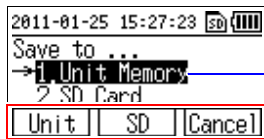

Cursor

F button menus (The menu differs depending on the item.)

F1 button

Executes the left F button menu.

F2 button

Executes the center F button menu.

F3 button

Executes the right F button menu.


COLLECT button

Collects the recorded data from the logger.

See: One-touch Collection (p.31)

ENTER button

Executes the selected menu

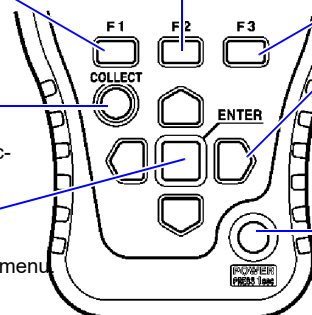

Cursor button

Moves the cursor.

POWER button

Press and hold this button (for approximately 1 second) to turn the power on/off.

The power is turned off automatically (auto power off) when no operation is performed for approximately 1 minute.

Display

1

Current Date
Indicates the set date that is currently set.
See: "Clock Setting" (p.59)

SD Memory Card Indicator
Lit when an SD memory card is inserted.
See: "2.2 Inserting an SD Card (When Necessary)"

Battery Status Indicator (p.16)
Indicates the battery charge status.

Cursor
The cursor can be moved with the cursor buttons.

F Button Menus
The menus can be executed with the F buttons.

1.3 Basic Button Operations and Display Organization

This section describes the basic button operations and display organization of the collector.

Basic Button Operations


- 1 Move the cursor and select menus and items with the buttons.
- 2 Execute items with the (ENTER button) buttons.
And (Or)
Execute **F** button menus with the F buttons.

12

1.3 Basic Button Operations and Display Organization

Display Organization


Startup Display (Top Display)

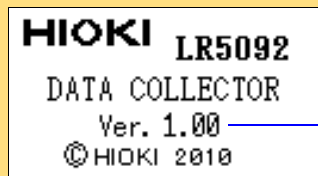

This display is shown for several seconds.

Software version information

Memory Usage Status Display

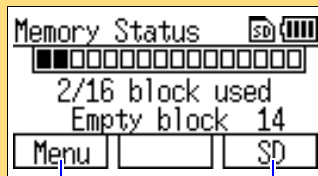


This display appears when [Startup Display] is set to [Memory Status].

Use the F button to select the next display to show.

To Menu display

To SD Card display (p.14)


Top Display

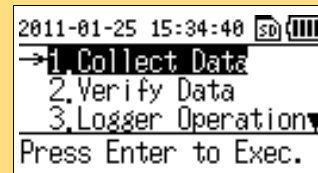

This display appears when [Startup Display] is set to [Menu Display].

Select and execute a menu to show the corresponding display.


Collect Data	Shows the Data Collection display. (p.13)
Verify Data	Shows the Data Verification display. (p.13)
Logger Operation	Shows the Logger Operation/Settings display. (p.13)
SD Card	Shows the SD Card display. (p.14)
Unit Settings	Shows the Collector Settings display. (p.14)

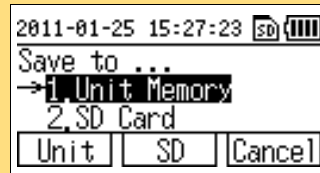Data Collection display

Shows the data collection operation menu items.

Set the collection destination and collection method for data.


See: "Selecting the Data Save Destination and Then Performing Collection" (p.35)

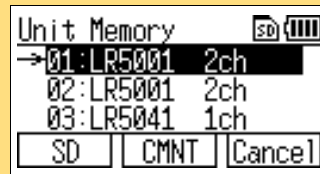Data Verification display

Shows a list of the recorded data that was collected.

The following operations are possible.

- Showing detailed display of data (numerical values and graph) (p.39)
- Moving data to SD memory card (p.42)
- Clearing data (p.49)

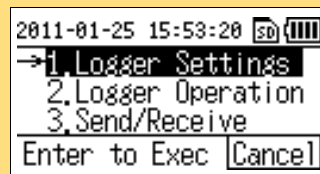Logger Operation/Settings display

Shows operation menu items for operating and setting a logger.


The following operations are possible.

- Setting the measurement conditions of a logger (p.21)
- Sending the settings of measurement conditions to a logger (p.26)
- Receiving the settings of a logger (p.27)
- Verifying the recording conditions and setting conditions of a logger (p.28)
- Starting and stopping recording on a logger (p.29)

14

1.3 Basic Button Operations and Display Organization

SD Card display

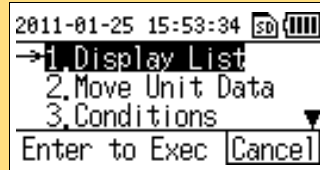

Shows the data management menu items.

The following operations are possible.

- Showing a list of data in an SD memory card (p.39)
- Moving data from the collector memory to an SD memory card (p.42)
- Saving the logger setting conditions in the collector to an SD memory card, or importing logger setting conditions from an SD memory card (p.46)
- Clearing individual or all data in an SD memory card (p.49)
- Initializing an SD memory card (p.54)

Collector Settings display



Shows menu items for the system settings and other settings.

The following operations are possible.

- Showing and changing the system settings of the collector (one-touch collection, startup display, language setting, and clock setting) (p.55)
- Performing self checks (p.60)
- Initializing the collector (restoring the settings to the factory default settings) (p.64)

Preparation for Use Chapter 2

2

2.1 Installing (or Replacing) the Battery

WARNING


- After replacing the batteries, replace the cover before using the instrument.
- Do not mix old and new batteries, or different types of batteries. Also, be careful to observe battery polarity during installation. Otherwise, poor performance or damage from battery leakage could result.
- Battery may explode if mistreated. Do not short-circuit, recharge, disassemble or dispose of in fire.
- Handle and dispose of batteries in accordance with local regulations.

NOTE

- Data and settings stored in the collector are retained even when the batteries are depleted, and during battery replacement.
- The clock can keep good time for several minutes even when the battery is removed during a battery change.

Battery Replacement

Required Items: LR6 alkaline battery (2)

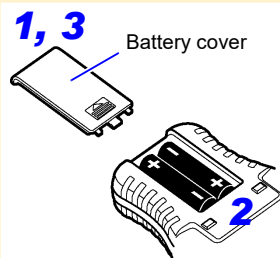

- 1** Remove the battery cover from the back of the collector.
- 2** Install the batteries as shown.
- 3** Close the battery cover.

16

2.1 *Installing (or Replacing) the Battery*

Battery Status Indicator

This indicator is displayed at the top right corner.



Battery power remaining (The blocks disappear from the left as battery power reduces.)



Batteries depleted (It is time to replace the batteries. Communication with a logger is not possible in this state.)

- The data saved to the collector and time settings are retained even when the batteries are depleted or replaced.
- When the collector is connected to a computer via a USB cable, the battery power is not consumed because power is supplied to the collector from the computer.

NOTE

The  indicator appears when battery voltage becomes low. Replace the batteries as soon as possible.

Using a NiMH Battery

The battery status indicator does not accurately show the remaining battery capacity when using a NiMH battery. Moreover, the battery life will vary greatly with the capacity, charging conditions and repeated uses. Please take note of these points when using it.

The device's battery status display and battery life are based on the usage of a brand-new alkaline battery.

When the logger will not be used for long time



CAUTION

To avoid corrosion and damage to this instrument from battery leakage, remove the batteries from the instrument if it is to be stored for a long time (1 week).

2.2 Inserting an SD Card (When Necessary)

The recording data of a logger can also be collected in not just the collector memory but also in an SD memory card.

When you want to collect the data in an SD memory card, insert the SD memory card in the collector.

It is also possible to move the data in the collector memory to an SD memory card. (p.42)

CAUTION

- Inserting a SD memory card upsidedown, backwards or in the wrong direction may damage the instrument or the SD memory card.
- Never remove an SD memory card while it is being accessed by the collector.
The data in the SD memory card may be corrupted.
- When the collector is using the batteries, the data may not be able to be saved properly if the batteries are depleted during saving.
In the worst case, the memory card may be damaged so pay sufficient attention to amount of remaining battery power.

NOTE


- SD memory cards have a limited life due to using flash memory.
If an SD memory card is used for a long time, the storage and importing of data will become no longer possible.
If this happens, purchase a new SD memory card.
- Hioki will not compensate for the loss of any data stored in an SD memory card regardless of circumstances or cause of the failure or damage that resulted in the loss. Be sure to back up any important data in an SD memory card.
- It is possible to record the Data Logger's recorded data (60,000 data) up to 10000ch (up to 5000 for 2 ch recorded Data Logger of LR5001, etc.) on a 2GB SD memory card.
However, avoid using up the total data storage capacity. Accessing the SD memory card from the LR5092 and PC utility program will become extremely slow.
It is recommended to regularly delete those data from the SD memory card that have been transferred to the PC.

18

2.2 Inserting an SD Card (When Necessary)


How to Insert an SD Memory Card

Required Items: SD memory card (1)

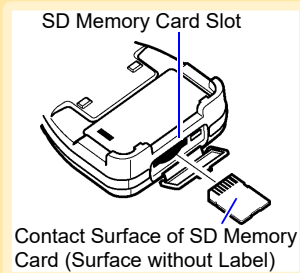

- 1 Open the cover of the SD memory card slot.
- 2 Insert the SD memory card while paying attention to the orientation of the card.

How to Remove an SD Memory Card

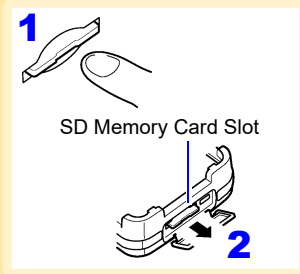

- 1 Press the SD memory card.
(The SD memory card is ejected.)
- 2 Pull the SD memory card straight out.

SD Memory Cards for which Operation is Guaranteed


HIOKI Z4001 SD Memory Card 2GB

HIOKI Z4003 SD Memory Card 8GB

We strongly recommend using Hioki optional SD memory cards.

2

Chapter 2 Preparation for Use



HIOKI LR5092
DATA COLLECTOR
Ver. 1.00
© HIOKI 2010

Memory Status

2/16 block used
Empty block 14

Menu SD

To SD Card display

2011-01-25 15:34:40  


→ 1. Collect Data
2. Verify Data
3. Logger Operation▼

Press Enter to Exec.

SD Usage			
Capacity	1955MB		
Used	2MB		
Empty	1953MB		
Menu			Unit

2.4 Inspection Before Use

Inspect the following items before use.

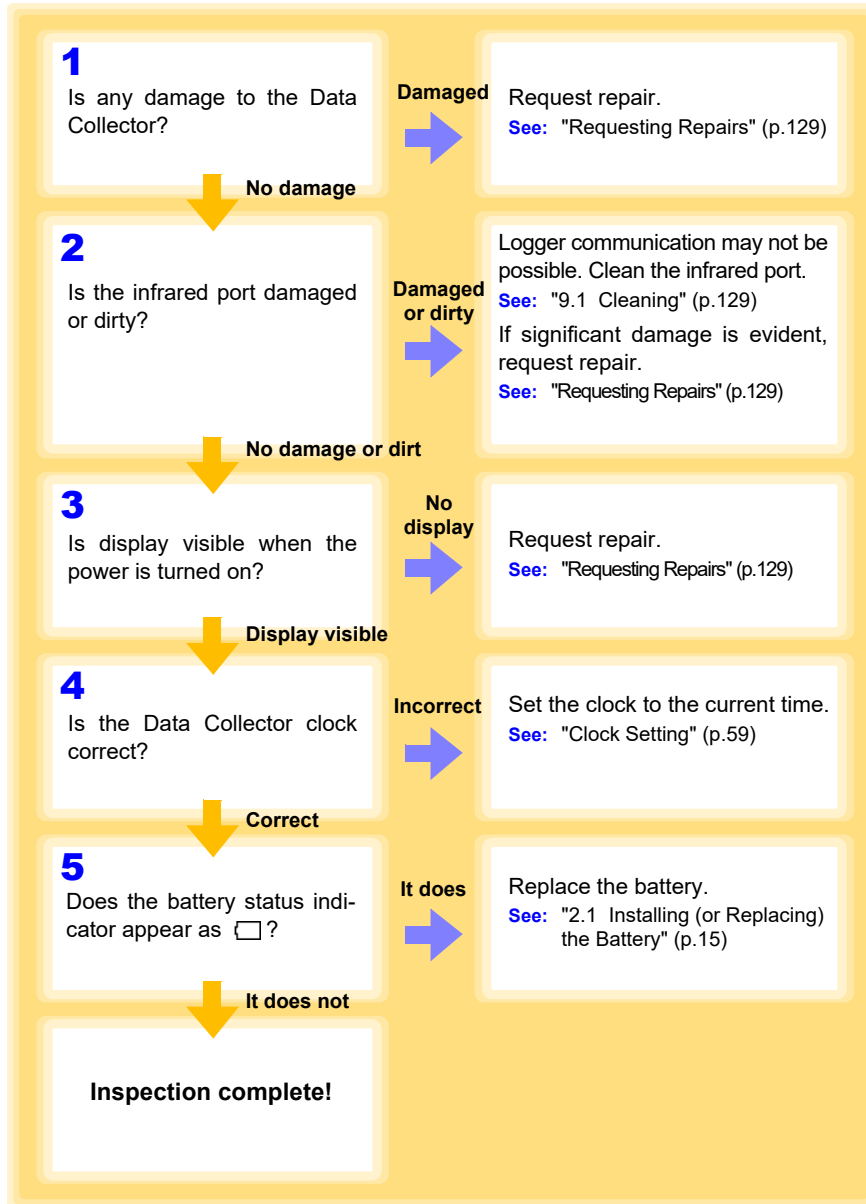

Settings (When Necessary) Chapter 3

You can set the measurement conditions of a logger with the collector, and then send the settings to the logger. (This feature is convenient when you want to set the same settings on multiple loggers.)







It is also possible to receive the settings of a logger, and then send those settings to a different logger. The setting can be made also from the LR5000 Utility Program. (p.72)

3

Chapter 3 Settings (When Necessary)

3.1 Making Settings with the Collector

This section describes how to make settings with the collector.

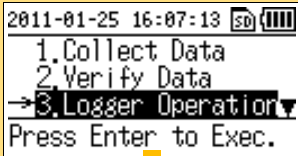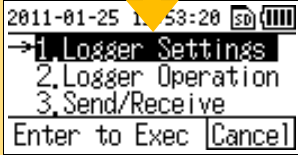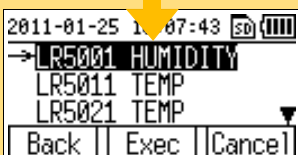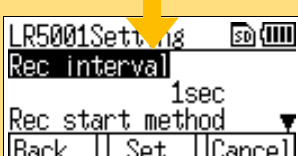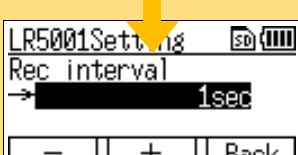1		1	Show the top display. (To return to the top display from another display, select [Back] or [Cancel] .)
2		2	Move the cursor to [Logger Operation] , and then press the  button.
3		3	Move the cursor to [Logger Settings] , and then press the  button. (To return to the top display, press the F3 button.)
4		4	Move the cursor to the model you want to set, and then press the  button (or F2 button). (To return to the previous display, press the F1 button. To return to the top display, press the F3 button)
5		5	Move the cursor to the item you want to set, and then press the  button (or F2 button). (To return to the previous display, press the F1 button. To return to the top display, press the F3 button)
6		6	Use  to select the item (use the F1 or F2 button to change the value), and then press the  button (or F3 button). The setting is changed, and the previous display reappears.

3.2 Settings List

The following is a list of all settings.


Setting Item	Setting Description	Collector	LR5000 Utility Program
Logger Type (Collector) Model (LR5000 Utility Program)	Select the logger model.	(p.24)	(p.76)
Rec Interval	Select the recording interval.	(p.24)	(p.77)
Rec start time (Collector) Start Method (LR5000 Utility Program)	Select the recording start method. (The start time can be specified.)	(p.24)	(p.77)
Rec Stop Method (Collector) Stop Method (LR5000 Utility Program)	Select the recording stop method. (The stop time can be specified.)	(p.24)	(p.77)
Stop Time Data	Select whether or not to record data at the stop time.	(p.24)	Not settable
Recording Mode (Collector) Rec Mode (LR5000 Utility Program)	Select instantaneous value recording or statistical value recording (measurements are taken once per second, and the instantaneous, maximum, minimum, and average values are saved at each recording interval).	(p.24)	(p.77)
Comment Settings (Collector) ModelComment and CH Comment (LR5000 Utility Program)	Set a comment for logger/measurement channel identification. (Set the comment text in the LR5000 Utility Program.)	(p.24) (Only possible to select whether or not to send.)	(p.75) (p.76)
Scaling	Use to scale measured values to display as adjusted values.	(p.24)	(p.79)
Decimal Point (Collector) Display digits (LR5000 Utility Program)	Select the number of digits to display after the decimal point when scaling is set.	(p.24)	(p.79)
Unit (Collector) Scaled units (LR5000 Utility Program)	Set the unit for when scaling is set. (Set the unit text in the LR5000 Utility Program.)	(p.24) (Only possible to select whether or not to send.)	(p.79)
Alarm (Collector) Alarm Thresholds (LR5000 Utility Program)	If you set the upper and lower limit values, the [AL] mark will appear on the display of the collector when a measurement value falls outside that range.	(p.24)	(p.81)

Setting Item	Setting Description	Collector	LR5000 Utility Program
Power Saving (Collector) Power save setting (LR5000 Utility Program)	If this is set to ON (enabled), the logger will run in power saving mode. (The display turns off if no operation is performed for approximately 30 seconds.) The display turns on again when a button is pressed or communication is performed. This prolongs the life of the batteries.	(p.24)	(p.76)
Sync to PC Time (LR5000 Utility Program)	Sends the time of the computer to the collector.	Not settable	(p.75)
Range	Select the measurement range.	(p.24)	Refer to the instruction manuals of LR5051.
Preheat	Outputs a preheat signal that is synchronized to measurement performed with the logger. This can be used to control the power of various sensors.	(p.24)	Refer to the instruction manuals of LR5041, LR5042 and LR5043.
Filter	Enables noise components to be removed and the influence of chattering to be eliminated.	(p.24)	Refer to the instruction manuals of LR5051.

Settings and Options (Collector)

The following shows the options that can be selected for each setting that can be made with the collector.

Logger Type	LR5001 (<i>Initial Setting</i>) / LR5011 / LR5021 / LR5031 / LR5041 / LR5042 / LR5043 / LR5051 / LR5061
Rec Interval	1 (<i>Initial Setting</i>) / 2 / 5 / 10 / 15 / 20 / 30 sec. / 1 / 2 / 5 / 10 / 15 / 20 / 30 / 60 min / 1 day* *: LR5061 only
Rec start time	Button operation (<i>Initial Setting</i>) / Scheduled time* / Start After Sent *: Set a date and time. See: "Recording Start/Stop Method" (p.25)
Rec Stop Method	Button (Endless) (<i>Initial Setting</i>) / Button (Once)/Sched. (Endless)* / Sched. (Once)* *: Set a date and time. See: "Recording Start/Stop Method" (p.25)
Stop Time Data	Include (<i>Initial Setting</i>) / Do Not Include
Recording Mode	Instantaneous (<i>Initial Setting</i>) / Statistical (STAT)
Comment Settings	No (<i>Initial Setting</i>) / Yes Note: Comment text is not settable.
Scaling	OFF (<i>Initial Setting</i>) / $y=Ax+B^{*1}$ / 2 Points Setting ^{*2} *1: Also set the values of A and B *2: Also set the values of each point.
Decimal Point	Not Fixed (<i>Initial Setting</i>) / 0 digit/1 digit/2 digits/3 digits
Unit	Do Not Send (<i>Initial Setting</i>) / Send
Alarm	OFF (<i>Initial Setting</i>) / ON* *: Set the upper and lower limit values.
Power Saving	Auto Off (<i>Initial Setting</i>) / Always On
Range (Only when connected to LR5021 and LR5051)	LR5021: 200 / 800°C(<i>Initial Setting</i>) LR5051: 500 mA(<i>Initial Setting</i>) / 5 / 50 / 500 / 1000 A
Preheat (Only when connected to LR5041, LR5042, and LR5043)	OFF (<i>Initial Setting</i>) / 0.5 / 1 / 2 / 5 / 10 / 30 / 60 sec.
Filter (Only when connected to LR5051 and LR5061)	OFF (<i>Initial Setting</i>) / ON

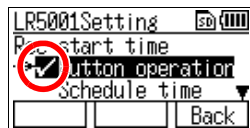

A check mark is added to the set item.

◆ Recording Start/Stop Method

Rec start time

Select the recording start method.

When **[Scheduled time]** is selected, specify the start date and time.

Setting Item	Setting Description
Button operation (Initial Setting)	Starts recording by pressing the button on the logger.
Start After Sent	Starts recording from specified time after settings sent to the Data Logger. (Endless recording)
Scheduled time	Starts recording from specified time after settings sent to the Data Logger.
Valid setting time range	01/01/2010, 00:00 to 12/31/2039, 23:59

NOTE

When the **[Scheduled time]** start method is enabled, the **[REC]** indicator on the logger display blinks until the specified start time.

Rec Stop Method

When **[Sched. (Endless)]** or **[Sched. (Once)]** is selected, also set the time (year/month/day/hour/minute).

Setting Item	Setting Description
Button (Endless)*2	Stops recording by pressing the button on the logger. The oldest data is overwritten when memory is full.
Button (Once)*2	Starts recording by pressing the button on the logger. Recording is also stopped when memory becomes full.
Sched. (Endless)	Stops recording at the scheduled time. The oldest data is overwritten when memory is full.
Sched. (Once) (Initial Setting)	Stops recording at the scheduled time. Recording is also stopped when memory becomes full.

1: Measurement stops when the recorded data count of the logger becomes 60,000.






2: If the recorded data count of the logger exceeds 60,000, measurement continues and the data is overwritten starting from the oldest.

(*: 15,000 data items when instantaneous value recording or statistical value recording)

3.3 Sending Measurement Condition Settings to Logger

Connect a logger to the collector, and then send the measurement conditions to the logger.

Required Items: Logger to which you want to send the settings

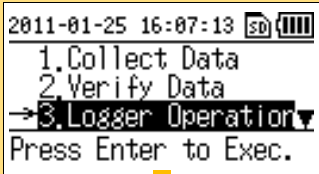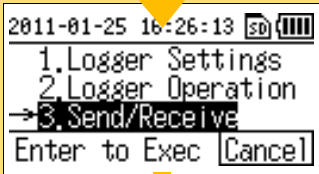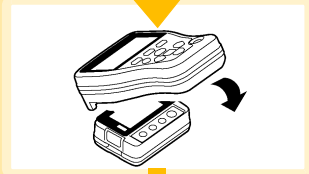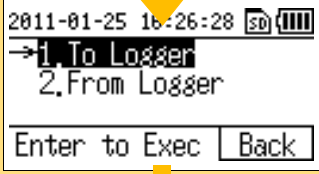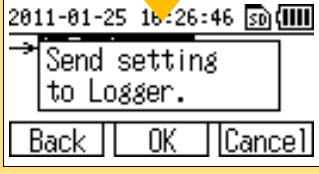1  2 →  3  4  5 	1 Show the top display of the collector. (To return to the top display from another display, select [Back] or [Cancel].) 2 Move the cursor to [Logger Operation], and then press the  button. 3 Move the cursor to [Send/Receive], and then press the  button. (To return to the previous display, press the F3 button.) 4 Place the logger and collector so that their IR ports are aligned. 5 Move the cursor to [To Logger], and then press the  button. (To return to the previous display, press the F3 button.) 6 Press the  button (or F2 button). The settings are sent, and the previous display reappears. When you want to cancel the operation: Press the F1 button before the operation has been performed to return to the previous display. Press the F3 button to return to the top display.
--	--

3.4 Receiving Measurement Condition Settings from Logger

Connect a logger to the collector, and then receive the measurement conditions from the logger.

Required Items: Logger from which you want to receive the settings

1 2011-01-25 16:07:13 SD [Battery]

1. Collect Data
2. Verify Data
→ 3. Logger Operation
Press Enter to Exec.

2 → 3. Logger Operation

3 2011-01-25 16:26:13 SD [Battery]

1. Logger Settings
2. Logger Operation
→ 3. Send/Receive
Enter to Exec [Cancel]

4 

5 2011-01-25 16:32:15 SD [Battery]

1. To Logger
→ 2. From Logger
Enter to Exec [Back]

6 2011-01-25 16:32:29 SD [Battery]

→ Receive setting from Logger.
[Back] [OK] [Cancel]

1 Show the top display of the collector.
(To return to the top display from another display, select **[Back]** or **[Cancel]**.)

2 Move the cursor to **[Logger Operation]**, and then press the  button

3 Move the cursor to **[Send/Receive]**, and then press the 
(To return to the previous display, press the **F3** button.)

4 Place the logger and collector so that their IR ports are aligned.

5 Move the cursor to **[From Logger]**, and then press the  button.
(To return to the previous display, press the **F3** button.)

6 Press the  button (or **F2** button).

The settings are received, and the previous display reappears.

When you want to cancel the operation: Press the **F1** button before the operation has been performed to return to the previous display. Press the **F3** button to return to the top display.

3.5 Verifying Recording/Setting Status of Logger

You can verify the current recording/setting status of the logger.

Required Items: Logger for which you want to verify the recording/setting status

1 2011-01-25 16:07:13 [SD] [||||]


1. Collect Data
2. Verify Data
→ 3. Logger Operation
Press Enter to Exec.

2

3 2011-01-25 16:33:03 [SD] [||||]

1. Logger Settings
→ 2. Logger Operation
3. Send/Receive
Enter to Exec [Cancel]

4

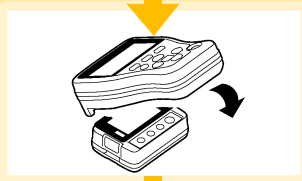

5 2011-01-25 16:33:10 [SD] [||||]

→ 1. Logger Status
2. Start Recording
3. Stop Recording
Enter to Exec [Back]

6 Logger Status [SD] [||||]

Recording ▲
Num of Data 60000 ▼
[Back] [] [Cancel]

1 Show the top display of the collector.
(To return to the top display from another display, select **[Back]** or **[Cancel]**.)

2 Move the cursor to **[Logger Operation]**, and then press the  button

3 Move the cursor to **[Logger Operation]**, and then press the  button
(To return to the previous display, press the **F3** button.)

4 Place the logger and collector so that their IR ports are aligned.

5 Move the cursor to **[Logger Status]**, and then press the  button
(To return to the previous display, press the **F3** button.)

6 Scroll the display with , and verify the status.
(To return to the previous display, press the **F1** button.
To return to the top display, press the **F3** button.)

3.6 Starting and Stopping Recording on Logger

The collector can control the starting and stopping of recording on the logger.

Required Items: The logger for which you want to start/stop recording


1 2011-01-25 16:07:13 SD [Battery]

1. Collect Data
2. Verify Data
→ 3. Logger Operation
Press Enter to Exec.

2 →

3 2011-01-25 16:33:03 SD [Battery]

1. Logger Settings
→ 2. Logger Operation
3. Send/Receive
Enter to Exec [Cancel]

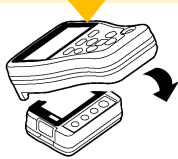4 

5 2011-01-26 09:17:42 SD [Battery]

1. Logger Status
→ 2. Start Recording
3. Stop Recording
Enter to Exec [Back]

6 2011-01-26 09:18:01 SD [Battery]

Record...
Start
[Back] [OK] [Cancel]

1 Show the top display of the collector.
(To return to the top display from another display, select **[Back]** or **[Cancel]**.)

2 Move the cursor to **[Logger Operation]**, and then press the  button

3 Move the cursor to **[Logger Operation]**, and then press the 
(To return to the previous display, press the **F3** button.)

4 Place the logger and collector so that their IR ports are aligned.

5 Move the cursor to **[Start Recording]** or **[Stop Recording]**, and then press the  button.
(To return to the previous display, press the **F3** button.)

6 Press the  button (or **F2** button).

Recording starts or stops, and the previous display reappears.

When you want to cancel the operation:
Press the **F1** button before the operation has been performed to return to the previous display. Press the **F3** button to return to the top display.

Collecting and Browsing Data

Chapter 4

You can collect the recorded data of a logger with the collector, and then browse the data in the form of numerical values or a graph.

4.1 Collecting Recorded Data of Logger

4

Chapter 4 Collecting and Browsing Data

One-touch Collection (Collecting Data Easily by Just Pressing COLLECT Button)


You can collect the recorded data of a logger by just pressing the **COLLECT** button. The save destination differs for a logger for which data is collected for the first time (new logger) and a logger for which data was previously collected (logger with same serial number).

New logger	Data is saved to the location set for the save destination setting (collector memory or SD memory card) of [Unit Settings]-[One-Touch Coll.] of the top display. See: "One-touch Collection" (p.55)
Logger with same serial number	Data is saved to the location (collector memory or SD memory card) where the previous data was saved (data of logger with same serial number).

4.1 Collecting Recorded Data of Logger


Required Items: Logger that recorded the data

1

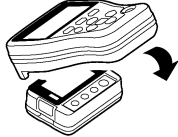

2



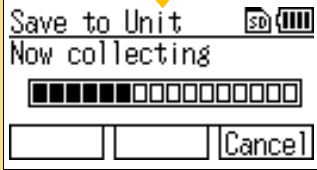

1

Place the logger and collector so that their IR ports are aligned.

2


Press the **COLLECT** button.
(Data collection begins.)

The display on the left is shown during data collection.


When you want cancel data collection part way through:
Press the **F3** button to return to the top display.

Continued→


4.1 Collecting Recorded Data of Logger

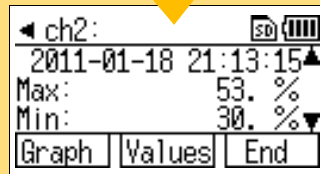

Collection Data Display

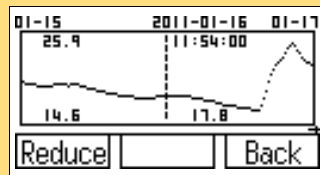

Waveform Graph Display

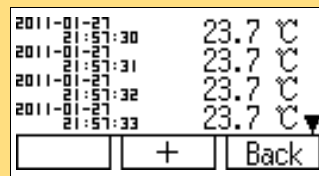

Numerical Value Display

When collection is completed, the collected data appears on the display.

The following shows the displayed information.

(Channel, comment, data count, recording interval, serial number, recording start time, recording stop time, maximum value, minimum value, and average value)

When the data of a logger which recorded on two channels is collected, use  to switch channels.

Press the **F1** button to switch to waveform graph display, and **F2** button to switch the numerical value display.

(To return to the previous display, press the **F3** button.)

Waveform Graph Display

Press the **F1** button to reduce the waveform, and the **F2** button to magnify the waveform.

Use  to scroll the waveform.

(To return to the previous display, press the **F3** button.)

Numerical Value Display

Use the **F1** and **F2** buttons to decimate the data.

(To return to the previous display, press the **F3** button.)

NOTE

- In the case of a logger for which data was previously collected (logger with same serial number), the data is saved to the location where the previous data was saved. If data exists in both the collector memory and SD memory card, the save destination becomes the SD memory card.
- Data can be collected without stopping measurement on the logger. Data is collected up until the point in time when data collection was performed. However, the time required to perform data collection is longer than when measurement is stopped.

4.1 Collecting Recorded Data of Logger



What should I do if an error message appears?

See: "When attempting to collect recorded data:" (p.132)



What happens if collection is performed once during recording and then again after recording is finished?

The uncollected data will be collected.



What should be done if communication is interrupted during collection?

Check whether or not the IR port is scratched or dirty. Check the connection to the logger, and then perform collection again. The uncollected data will be collected.


Selecting the Data Save Destination and Then Performing Collection

Each time you perform collection, you can select the data save destination and then collect the recorded data from the logger.

Required Items: Logger that recorded the data

1 2011-01-25 15:34:40 [SD] [||||]

3 →1. Collect Data
2. Verify Data
3. Logger Operation▼
Press Enter to Exec.

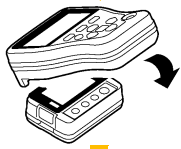2 

4 2011-01-25 15:27:23 [SD] [||||]

Save to ...
→1. Unit Memory
2. SD Card
Unit SD Cancel

5 Save to Unit [SD] [||||]

Coll Method
→1. Uncollected Only
2. All data
Back Cancel

6 Save to Unit [SD] [||||]

LR5001 (101123447)
(LR5001)
Collect this data?
Start Cancel

1 Show the top display of the collector.
(To return to the top display from another display, select **[Back]** or **[Cancel]**.)

2 Place the logger and collector so that their IR ports are aligned.

3 Move the cursor to **[Collect Data]** and then press the  button.



4 Note: This display may sometimes not appear. (Refer to the note on the next page.)
Select the save destination, and then press the  button.
(Pressing the **F1** or **F2** button allows you to go to the next display without pressing the  button.)
(To return to the previous display, press the **F3** button.)

5 Select the collection method, and then press the  button.
(To return to the previous display, press the **F1** button.
To return to the previous display, press the **F3** button.)


6 Press the  button (or **F1** button).

When you want to cancel the operation:
Press the **F3** button before the operation has been performed to return to the top display.

4.1 Collecting Recorded Data of Logger

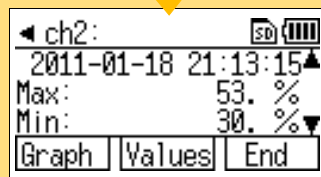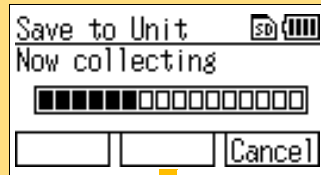

Collection Data Display

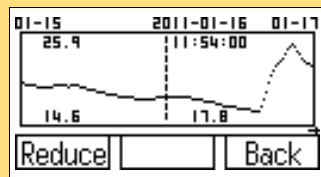

Waveform Graph Display

2011-01-27	23.7 °C
2011-01-27 21:57:30	23.7 °C
2011-01-27 21:57:31	23.7 °C
2011-01-27 21:57:32	23.7 °C
2011-01-27 21:57:33	23.7 °C

Numerical Value Display

The display on the left is shown during data collection.

When you want cancel data collection part way through:

Press the **F3** button to return to the top display.

When collection is completed, the collected data appears on the display.

The following shows the displayed information.

(Channel, comment, data count, recording interval, serial number, recording start time, recording stop time, maximum value, minimum value, and average value)

When the data of a logger which recorded

on two channels is collected, use  to switch channels.

Press the **F1** button to switch to waveform graph display, and **F2** button to switch the numerical value display.

(To return to the previous display, press the **F3** button.)

Waveform Graph Display

Press the **F1** button to reduce the waveform, and the **F2** button to magnify the waveform.

Use  to scroll the waveform.

(To return to the previous display, press the **F3** button.)

Numerical Value Display

Use the **F1** and **F2** buttons to decimate the data.

(To return to the previous display, press the **F3** button.)

4.1 Collecting Recorded Data of Logger

NOTE

- In the case of a logger for which data was previously collected (logger with same serial number), the data is saved to the location where the previous data was saved. If data exists in both the collector memory and SD memory card, the save destination becomes the SD memory card.
- Data can be collected without stopping measurement on the logger. Data is collected up until the point in time when data collection was performed. However, the time required to perform data collection is longer than when measurement is stopped.



What should I do if an error message appears?

See: "When attempting to collect recorded data:" (p.132)



What happens if collection is performed once during recording and then again after recording is finished?

Select whether to collect only uncollected data or all data for the collection method in step "5" (p.35).



What should be done if communication is interrupted during collection?

Check whether or not the IR port is scratched or dirty. Check the connection to the logger, and then perform collection again. The uncollected data will be collected.


Data Management Chapter 5

This section describes how to manage the data saved to the collector memory and SD memory card.

5.1 Displaying Data List

You can display a list of the data saved to the collector memory or SD memory card.

Displaying List of Data in Collector Memory

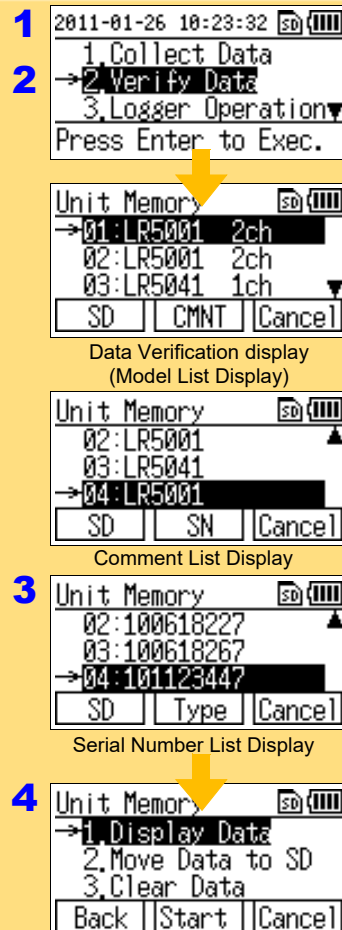

1 Show the top display of the collector.
(To return to the top display from another display, select **[Back]** or **[Cancel]**.)

2 Move the cursor to **[Verify Data]**, and then press the button.

The data in the collector memory is listed by model. (Data Verification display)

Use the **F** button to select **[CMNT]** to display the data listed by comment set for each logger.

Use the **F** button to select **[SN]** to display the data listed by serial number of each logger.

Use the **F** button to select **[Type]** to display the data listed by model.

Use the **F1** button to select **[SD]** to display the data in the SD memory card.
See: "Model + Serial Number Display" (p.40)

3 Select the data, and then press the button.






The menu appears.

4 Move the cursor to **[Display Data]**, and then press the button (or **F2** button).

The detailed data appears.

See: "Collection Data Display" (p.36)

Displaying List of Data in SD Memory Card

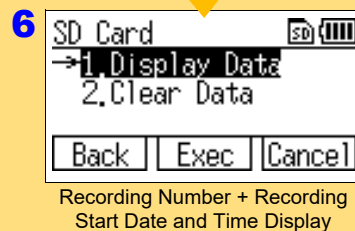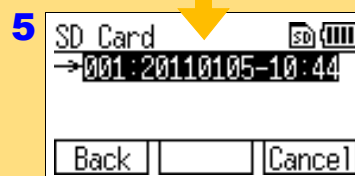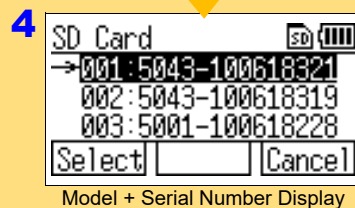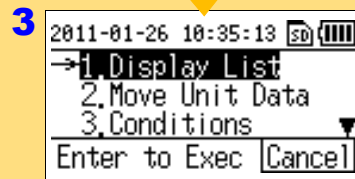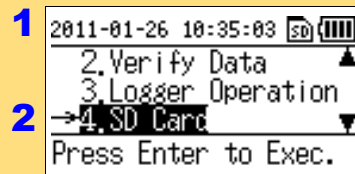

1 Show the top display of the collector.

(To return to the top display from another display, select [Back] or [Cancel].)

2 Move the cursor to [SD Card], and then press the  button.

The menu appears.

3 Move the cursor to [Display List], and then press the  button.

The data is listed by model + serial number of logger.

(Press the **F3** button to return to the top display.)

4 Select the Data Logger, and then press the  button or **F1** button.

The data of the selected Data Logger is indicated by the recording start date and time.

(Press the **F3** button to return to the top display.)

5 Select data, and then press the  button.

The menu appears.

(To return to the previous display, press the **F1** button. Press the **F3** button to return to the top display.)

6 Move the cursor to [Display Data], and then press the  button (or **F2** button).


The detailed data appears.

See: "Collection Data Display" (p.36)

(To return to the previous display, press the **F1** button. Press the **F3** button to return to the top display.)

File Structure in SD Memory Card

The following shows the file structure for the data in an SD memory card.

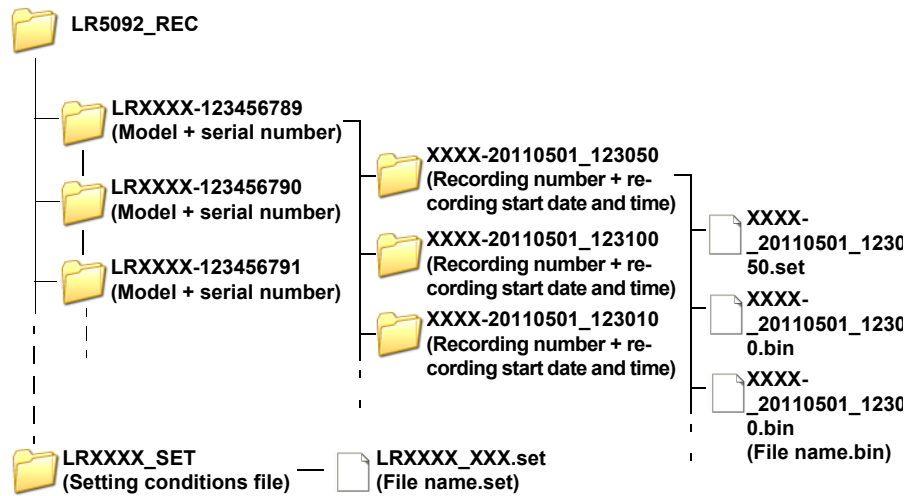

NOTE

The latest data will be displayed when data is retrieved over a few times during recording.

The retrieved data display screen will switch to the previously-retrieved data

when the and buttons are pressed simultaneously. (The displayed data is in units of data retrieved. Pressing the and buttons simultaneously will switch to the next data.)

5.2 Moving Data in Collector Memory to SD Memory Card

You can move the data in the collector memory to an SD memory card.

1 Unit Memory SD

2 → 01:LR5001 2ch
02:LR5001 2ch
03:LR5001 1ch

[SD] [CMNT] [Cancel]

3 Unit Memory SD

1.Display Data
→ 2.Move Data to SD
3.Clear Data

[Back] [Start] [Cancel]

4 Unit to SD SD

02:LR5001(100618227)
(LR5001)
Move this data

[Start] [] [Back]

Unit to SD SD

Now moving

[] [] [Cancel]

Unit to SD SD

Now clearing

[] [] []

Unit to SD SD

No Data move has
been completed

[OK] [] []

Moving One Desired Data Item

1 Display the data in the collector memory.
(Data Verification display)
See: "Displaying Data List" (p.39)

2 Move the cursor to the data you want to move to the SD memory card, and then press the button.

3 Move the cursor to [Move Data to SD], and then press the button (or **F2** button).

(To return to the previous display, press the **F1** button. Press the **F3** button to return to the top display.)

4 Press the button (or **F1** button).

When you want to cancel the operation:
Press the **F3** button before the operation begins to return to the previous display.

The display on the left is shown during moving.

When you want to cancel moving part way through:
Press the **F3** button to return to the display of step 1.

After the data is moved, the collector memory is cleared.


A message appears when clearing of the collector memory is completed.

(Press the **F1** button to return to the display of step 1.)

Moving Multiple Desired Data Items

- 1** Show the top display of the collector.
(To return to the top display from another display, select **[Back]** or **[Cancel]**.)
- 2** Move the cursor to **[SD Card]**, and then press the button.
- 3** Move the cursor to **[Move Unit Data]**, and then press the button.
- 4** Move the cursor to **[Select Data]**, and then press the button (or **F2** button).
(To return to the previous display, press the **F1** button. Press the **F3** button to return to the top display.)
- 5** Move the cursor to the data you want to move to the SD memory card, and then press the **F1** button.
A check mark is added to the selected data.
When you have finished selecting data, press the button.
(Press the **F2** button to switch to comment display.)
See: "Comment List Display" (p.39)
To return to the previous display, press the **F3** button.)
- 6** Press the button (or **F1** button) to execute the move.
When you want to cancel the operation: Press the **F3** button before the operation begins to return to the previous display.

5.2 Moving Data in Collector Memory to SD Memory Card

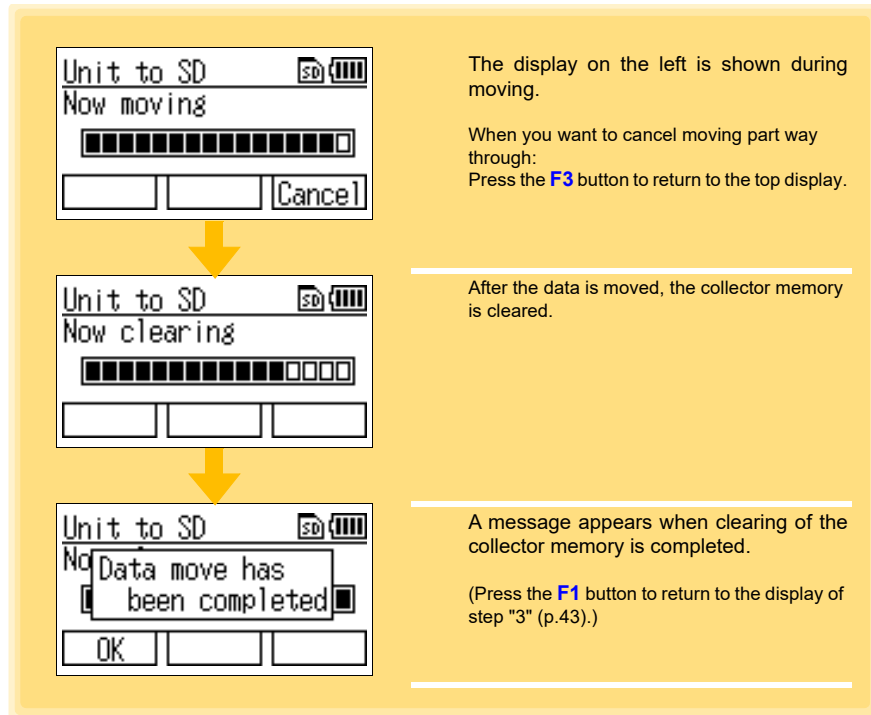

Moving All Data

- 1** Show the top display of the collector.
(To return to the top display from another display, select **[Back]** or **[Cancel]**.)
- 2** Move the cursor to **[SD Card]**, and then press the button.
- 3** Move the cursor to **[Move Unit Data]**, and then press the button.
- 4** Move the cursor to **[Move All Data]**, and then press the button (or **F2** button).
(To return to the previous display, press the **F1** button. Press the **F3** button to return to the top display.)
- 5** Press the button (or **F1** button).

When you want to cancel the operation:
Press the **F3** button before the operation begins to return to the top display.

The display on the left is shown during moving.

When you want to cancel moving part way through:
Press the **F3** button to return to the top display.

After the data is moved, the collector memory is cleared.

A message appears when clearing of the collector memory is completed.

(Press the **F1** button to return to the display of step 3.)

5.3 Saving and Importing Setting Conditions

You can save the logger setting conditions* in the collector memory to an SD memory card, or import logger setting conditions from an SD memory card.

*: This means logger measurement conditions (p.21) set with the collector.

1 2011-01-26 10:35:03 [SD] [||||]
2. Verify Data
3. Logger Operation
→ 4. SD Card
Press Enter to Exec.

2 2011-01-26 13:33:14 [SD] [||||]
1. Display List
2. Move Unit Data
→ 3. Conditions
Enter to Exec [Cancel]

3 Conditions [SD] [||||]
→ 1. Save
2. Import
[Back] [Exec] [Cancel]

4 Conditions [SD] [||||]
Save unit settings
to SD card.
Select save
[Back] [OK] [Cancel]

5 Save Setting [SD] [||||]
→ 01:LR5001 001
02:LR5011 001
03:LR5043 001
[Back] [Exec] [Cancel]

6 Save Setting [SD] [||||]
→ 01:LR5001 001
02:LR5011 001
03:LR5043 001
[Back] [Exec] [Cancel]

Saving Setting Conditions

1 Show the top display of the collector.
(To return to the top display from another display, select **[Back]** or **[Cancel]**.)

2 Move the cursor to **[SD Card]**, and then press the button.


3 Move the cursor to **[Conditions]**, and then press the button.

4 Move the cursor to **[Save]**, and then press the button (or **F2** button).
(To return to the previous display, press the **F1** button.
Press the **F3** button to return to the top display.)

5 Press the button (or **F2** button).
(To return to the previous display, press the **F1** button.
Press the **F3** button to return to the top display.)

6 Move the cursor to the number of the setting conditions you want to save, and then press the button (or **F2** button).
(Press the **F1** button to return to the display of step 4.
Press the **F3** button to return to the top display.)

5.3 Saving and Importing Setting Conditions

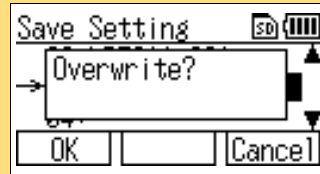

If setting conditions have already been saved, a comment to confirm whether to overwrite them appears.

Press the  button (or **F1** button).

(To return to the previous display, press the **F3** button.)

When saving is completed, the display of step 4 reappears.

NOTE

Up to 16 setting conditions can be saved.

1 2011-01-26 10:35:03 SD [Battery Icon]
2. Verify Data
3. Logger Operation
→ 4. SD Card
Press Enter to Exec.

2 2011-01-26 13:33:14 SD [Battery Icon]
1. Display List
2. Move Unit Data
→ 3. Conditions
Enter to Exec [Cancel]

3 Conditions SD [Battery Icon]
1. Save
→ 2. Import
[Back] [Exec] [Cancel]

4 Import Setting SD [Battery Icon]
→ 02:LR5011 001
03:LR5001 002
04:LR5001 003
[Exec] [Check] [Back]

5 Setting SD [Battery Icon]
Rec interval 1sec
Rec start method
[Back] [Import] [Cancel]

Setting Condition Details

6 Import Setting SD [Battery Icon]
→ Import Setting
03:LR5001 002
[Back] [OK] [Cancel]

Importing Setting Conditions

1 Show the top display of the collector.
(To return to the top display from another display, select **[Back]** or **[Cancel]**.)

2 Move the cursor to **[SD Card]**, and then press the button.

3 Move the cursor to **[Conditions]**, and then press the button.

4 Move the cursor to **[Import]**, and then press the button (or **F2** button).
(To return to the previous display, press the **F1** button.
Press the **F3** button to return to the top display.)

5 Move the cursor to the number of the setting conditions you want to import, and then press the button (or **F1** button).
(Press the **F2** button to display the details of the setting conditions.
To return to the previous display, press the **F3** button.)

Setting Condition Details

To return to the previous display, press the **F1** button.
Press the **F3** button to return to the top display.

6 Press the **F2** button.
(To return to the previous display, press the **F1** button.
Press the **F3** button to return to the top display.)

5.4 Clearing Data

You can clear the data from the collector memory or SD memory card.

Clearing Data from Collector Memory

1 Unit Memory

→ 01:LR5001 2ch

02:LR5001 2ch

03:LR5041 1ch

[SD] [CMNT] [Cancel]

Clearing One Desired Data Item

1 Show the list of data in the collector memory.
(Data Verification display)
See: "Displaying List of Data in Collector Memory" (p.39)

2 Unit Memory

1. Display Data

2. Move Data to SD

→ 3. Clear Data

[Back] [Start] [Cancel]

2 Move the cursor to the data you want to clear, and then press the button.

3 Unit Memory

02:LR5041(100618267)

(LR5041)

Clear the data

[Start] [] [Back]

3 Move the cursor to **[Clear Data]**, and then press the button (or **F2** button).

(To return to the previous display, press the **F1** button.
Press the **F3** button to return to the top display.)

4 Unit Memory

02:LR5041(100618267)

(LR5041)

Clear the data

[Start] [] [Back]

4 Press the **F1** button.

The display for confirming the clearing of data appears.

5 Unit Memory

02: Do you want to

(L) clear it?

[Clear] [OK] [Cancel]

5 Press the **F2** button.

Unit Memory

Now clearing

[Progress Bar]

[] [] []

The Clearing Memory display appears.
After the data is cleared, the display of step 1 appears.

1 2011-01-26 16:06:16 SD [Battery Icon]
3. Logger Operation
4. SD Card
→ 5. Unit Settings
Press Enter to Exec.

2 2011-01-26 16:06:44 SD [Battery Icon]
5. Self Check
→ 6. Clear All
7. Initialize
Enter to Exec. [Cancel]

3 Clear All SD [Battery Icon]
Are you sure
You want to clear
all data in unit?
Start [] Back

4 Clear All SD [Battery Icon]
Are you sure?
all data in unit.
[] OK Cancel

5 Now clearing SD [Battery Icon]
■■■■■■■■■■■■■■■■■■■■
[] [] Cancel

Clearing All Data

- 1** Show the top display of the collector.
(To return to the top display from another display, select **[Back]** or **[Cancel]**.)
- 2** Move the cursor to **[Unit Settings]**, and then press the button.
- 3** Move the cursor to **[Clear All]**, and then press the button.

The display for confirming the clearing of all data from memory appears.

(Press the **F3** button to return to the top display.)

- 4** Press the **F1** button.


The message for reconfirming the clearing of all data from memory appears.

- 5** Press the **F2** button.

The Clearing Data display appears.
After the data is cleared, the top display appears.

Clearing Data from SD Memory Card

There are two methods for clearing one desired data item from an SD memory card, and there is one method for clearing all data from an SD memory card.

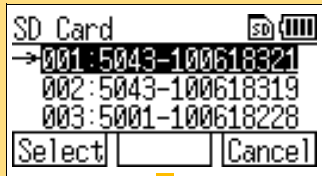

1 SD Card

2 → 001:5043-100618321


002:5043-100618319

003:5001-100618228

Select [] Cancel

Clearing One Desired Data Item (Method 1)

1 Display the list of data in the SD memory card.
See: "Displaying List of Data in SD Memory Card" (p.40)

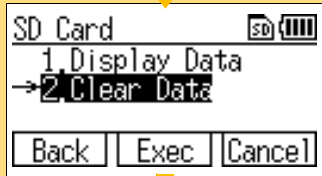

3 SD Card

1. Display Data


→ 2. Clear Data

Back Exec Cancel

2 Move the cursor to the data you want to clear, and then press the  button.

3 Move the cursor to **[Clear Data]**, and then press the  button (or **F2** button).

(To return to the previous display, press the **F1** button.
Press the **F3** button to return to the top display.)

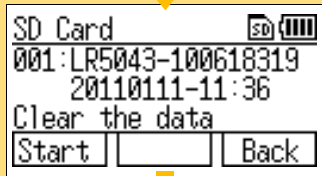

4 SD Card


001:LR5043-100618319

20110111-11:36

Clear the data

Start [] Back

4 Press the **F1** button.

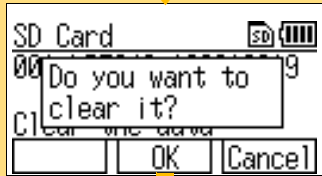

5 SD Card


00 Do you want to clear it?

CL

[] OK Cancel

The display for confirming the clearing of data appears.

5 Press the **F2** button.

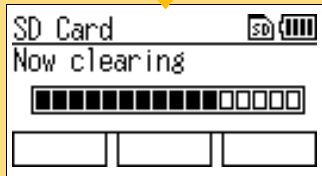


SD Card

Now clearing

[Progress Bar]

The Clearing Memory display appears. After the data is cleared, the display of step 1 appears.

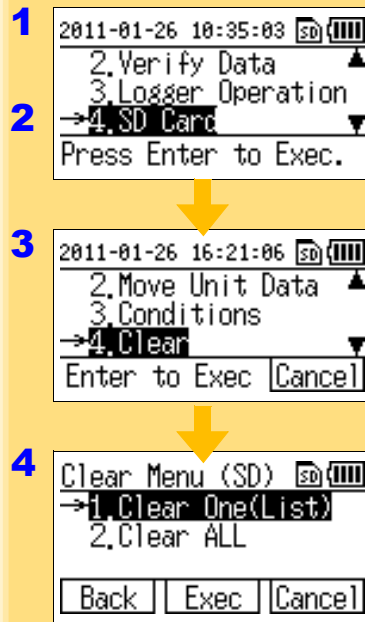

Clearing One Desired Data Item (Method 2)

- 1** Show the top display of the collector.
(To return to the top display from another display, select **[Back]** or **[Cancel]**.)
- 2** Move the cursor to **[SD Card]**, and then press the  button.
- 3** Move the cursor to **[Clear]**, and then press the  button.
(Press the **F3** button to return to the top display.)
- 4** Move the cursor to **[Clear One(List)]**, and then press the  button (or **F2** button).

The list of data in the SD card appears.

See: For the subsequent procedure, see "Clearing One Desired Data Item (Method 1)" (p.51).

1 2011-01-26 10:35:03 SD [Full]
2. Verify Data
3. Logger Operation
→ 4. SD Card
Press Enter to Exec.

2 2011-01-26 16:21:06 SD [Full]
2. Move Unit Data
3. Conditions
→ 4. Clear
Enter to Exec [Cancel]

3 Clear Menu (SD) SD [Full]
1. Clear One(List)
→ 2. Clear All
[Back] [Exec] [Cancel]

4 Clear All (SD) SD [Full]
Do you want to clear all data in the SD card?
[Start] [] [Back]

5 Clear All (SD) SD [Full]
Are you sure?
[] [OK] [Cancel]

6 Clear All (SD) SD [Full]
Now clearing
[Progress Bar]
[] [] [Cancel]

Clearing All Data

- 1** Show the top display of the collector.
(To return to the top display from another display, select **[Back]** or **[Cancel]**.)
- 2** Move the cursor to **[SD Card]**, and then press the button.
- 3** Move the cursor to **[Clear]**, and then press the button.
(Press the **F3** button to return to the top display.)
- 4** Move the cursor to **[Clear All]**, and then press the button (or **F2** button).

5 The display for confirming the clearing of all data appears.

5 Press the **F1** button.

6 The message for reconfirming the clearing of all data appears.

6 Press the **F2** button.

The Clearing Data display appears. After the data is cleared, the top display appears.

When you want cancel clearing data part way through:
Press the **F3** button to stop clearing and return to the previous display.

NOTE

Only the recorded data and setting conditions data are deleted. Perform initialization when you want to delete all of the data in an SD memory card.

See: "5.5 Initializing SD Memory Card" (p.54)

5.5 Initializing SD Memory Card

You can initialize an SD memory card. All of the data in the SD memory card is cleared.

1 2011-01-26 10:35:03 SD 2. Verify Data ▲ 3. Logger Operation ▼ → 4. SD Card Press Enter to Exec.	1 Show the top display of the collector. (To return to the top display from another display, select [Back] or [Cancel].)
↓	2 Move the cursor to [SD Card], and then press the button.
3 2011-01-26 16:47:29 SD 3. Conditions ▲ 4. Clear ▼ → 5. Initialize Card Enter to Exec [Cancel]	3 Move the cursor to [Initialize Card], and then press the button. (Press the F3 button to return to the top display.)
↓	4 Press the F1 button. (To return to the previous display, press the F3 button.)
4 Init a SD Card SD Are you sure You want to init SD card? Start Back	5 Press the F2 button. (Press the F3 button to return to the display of step 3.)
↓	5 Init a SD Card SD Are you sure? SD card. OK [Cancel]
↓	The Initializing display appears. After initializing is completed, the top display appears.
Init a SD Card SD Now initializing	

NOTE

Initialization cannot be stopped once it has been started. We recommend backing up any important data beforehand.

Collector System Settings

Chapter 6

This section describes how to display and change the system settings of the collector, and perform self checks.

6.1 Displaying and Changing Collector System Settings

One-touch Collection

You can display and change the save destination setting of one-touch collection for a new logger.


* When data is collected from a logger for which data has been collected previously (logger with same serial number), the data is saved to the location (collector memory or SD memory card) where the previous collected data was saved regardless of the save destination setting of one-touch collection.




What is One-touch Collection?

A function that allows you to collect data in the collection destination set for recorded data of a logger by simply pressing the **COLLECT** button. (p.31)

The initial setting for the collection destination is **[Collector Memory]**.

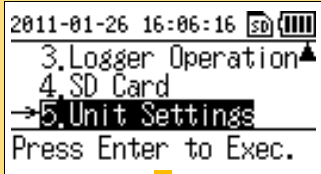

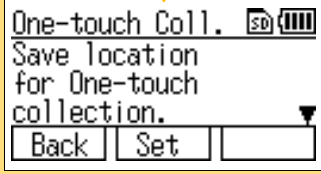

- 1** Show the top display of the collector.
(To return to the top display from another display, select **[Back]** or **[Cancel]**.)

- 2** Move the cursor to **[Unit Settings]**, and then press the  button.

- 3** Move the cursor to **[One-Touch Coll.]**, and then press the  button.

(Press the **F3** button to return to the top display.)

- 4** Move the cursor to the save destination (**[Collector Memory]** or **[SD Card]**), and then press the  button (or **F2** button).

When the collection destination is set, a check mark is added.

(To return to the previous display, press the **F1** button.
Press the **F3** button to return to the top display.)

6.1 Displaying and Changing Collector System Settings

Startup Display

You can change the setting for the display that appears at startup (top display).
The initial setting is **[Menu Display]**.

See: "Display Organization" (p.12)


- | | |
|---|--|
| <p>1 </p> <p>2 </p> <p>3 </p> <p>4 </p> | <p>1 Show the top display of the collector.
(To return to the top display from another display, select [Back] or [Cancel].)</p> <p>2 Move the cursor to [Unit Settings], and then press the button.</p> <p>3 Move the cursor to [Startup Display], and then press the button.
(Press the F3 button to return to the top display.)</p> <p>4 Move the cursor to the display you want to show at startup, and then press the button (or F2 button).
(To return to the previous display, press the F1 button.
Press the F3 button to return to the top display.)</p> <p>The previous display reappears. A check mark is added to the set display.</p> |
|---|--|

6

Chapter 6 Collector System Settings

Language Setting




You can display and change the language setting for display on the collector.
The initial setting is **[English]**.

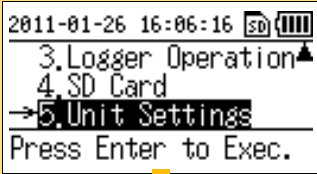1  2	1 Show the top display of the collector. (To return to the top display from another display, select [Back] or [Cancel].)
3  4 	2 Move the cursor to [Unit Settings], and then press the  button. 3 Move the cursor to [LANGUAGE], and then press the  button. (Press the F3 button to return to the top display.) 4 Move the cursor to the language you want to set, and then press the  button (or F2 button). (To return to the previous display, press the F1 button. Press the F3 button to return to the top display.) The previous display reappears. A check mark is added to the set language.

6.1 Displaying and Changing Collector System Settings

Clock Setting

You can set the time of the clock displayed on the collector.

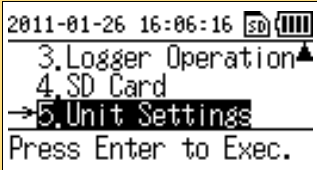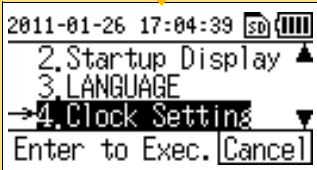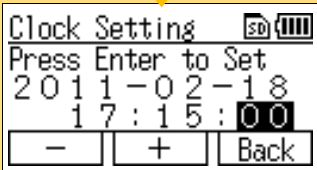1  2	1 Show the top display of the collector. (To return to the top display from another display, select [Back] or [Cancel].)
3  4 	2 Move the cursor to [Unit Settings], and then press the  button. 3 Move the cursor to [Clock Setting], and then press the  button. (Press the F3 button to return to the top display.) 4 Move the cursor to the digit you want to change, and then use the F1 or F2 button to change the number. (To return to the previous display, press the F3 button.) 5 Press the  button. The time of the clock changes to the set time, and the previous display reappears.

NOTE






- If the time of the clock is not correct, the wrong time will be mistakenly set on the logger and the time information for the collected data or SD memory card files will not be correct, resulting in undesirable consequences. Verify the clock display and set the correct time before using the collector.
- If the clock setting is significantly different from the actual time when the power is turned off and then back on again after the clock has been set, the life of the clock backup battery is over. The battery needs to be replaced so contact the place of purchase (dealer) or your nearest Hioki sales office.
See: "Requesting Repairs" (p.129)

6.2 Performing Self Checks

You can perform self checks on the collector and SD memory card.

Firmware

Perform a self check of the firmware of the collector.

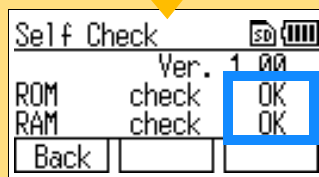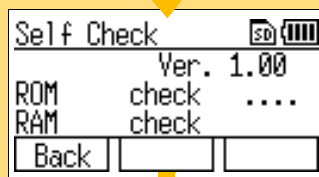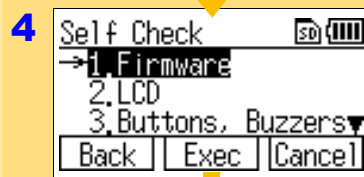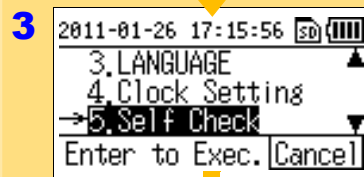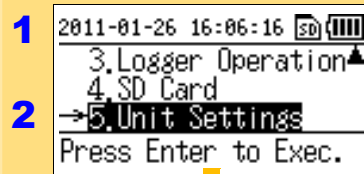

- 1** Show the top display of the collector.

(To return to the top display from another display, select [Back] or [Cancel].)

- 2** Move the cursor to [Unit Settings], and then press the  button.

- 3** Move the cursor to [Self Check], and then press the  button.

(Press the F3 button to return to the top display.)

- 4** Move the cursor to [Firmware], and then press the  button (or F2 button).

(To return to the previous display, press the F1 button. Press the F3 button to return to the top display.)

The display on the left is shown during a firmware self check.

When you want to cancel the self check part way through:

To return to the previous display, press the F3 button.

When the self check is completed, the result appears on the right side of the display.

Press the F1 button to return to the display of step 4.



If NG appears, the collector needs to be repaired.

Contact the place of purchase (dealer) or your nearest Hioki sales office.

See: "Requesting Repairs" (p.129)

LCD

Perform a self check of the LCD of the collector.



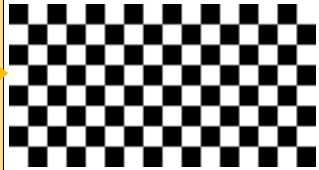
1	2011-01-26 16:06:16 SD  3. Logger Operation 4. SD Card → 5. Unit Settings Press Enter to Exec.	1	Show the top display of the collector. (To return to the top display from another display, select [Back] or [Cancel] .)
2		2	Move the cursor to [Unit Settings] , and then press the  button.
3	2011-01-26 17:15:56 SD  3. LANGUAGE 4. Clock Setting → 5. Self Check Enter to Exec. [Cancel]	3	Move the cursor to [Self Check] , and then press the  button. (Press the F3 button to return to the top display.)
4	Self Check  1. Firmware → 2. LCD 3. Buttons, Buzzers Back Exec Cancel	4	Move the cursor to [LCD] , and then press the  button (or F2 button). (To return to the previous display, press the F1 button. Press the F3 button to return to the top display.)
			The display on the left is shown during an LCD self check. Each press of the  button switches the display. When the self check is completed, the display of step 4 reappears.
			
			

NOTE

If there is an abnormality with the LCD display, submit the collector for repairs.
 See: "Requesting Repairs" (p.129)

Buttons and Buzzers

Perform a self check of the buttons and buzzers of the collector.

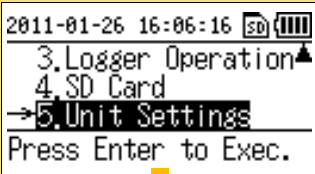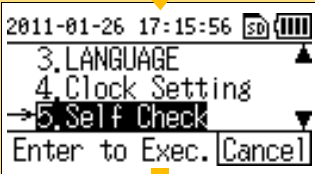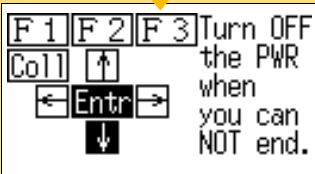1  2	1 Show the top display of the collector. (To return to the top display from another display, select [Back] or [Cancel].)
3  4	2 Move the cursor to [Unit Settings], and then press the  button. 3 Move the cursor to [Self Check], and then press the  button. (Press the F3 button to return to the top display.)
5 	4 Move the cursor to [Buttons, Buzzers], and then press the  button (or F2 button). (To return to the previous display, press the F1 button. Press the F3 button to return to the top display.)
5 	5 Press each button. When you press a button, verify that the button color on the display changes and that a buzzer sounds. When you want to cancel the self check part way through: Turn off the power. When all of the buttons have been pressed and the self check is completed, the display of step 4 reappears.

NOTE

If there is an abnormality such as a button does not work, turn off the power and then submit the collector for repairs.

See: "Requesting Repairs" (p.129)

SD Card

Perform a self check of an SD memory card.

1 2011-01-26 16:06:16 SD [] 3. Logger Operation ▲ 4. SD Card → 5. Unit Settings Press Enter to Exec.	1 Show the top display of the collector. (To return to the top display from another display, select [Back] or [Cancel].)
2 → 5. Unit Settings Press Enter to Exec.	2 Move the cursor to [Unit Settings], and then press the  button.
3 2011-01-26 17:15:56 SD [] 3. LANGUAGE ▲ 4. Clock Setting → 5. Self Check ▼ Enter to Exec. [Cancel]	3 Move the cursor to [Self Check], and then press the  button. (Press the F3 button to return to the top display.)
4 Self Check SD [] 2. LCD ▲ 3. Buttons, Buzzers → 4. SD Card [Back] [Exec] [Cancel]	4 Move the cursor to [SD Card], and then press the  button (or F2 button). (To return to the previous display, press the F1 button. Press the F3 button to return to the top display.)
Self Check [] Insert an SD card. S → 4. SD Card [Back] [] []	If an SD memory card is not inserted, the display on the left appears. Insert an SD memory card, and then press the F3 button. (To return to the previous display, press the F1 button.)
Self Check SD [] SD is being checked [] [] [Cancel]	The display on the left is shown during an SD memory card self check.
Self Check SD [] SD card OK [Back] [] []	When you want to cancel the self check part way through: To return to the previous display, press the F3 button. When the self check is completed, the result appears on the right side of the display. Press the F1 button to return to the display of step 4. If NG appears, we recommend using a different SD memory card because a problem with the checked SD memory card was found.

6.3 Initializing the Collector (Restoring to Factory Default State)

You can initialize the collector.

1 2	1 Show the top display of the collector. (To return to the top display from another display, select [Back] or [Cancel].)
3 4	2 Move the cursor to [Unit Settings], and then press the button. 3 Move the cursor to [Initialize], and then press the button. (Press the F3 button to return to the top display.)
5 4	4 Press the F2 button. (To return to the previous display, press the F1 button. Press the F3 button to return to the top display.)
5 5	5 Press the F1 button. (Press the F3 button to return to the display of step 3.) After initializing is completed, the top display appears.

Using the LR5000 Utility Program **Chapter 7**

You can use the LR5000 Utility Program to import (save) recorded data to a computer, and browse and print recorded data. It can also be used to make the settings of the collector or logger from a computer.

7.1 Installing the PC Application Program

LR5000 Utility Program Operating Requirements

CPU	1 GHz or faster processor clock
RAM	1 GB or more (32-bit), 2 GB or more (64-bit)
OS	Windows7 or Windows 10
Library	.NET Framework 4.5.2 or later
Interface	USB
Monitor Resolution	1024×768 or higher
Hard Disk	At least 30 MB free space (Additional space is required for storing recorded data.)


7

Chapter 7 Using the LR5000 Utility Program


7.1 Installing the PC Application Program

Installation Procedure


1. Start the computer.
Administrator authority may be required for the installation.
2. Set the included CD to the CD-ROM drive.
3. Click [Start] to display the application list.
Click [Windows System] - [File Explorer] to start Explorer.

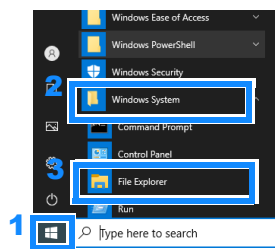


4. Click [This PC], and then, double-click [CD Drive (D:)] drive.

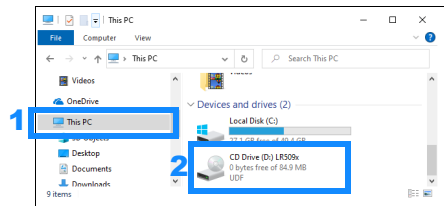

5. Double-click the [english] folder.

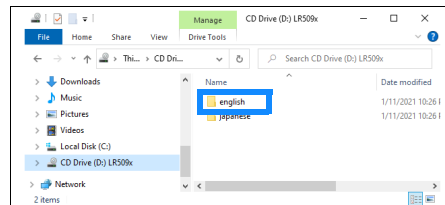

6. Double-click [setup.exe] (SET UP file).

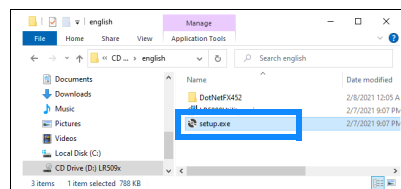

(The extension may not be displayed.) After the installer starts, follow the instruction to proceed with the installation.

7.1 Installing the PC Application Program



If the computer fails in the installation

- Some computers, depending on system environments including OS and security, can fail in the installation using the CD-R. In such a case, download the executable program from the “Drivers, Firmware, Software” page of Hioki’s website, and then install it again.
- The data logger series LR5000 programs consists of LR5000 Utility Program and LR5091/LR5092 Device Driver, both of which need to be installed.
- If the earlier version of LR5091/LR5092 Device Driver has been installed, uninstall it before installing the latest version of program.
- Ask your system administrator if installing application programs or changing system environments is prohibited for security reasons.



How to start the program?

- The program starts automatically from the next Windows logon. (The icon appears in the task tray (notification area)(p.72).)
- Click the icon and click [\[Show Main Screen\]](#).

NOTE

For setting and importing recorded data from loggers other than the LR5000 series, use the Communication Utility program supplied with the model 3911 or 3912 Communication Base. You can browse the recorded data by using LR5000 Utility Program also.

7.1 Installing the PC Application Program


NOTE

The various settings and recorded data will not be deleted when you uninstall or update the software.

Uninstall Procedure

Follow this procedure to uninstall the LR5000 Utility Program.

- 1 Click **[Start]-[Settings]**.
(The **[Windows Settings]** dialog box appears.)
- 2 Click **[Apps]**.
(The **[Apps & features]** screen appears.)
- 3 Select the **[LR5000 Utility Program]**, and click the **[Uninstall]** button.
- 4 Click **[Uninstall]**.
(The program is uninstalled.)

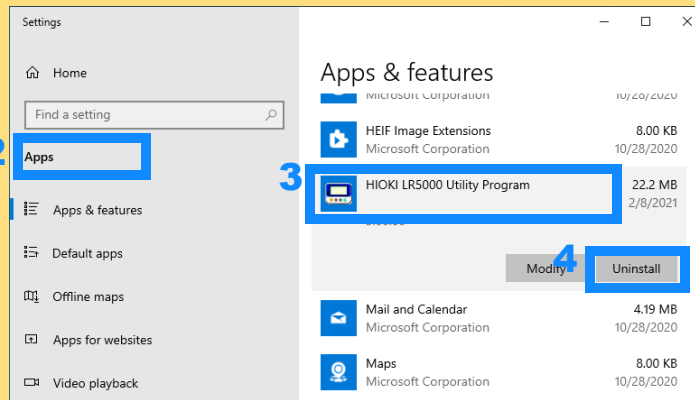

Version Upgrading

Download the latest version of the LR5000 Utility Program from our website (<http://www.hioki.com>).

Follow the procedure on the download page to install the latest version. (The old version is uninstalled automatically.)

Main Screen

- Logger data import
- Data Collector data import
- SD memory card data import

Displays Help.

- Logger settings
- Data Collector settings
- SD Memory Card settings



Display Data Sorting screens




Make and export logger and Data Collector settings. Logger settings can be saved to an SD Memory Card.

Data Import Screens (p.94), (p.98)

Import data from the logger, Data Collector, or SD Memory Card with these screens.

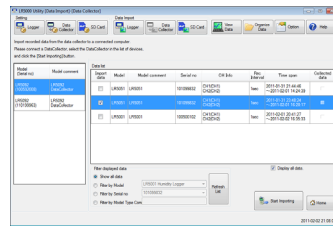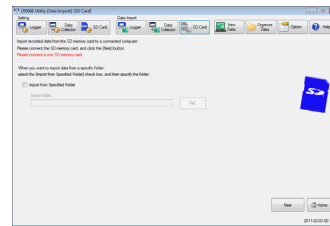Example: Data Collector import screen**Example: SD memory card import screen****Data Viewing Screens (p.88), (p.92), (p.101)**

View imported data on these screens.
Select a file to view, as a graph or table.

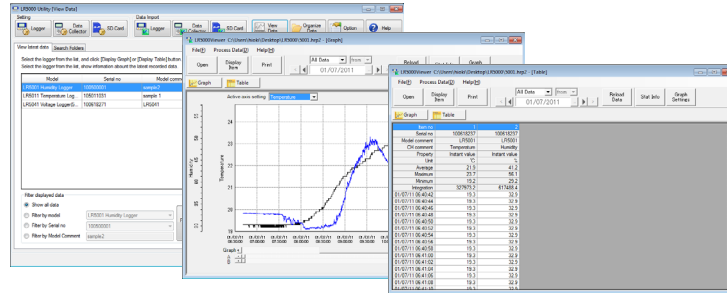Example: Screens for viewing the latest data

Sort imported data on these screens.
You can copy, delete, move, combine, and extract data.

The screenshot shows the 'Optional' tab in the 'Components' section. The 'Data Collector' checkbox is checked. The 'Destination folder' is 'C:\Users\helen\Documents\PROJECTS'. The 'New list' on the right shows the file structure for the installation, including 'UFTSetup.exe' and various support files.

Make advanced settings on these screens.
You can specify the data importing method.

[illegible]

7.2 Setting the Collector from the LR5000 Utility Program


You can use the LR5000 Utility Program installed on the computer to make the collector settings (logger settings in the collector memory or SD memory card).

See: For how to make logger settings, refer to the Instruction manual supplied with the logger.



CAUTION To avoid damage to the instrument, do not short-circuit the USB terminal and do not input voltage to the USB terminal.

Required Items: LR5092-20 Data Collector, Logger, USB cable, Computer

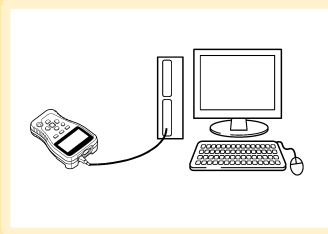


Be sure to install the LR5000 Utility Program on the computer before connecting the collector.

See: Installation Procedure: "7.1" (p.65)

Plug the USB cable into the USB port on the collector, and into a USB port on the computer.

The main display appears automatically (by default).

Collector Settings

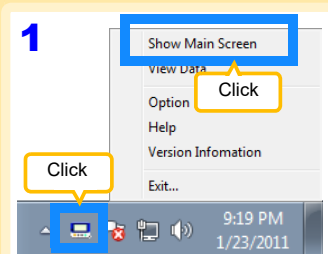


1 If the main screen does not appear, click the icon in the task tray (notification area), and then click **[Show Main Screen]**.

The main screen appears.

7.2 Setting the Collector from the LR5000 Utility Program

2

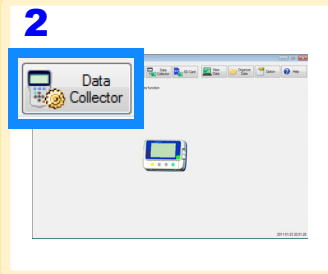

2 For the [Setting], click the [Data Collector] button.

The Data Collector Settings screen appears. (If the Data Collector is not connected, you are prompted to connect it. Connect the Data Collector.)

3 Select the logger from the device list*, and edit the settings. (p.75)

4 Click the [Send Settings] or [Send All Settings] button*.

Setting Options
Note: The displayed settings are those previously made from the LR5000 Utility Program, which may be different from the current settings within the Data Collector itself.

3 Click to select.
The background color of the selected data collector changes.

Select this check box to also display data collectors (that are not connected) to which settings were saved previously in the list.

Sets the clock setting of the collector connected to the computer to the same time as the clock of the computer.

Returns to the main screen.

4

4



How can the settings of the current data collector be reflected in the setting options?


1. Click the [Import Settings] button at the upper right of screen. (A dialog (p.74) appears.)
2. Select the check boxes of the settings you want to import, and then click the [Import Settings to Computer] button. (The settings are reflected in the setting options.)



How can the settings of another logger be saved to the SD memory card?


1. Edit the settings in the [Logger settings to save to SD card (in data collector)] list. (p.75)
2. Click the [Send All Settings] button. (*:The settings to be saved to the SD memory card are sent together with the basic settings.)

7

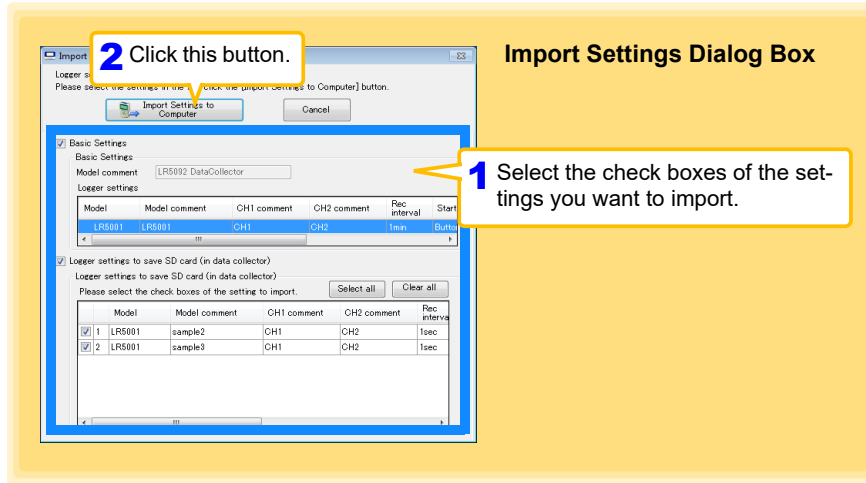

7.2 Setting the Collector from the LR5000 Utility Program

 How can I learn more about changing settings?

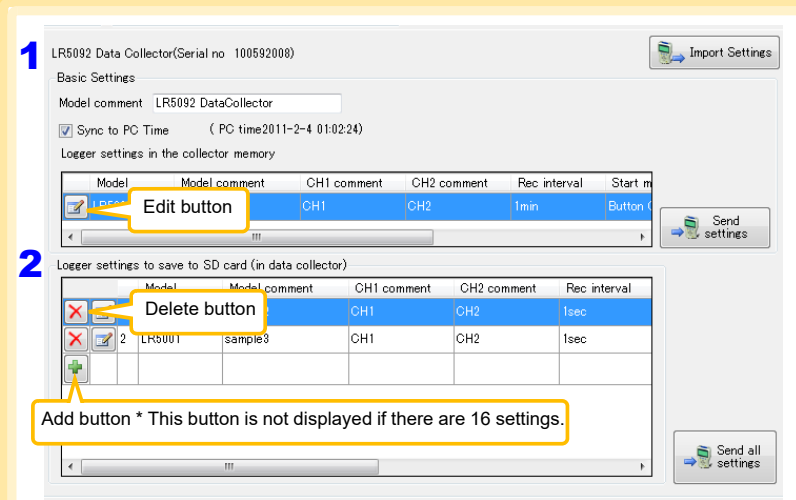

1 Setting the [Basic Settings].

Model	Enter a comment to describe the data collector as needed.
Comme	
Sync to PC Time	Check this to match the collector's clock setting to the computer's time
Logger settings in the collector memory	Display and edit the logger settings to save to the internal memory of data collector. Click the Edit button to display the setting dialog box.(p.76)

Note: Comments may consist of up to 20 characters.
The following characters are not allowed: \, /, :, *, ?, ", <, >, and |.


2 Edit the settings in [Logger settings to save to SD card (in data collector)]. (If necessary)

- Click the Edit button to display the setting dialog box. (p.76)
- Click the Delete button to delete the corresponding setting.
- Click the Add button to display the setting dialog box. (p.76)
(A new setting is added.)



When you want to know more about how to edit the logger settings:

* This section explains editing settings using the LR5001 Humidity Logger as an example. For details on the setting items of each of the loggers, refer to "Making Settings from the LR5000 Utility Program" in the instruction manuals of the corresponding loggers.

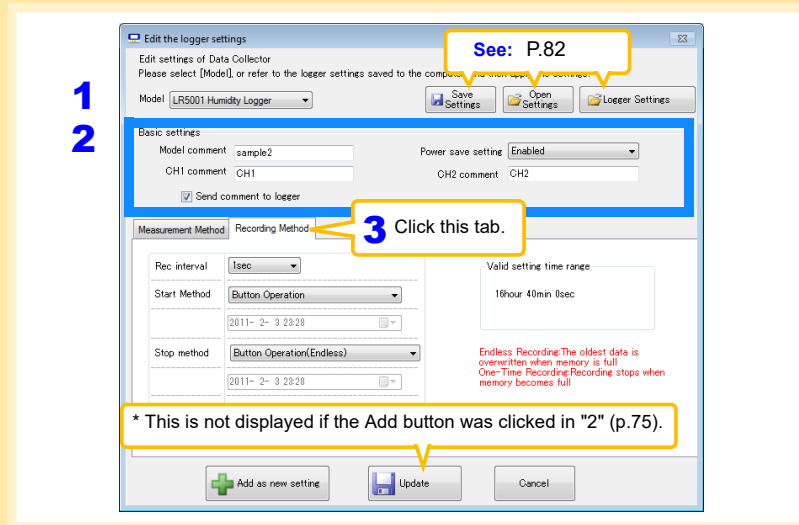

1 Select the logger to which you want to save the settings in **[Model]**. (When adding)

2 Setting the **[Basic Settings]**.

Model comment	Enter a comment to describe the logger as needed.
Power save setting	Enable or disable the power save setting (p.23).
CH1 comment	Enter a comment to describe the measurement channel as needed.
CH2 comment	

Note: Comments may consist of up to 20 characters.

The following characters are not allowed: \, /, :, *, ?, ", <, >, and |.

3 Settings on the **[Recording Method]** tab.

Continued →

7.2 Setting the Collector from the LR5000 Utility Program

Rec interval

Sets the recording interval.

1/2/5/10/15/20/30 sec., 1/2 /5/10/15/20/30/60 min (1day: for the LR5061 only)

Start Method

Select the recording start method.

When **[Scheduled Time]** is selected, specify the start date and time.

Setting Item	Setting Description
Button Operation	Starts recording by pressing the button on the logger.
Start After Sent	Starts recording by pressing the [Send Settings] button.
Scheduled Time	Starts recording at the scheduled time after pressing the [Send Settings] button.

Valid setting time range	01/01/2010, 00:00 to 12/31/2039, 23:59
--------------------------	--

NOTE

When the **[Scheduled Time]** start method is enabled, the **[REC]** indicator on the logger display blinks until the specified start time.

Stop Method

Select the recording stop method.

When **[Scheduled Time (Endless)]** or **[Scheduled Time (One-Time)]** is selected, the date and time need to be set.

Setting Item	Setting Description
Button Operation (endless)	Stops recording by pressing the button on the logger. The oldest data is overwritten when memory is full.
Button Operation (one-time)	Stops recording by pressing the button on the logger. Recording also stops when memory becomes full.
Scheduled Time (Endless)	Stops recording at the scheduled time. The oldest data is overwritten when memory is full.
Scheduled Time (One-Time)	Stops recording at the scheduled time. Recording also stops when memory becomes full.
Hold Data at Scheduled Time	Specify when setting [Scheduled Time (Endless)] . Select this check box to record the data at the scheduled time and stop recording.

Rec Mode

Select the recording mode.

Setting Item	Setting Description
Instantaneous	The instantaneous value is recorded at each recording interval.
Statistical	Measurements are taken once per second, and instantaneous, maximum, minimum, and average values are recorded at each recording interval. (Up to 15,000 data values can be recorded.)


See: Statistical recording results in shorter logger battery life.

NOTE

Statistical recording is not available when the recording interval is set to 1 second.

4 Settings on the [Measurement Method] tab

Click the [Edit] button to display the setting dialog box.

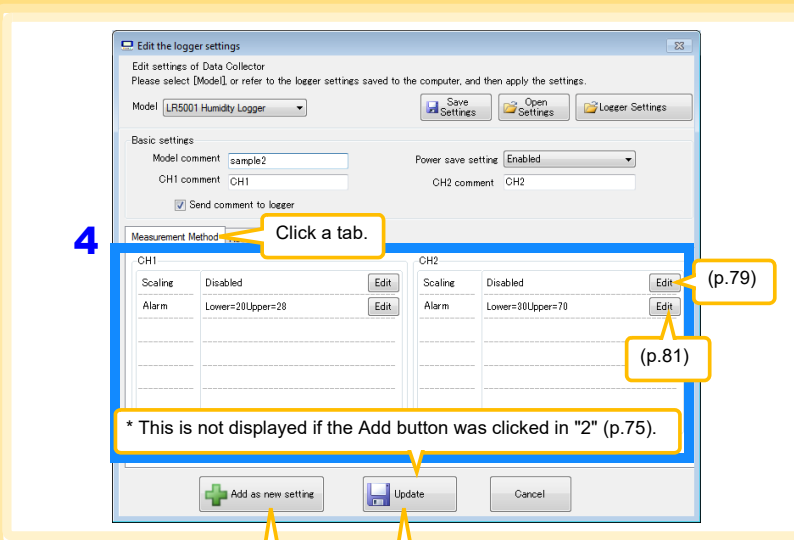

5 Click one of these buttons.

* The [Add as new setting] button is not displayed when there are 16 settings.

Continued →


7.2 Setting the Collector from the LR5000 Utility Program

Scaling (set as needed) See: "What is Scaling?" (p.80)

The following scaling calculation is applied to measured values.

Scaled Result = Raw data (measured value) × A + B × SI prefix (multiplier)

The scaled result is displayed on the logger.

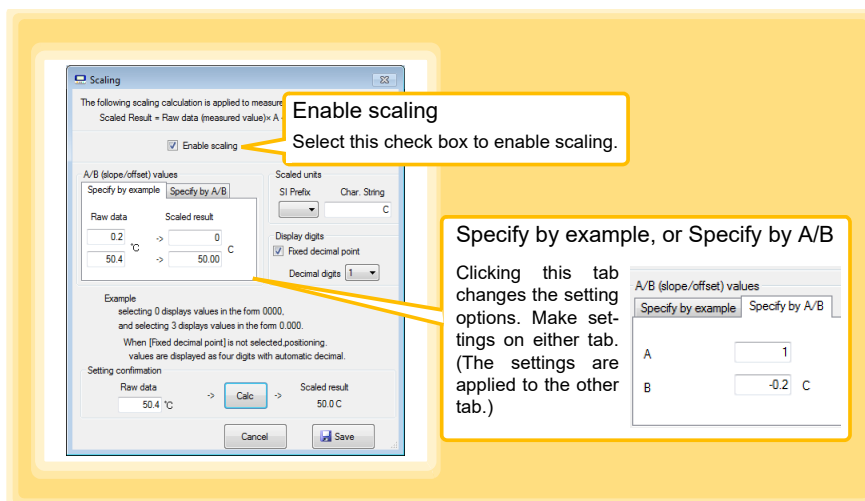

1. Set the following options.

Setting Item	Setting Description
Specify by example	Enter two known conversion points (up to ten digits each).
Specify by A/B	Enter the scaling coefficients (A and B, up to ten digits each).
Scaled units	- Select the [SI Prefix]. ([p]=1E-12, [n]=1E-9, [μ]=1E-6, [m]=1E-3, blank =1E0, [k]=1E3, [M]=1E6, [G]=1E9, [T]=1E12) - Enter the [Char. String] to identify the scaled units. (Up to five characters, except \, /, :, *, ?, ", <, >, and .)
Display digits	- Select [Fixed decimal point] and specify the [Decimal digits] to be displayed to the right of the decimal point. Valid settings are 0 to 3. (Examples: selecting 0 displays values in the form 0000, and selecting 3 displays values in the form 0.000) - When [Fixed decimal point] is not selected, values are displayed as four digits (0.000 to ±9999) with automatic decimal positioning.

2. Confirm the settings.

Setting confirmation	Confirm that scaling is performed properly. Enter any numerical value as raw data, and click the [Calc] button to display the scaled result.
-----------------------------	--

3. Click the **[Save]** button.

(Scaling settings are saved, and the display returns to the Logger Settings screen.)


Note: If you click the **[Cancel]** button without saving the settings, the display still returns to the Logger Settings screen.

What is Scaling?

Scaling converts actual measurement values to their corresponding values in arbitrarily determined units for display. It is useful for reconciling the difference between values measured with the logger and those of a reference device.

For example, when two points of correspondence are known between values measured with the logger and those of the reference device, select **[Specify by example]**.


- (1) When the logger measures 0.2°C the reference device measures 0.0°C, and
- (2) when the logger measures 50.4°C the reference device measures 50.0°C

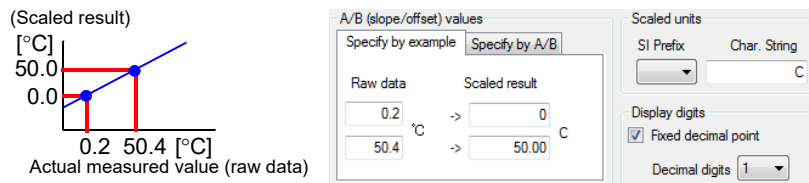

Alternatively, when one point of correspondence is known between the logger and reference device, select **[Specify by A/B]**.

- (1) The logger measures 0.2°C and the reference device measures 0.0°C.

Since only one point is known, set the slope to "1" and enter the offset only.

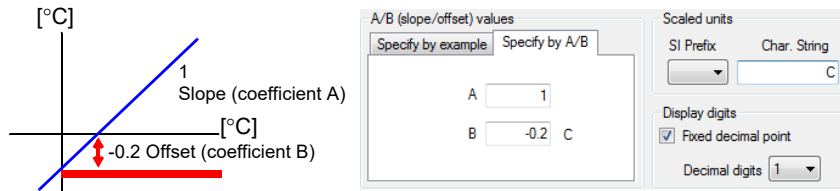


7.2 Setting the Collector from the LR5000 Utility Program

Alarm Thresholds (set as needed)

Set the upper and lower alarm threshold values.

When a measurement is outside of the specified area, the **[AL]** (alarm) indicator is displayed on the logger.

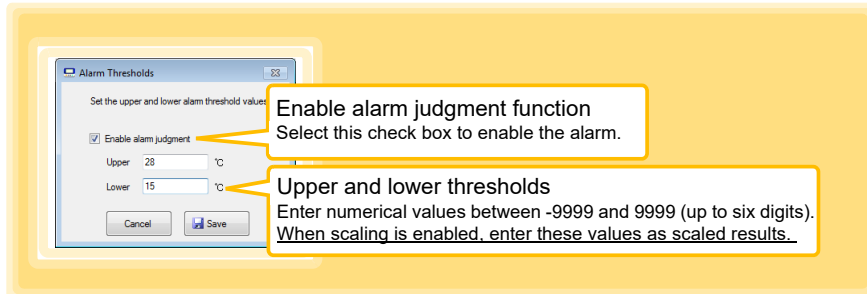

Click the **[Save]** button to save your settings.

(The display returns to the Logger Settings screen.)


Note: If you click the **[Cancel]** button without saving the settings, the display still returns to the Logger Settings screen.

Note: Alarm judgment is performed at every recording interval during instantaneous recording, and once per second during statistical recording.


Note: Alarm judgment is performed using measurement values with a larger number of digits than the values (4 digits) indicated in the Data Logger's display.

Note: The **[AL]** indicator appears when the measured value is out of range (OF/UF displayed), and when a sensor anomaly occurs (- - - displayed).

Other Functions of the Edit Settings Dialog Box

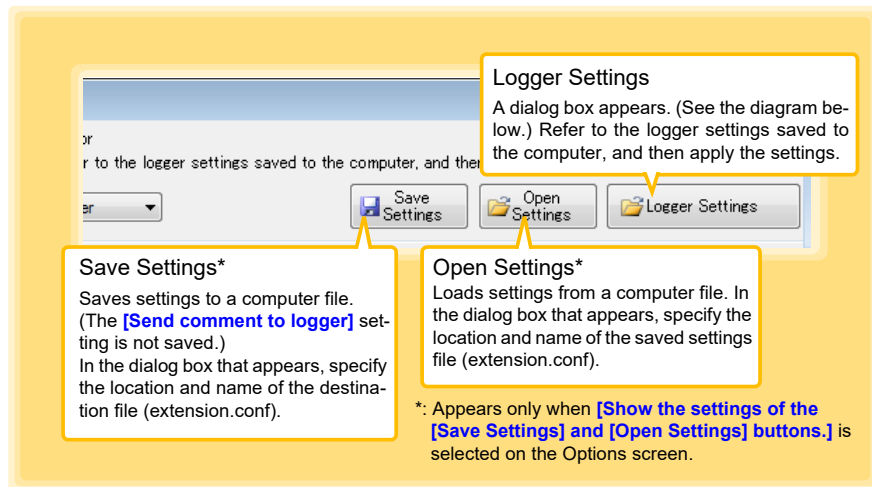

Refer to Settings Dialog Box

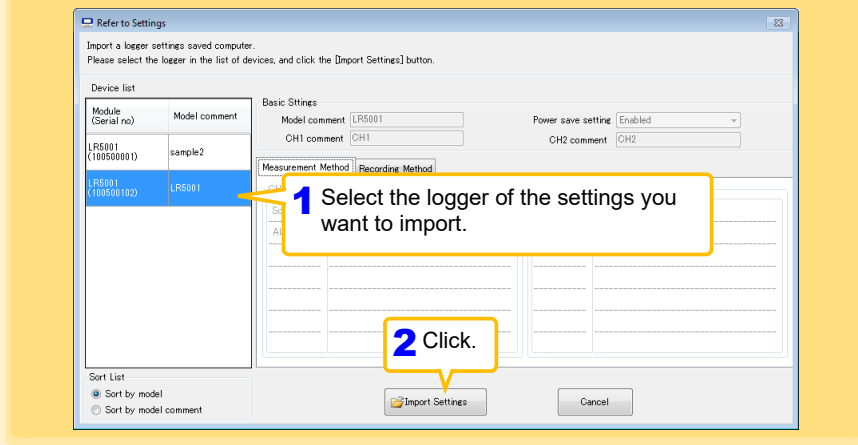

Sending Settings to Logger


Connect the logger to which you want to send the settings to the collector, and then send the settings.

See: "3.3 Sending Measurement Condition Settings to Logger" (p.26)

7.3 Saving Setting Data from the LR5000 Utility Program to the SD Memory Card


You can save logger setting data saved to the computer to an SD memory card. (You can also save the setting data in the SD memory card to the computer.) The saved data can also be edited.

Required Items: SD memory card, SD memory card reader, Computer

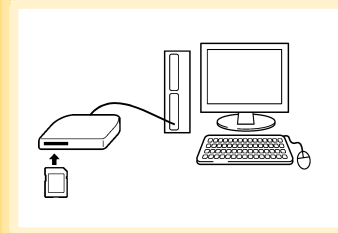


- 1** Insert the SD memory card in an SD memory card reader.
- 2** Connect the SD memory card reader to a USB port on the computer.

Saving Setting Data to SD Memory Card

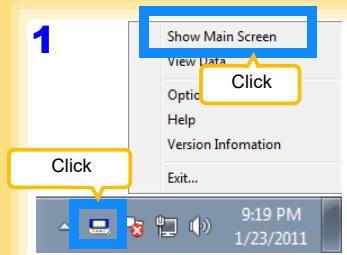

- 1** If the main screen does not appear, click the icon in the task tray (notification area), and then click **Show Main Screen**.

The main screen appears.


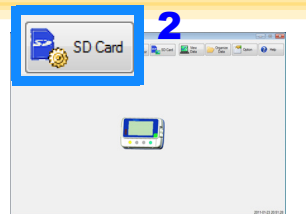


- 2** For the **[Setting]**, click the **[SD Card]** button.

The SD card Settings screen appears. (If the SD card is not connected, you are prompted to connect it. Connect the SD card.)

7.3 Saving Setting Data from the LR5000 Utility Program to the SD Memory Card

- 3 Select the drive to which the SD memory card is connected from the list of drives.
- 4 Click the [Next] button.
- 5 Select the check boxes of the setting data you want to save to the SD memory card, and then click the [Add to SD Card] button.

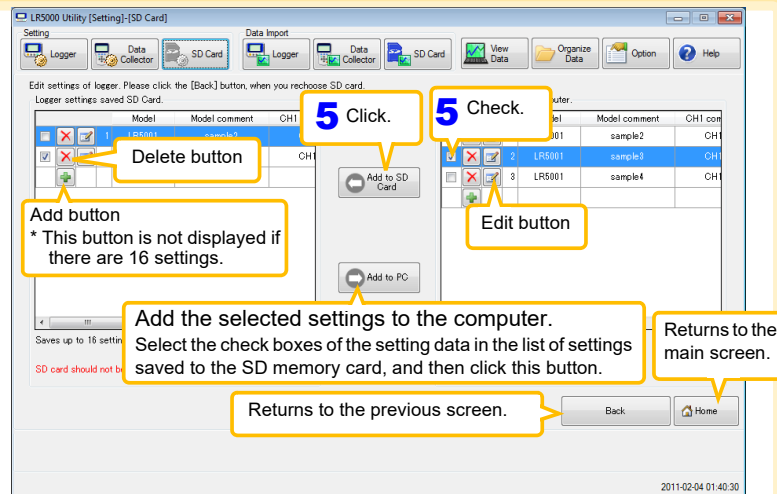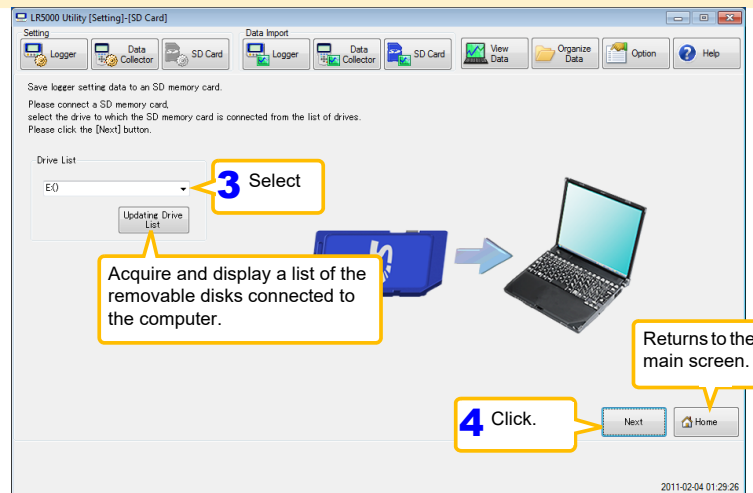

You can also edit the logger settings in a list.


See: About the Edit, Delete, and Add buttons (p.75), How to edit logger settings (p.76)

7.4 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

7.4 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

You can use the LR5000 Utility Program installed on the computer to import (save) recorded data from the collector to the computer. (Installation procedure: "7.1" (p.65))

Required Items: Collector, USB cable, Computer

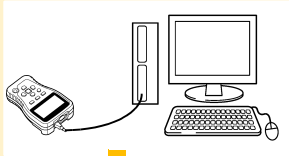


1 Plug the USB cable into the USB port on the collector, and into a USB port on the computer.


The main screen appears automatically. (Initial setting)
If there is uncollected data, the dialog box for confirming importing of the data appears.



2 Click [Yes].

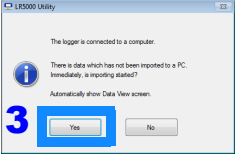


3 Click [Yes].

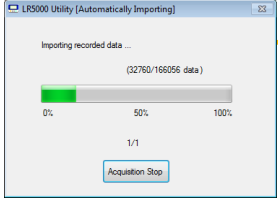

The data recorded in the logger is imported to the computer automatically. Imported data is saved to a file (Auto Import).

Note: By default, **[Automatically import and store data when the logger is connected to a computer]** (on the Options screen) is enabled. (p.120)

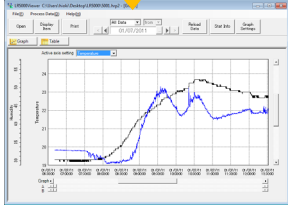

The viewer opens to display the graph (Auto Graph Display).

Note: By default, **[Automatically display graph when data is imported]** (on the Options screen) is enabled. (p.120)


How is recorded data saved?

Recorded data is automatically saved when imported to a computer. The save destination and file name are specified as a basic setting on the Options screen.

7.4 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

Viewer Screen

The viewer screen appears as follows.

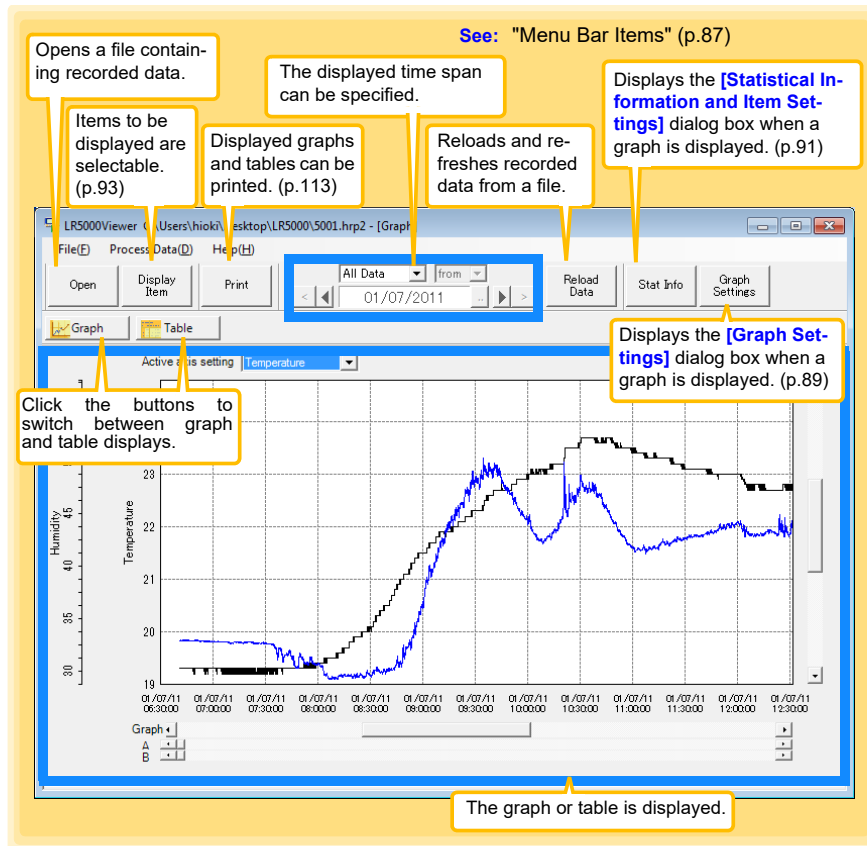

7.4 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display


Menu Bar Items

Menu	Item	Contents
File	Open	Opens a file containing recorded data.
	Recently opened recording files	Opens recently used files.
	Save recording file as	Currently displayed recording data is saved as a new file.
	Print graph	Prints data in graphic format. (p.113)
	Paste to Microsoft Excel®	Pastes displayed data into Microsoft Excel®.
	Export CSV file	exports displayed data as a CSV file.
	Exit	Closes the program.
Process Data	Scaling	Applies scaling to data on one channel. (p.105)
	Power Calculation	Performs approximate electric power calculation. (p.106)
	Energy Cost	Performs approximate energy cost calculation. (p.107)
	Operating Rate	Performs approximate operating rate calculation. (p.108)
	Integration	Performs data integration. (p.109)
	Dew Point	Performs dew-point temperature calculation. (p.110)
	Two-Data-Item Arithmetic	Performs approximate two-data-item arithmetic calculation. (p.111)
Help	OVER Data Revision	Converts data outside of the upper and lower threshold settings to specified values, and saves as new data. (p.112)
	Help	Displays the help file.
	Version	Displays LR5000 Utility Program version information.

7.4 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display


Main Graph Features

The main graph features are shown below.

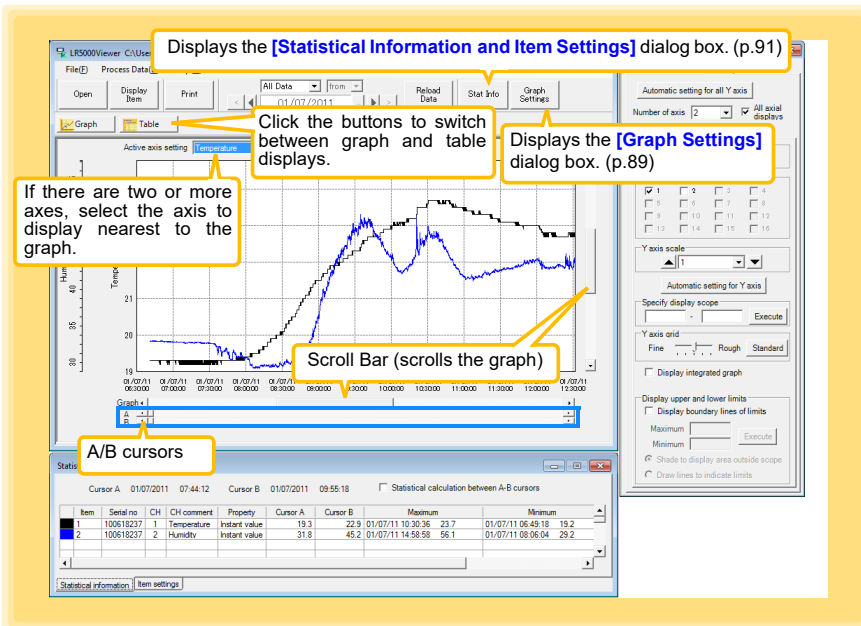

How can the displayed area be magnified?

- 1 Drag over the area to be enlarged to enclose it in a dotted box.
- 2 Right click to open the pop-up menu, and click **[Magnify selected area]**.

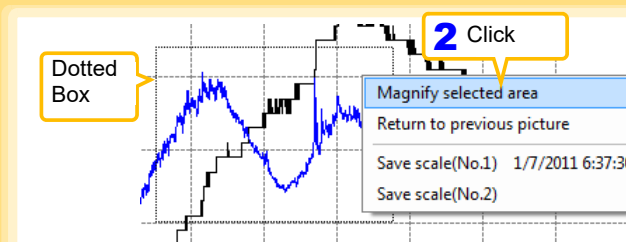

How can graph line color and display be switched?

Change settings on the **[Item settings]** tab in the **[Statistical Information and Item Settings]** dialog box. (p.91)



How can graph details be set?


Detailed settings are available in the **[Graph Settings]** dialog box. (p.89)

7.4 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

[Graph Settings] dialog box


Graph details can be set as follows. Click each tab to access various settings.

[Common] tab

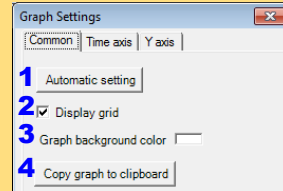

- 1 Automatically sets the time axis and Y-axis to the optimum scale.
- 2 Select to display the grid.
- 3 Changes the graph background color.
- 4 Copies the graph to the clipboard. The graph can then be pasted into Microsoft Word etc.

[Time axis] tab

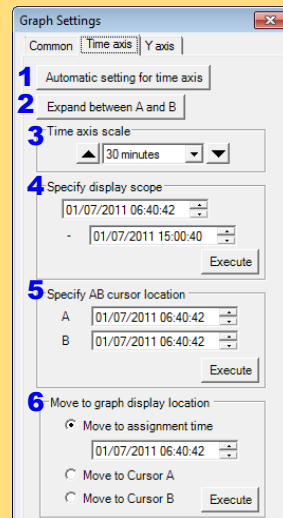

- 1 Automatically sets the time axis to the optimum scale.
- 2 Zooms the display to show only the time span between A/B cursors.
- 3 Changes the time base scale.
- 4 Specifies the displayed time span on the time axis. Click [Execute] to apply the settings.
- 5 Specifies cursor positions. Click [Execute] to apply the settings.
- 6 Specifies the graph start position (time). Click [Execute] to apply the settings.

7.4 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

[Y axis] tab

Graph Settings

Common | Time axis | **Y axis**

1 Automatic setting for all Y axis

2 Number of axis 2 3 All axial displays

4 Axis comment
Temperature

5 Display item

☒ 1	☐ 2	☐ 3	☐ 4
☐ 5	☐ 6	☐ 7	☐ 8
☐ 9	☐ 10	☐ 11	☐ 12
☐ 13	☐ 14	☐ 15	☐ 16

6 Y axis scale
1

7 Automatic setting for Y axis

8 Specify display scope
Execute

9 Y axis grid
Fine ☒ Rough ☐ Standard ☐

10 ☐ Display integrated graph

11 Display upper and lower limits
☐ Display boundary lines of limits
Maximum
Minimum Execute
☒ Shade to display area outside scope
☐ Draw lines to indicate limits


- 1 Automatically sets all Y-axes to the optimum scale.
- 2 When the Y-axis is different for each item, set the number of axes to a value other than one. The axes can be set to the number of displayed items (up to 16).
- 3 Displays all axes.
- 4 A comment can be entered for each axis.
- 5 Select the item assigned to each axis.
- 6 Sets the Y-axis scale for each axis.
- 7 Automatically sets the currently selected Y-axis to the optimum scale.
- 8 Specifies the display span on the Y-axis. Click **[Execute]** to apply the settings.
- 9 Sets the Y-axis grid spacing.
- 10 Display the items selected in **[Display item]** on an integrated graph.
- 11 Upper and lower thresholds can be displayed as solid lines on the graph, or out-of-range areas can be filled with a solid color.

7.4 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

[Statistical Information and Item Settings] dialog box


The following items appear on the [Statistical information] tab.

- Item no.
- Serial no.
- Channel no.
- Channel comments
- Property (Type of measurement value)
- Measured values at A/B cursors
- Statistical data
- Units

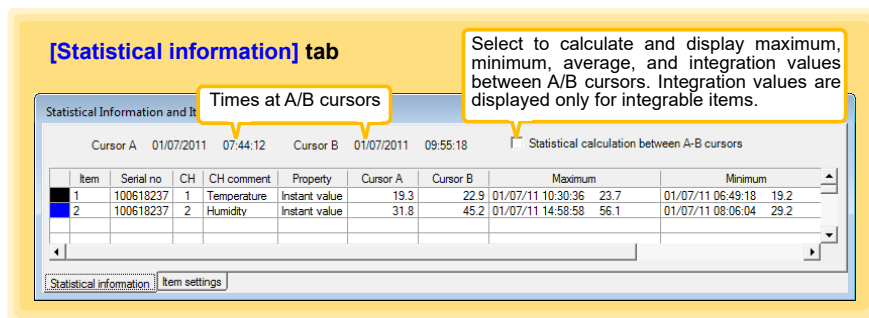

The following items appear on the [Item settings] tab.

- Display on/off
- Graph line colors and thickness
- Bar graph display on/off

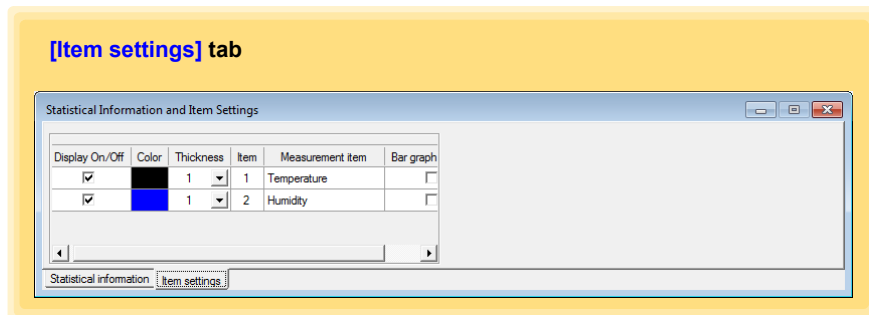

7.4 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

Main Table Features

The main table features are shown below.

Shows the item no., serial no., model comment, CH comment, property, measurement units, and average, maximum, minimum, and integration values of all data.

Double click a maximum or minimum numerical value to jump to the relevant cell (or to the first if there are multiple relevant cells).

Time of Recording

Recorded Values
Blue indicates minimum values, and red indicates maximum values.

Item no.	1	2
Serial no.	100618237	100618237
Model comment	LR5001	LR5001
CH comment	Temperature	Humidity
Property	Instant value	Instant value
Unit	°C	%
Average	21.9	41.2
Maximum	23.7	56.1
Minimum	19.2	29.2
Integration	327973.2	617488.4
Time of Recording	01/07/11 06:40:44	19.3
Recorded Values	01/07/11 06:40:46	19.3
	01/07/11 06:40:48	19.3
	01/07/11 06:40:50	19.3
	01/07/11 06:40:52	19.3
	01/07/11 06:40:54	19.3
	01/07/11 06:40:56	19.3
	01/07/11 06:40:58	19.3
	01/07/11 06:41:00	19.3
	01/07/11 06:41:02	19.3
	01/07/11 06:41:04	19.3
	01/07/11 06:41:06	19.3
	01/07/11 06:41:08	19.3
	01/07/11 06:41:10	19.3

Convenient Table Functions


Use the following operations to scroll the table and copy data to the clipboard.

Item	Contents
Press Ctrl and Home keys simultaneously	Moves to the upper left corner of the table.
Press Ctrl and End keys simultaneously	Moves to the lower right corner of the table.
Home key	Scrolls to display the left edge of the table.
End key	Scrolls to the right edge of the table.
Press Ctrl and C keys simultaneously	Copies the value of the currently selected cell to the clipboard.

7.4 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

Selecting Items for Display

Click the **[Display Item]** button in the viewer to display the **[Select Items for Display]** screen.

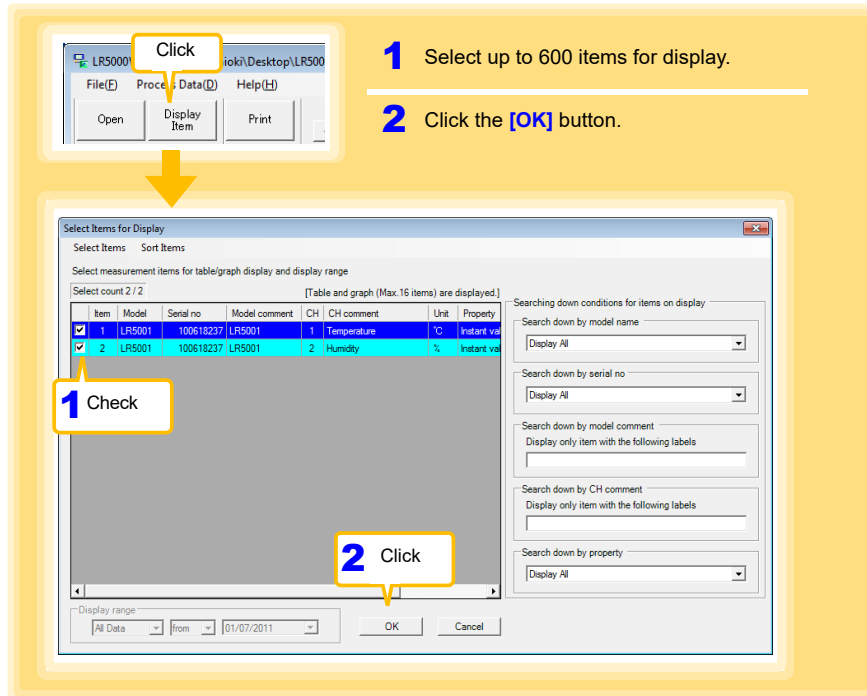


Menu Bar Items

Menu	Items	Contents
Select Items	Check selection range	Add and clear selection of multiple items (display in blue) selected with the mouse. When there are 600 item in the above list, click to select or clear all items.
	Clear checks of selection range	
	Select all selections	
	Clear all selections	
	Select all instant values	Select all items (up to 600) of the same property.
	Select all maximum values	
	Select all minimum values	
Sort Items	Select all average values	
	Sort by model name	Sort by model name, serial no., or model comment.
	Sort by serial no	
	Sort by model comment	Move blue mouse-selected items up or down.
	Move selected item up Alt+Up	
	Move selected item down Alt+Down	Restore original order.
	Restore original order	


7.5 Manually Importing (Saving) Recorded Data to a Computer, and Graph Display

You can manually import recorded data to a computer, and display it in a graph.

1 Click **Show Main Screen** in the task tray (notification area), and click **Click** in the task tray (notification area).

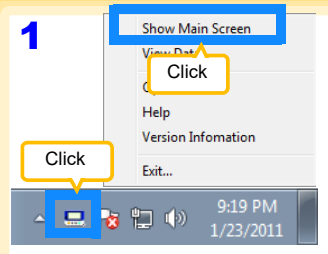

2 For the **[Data Import]** device, click the **[Data Collector]** button.

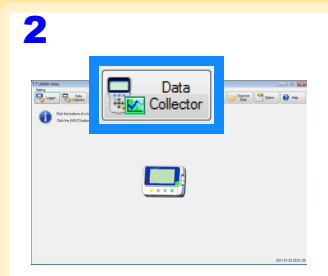

1 If the LR5000 Utility Program is not running on the computer, click the icon in the task tray (notification area), and click **[Show Main Screen]**.

The main screen appears.

2 For the **[Data Import]** device, click the **[Data Collector]** button.


The Data Import screen appears. (If the Data Collector is not connected, you are prompted to connect it. Connect the Data Collector.)

3 Select the logger in the list of devices, and click the **[Start Importing]** or **[Next]*** button.

* If **[Always specify folder and file before importing]** on the Options screen is enabled (p.120).

If you click the **[Start Importing]** button, data importing starts (p.96)

If you click **[Next]**, the Save Method screen appears (p.95)

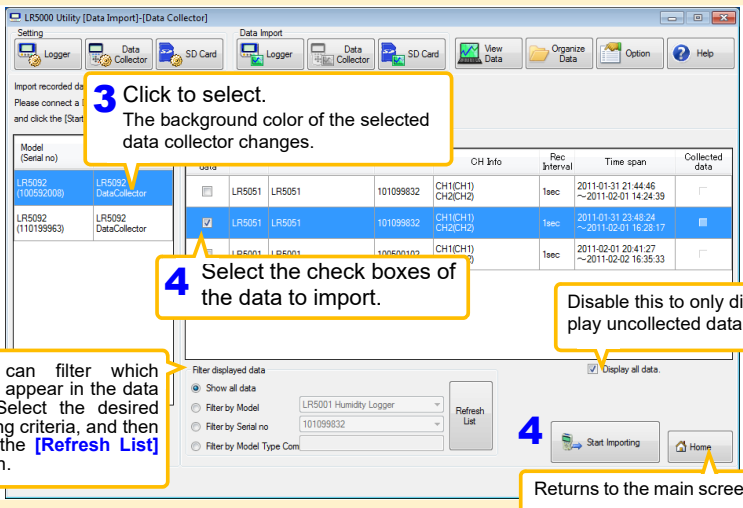

3 Click to select. The background color of the selected data collector changes.

4 Select the check boxes of the data to import.

You can filter which items appear in the data list. Select the desired filtering criteria, and then click the **[Refresh List]** button.

Disable this to only display uncollected data.

4 Returns to the main screen.

7.5 Manually Importing (Saving) Recorded Data to a Computer, and Graph Display

Collection Method Selection Screen

5 Set the collection method. Three methods are available.

Method 1 (Save the data to individual recording files)
Edit the save destination (basic setting).
Note: The Options screen settings (p.120) are refreshed.

Method 2 (Save the data to individual recording files)
Specify the file naming method and save destination folder.*

Method 3
Save the selected data to one recording file.

6 Click Imports the data. (p.96)

* When data from the same collector already exists, newly recorded data is added (if recording is in progress), or saved to a different item (if recording is stopped).


The Save Method screen will appear when the **[Always specify folder and file before importing]** checkbox on the optional screen is selected.
See: "Changing the Saving Method for Imported Data" (p.120)

How is automatic importing performed?
On the Options screen, enable **[Automatically import and store data when the logger is connected to a computer]**. (p.120)

How is the graph automatically displayed after importing data?
Select **[Display graph automatically after importing data]**.
(When not selected, the file list is saved and displayed when importing is finished.)

☒ Display graph automatically after importing data

7.5 Manually Importing (Saving) Recorded Data to a Computer, and Graph Display

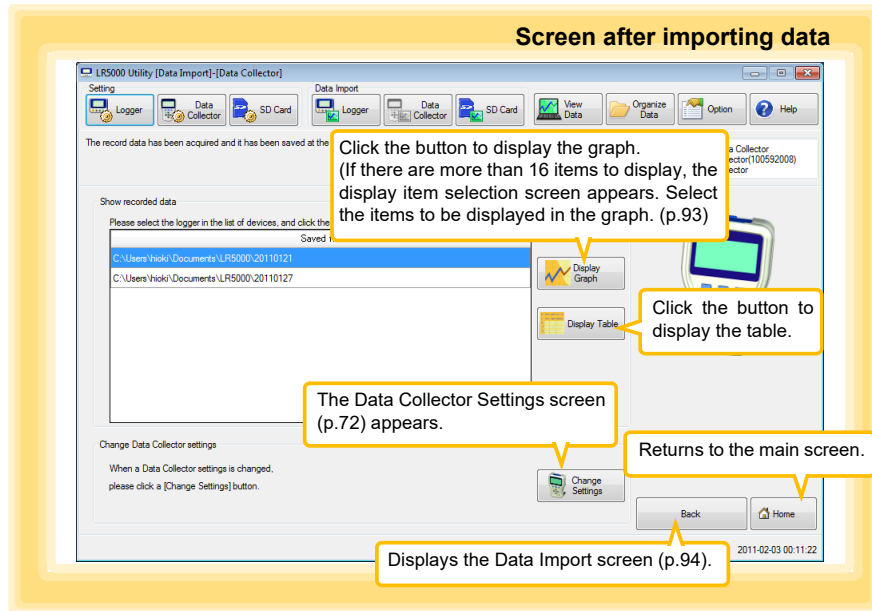


7.6 Importing Recorded Data from SD Memory Card to Computer and Displaying Graph

You can use the LR5000 Utility Program installed on the computer to import (save) recorded data from the collector to the computer.

(Installation procedure: "7.1" (p.65))


Required Items: SD memory card, SD memory card reader, Computer

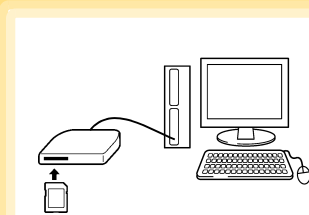

- 1** Insert the SD memory card in an SD memory card reader.
- 2** Connect the SD memory card reader to a USB port on the computer.


Saving Settings Data to SD Memory Card

7

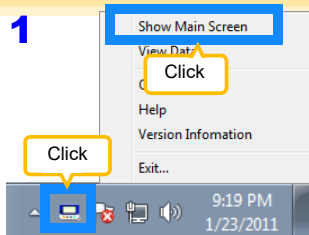

- 1** If the LR5000 Utility Program is not running on the computer, click the icon in the task tray (notification area), and click **[Show Main Screen]**.

The main screen appears.

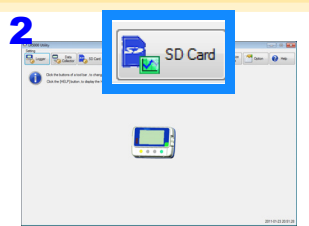

- 2** For the **[Data Import]** device, click the **[SD Card]** button.

The Data Import screen appears. If the SD memory card is not connected, you are prompted to connect it. Connect the SD memory card.

7.6 Importing Recorded Data from SD Memory Card to Computer and Displaying Graph



3 Click the **[Next]** button.

4 Select the check boxes of the data you want to import to the computer, and then click the **[Start Import]** button (or **[Next]** button*).

* If **[Always specify folder and file before importing]** on the Options screen is enabled (p.120).

If you click the **[Start Importing]** button, data importing starts (p.96)

If you click the **[Next]** button, the Collection Method Selection screen appears. (p.99)

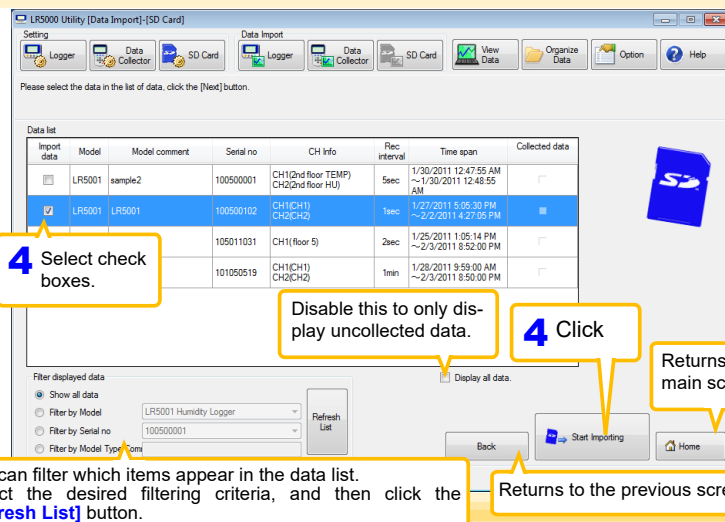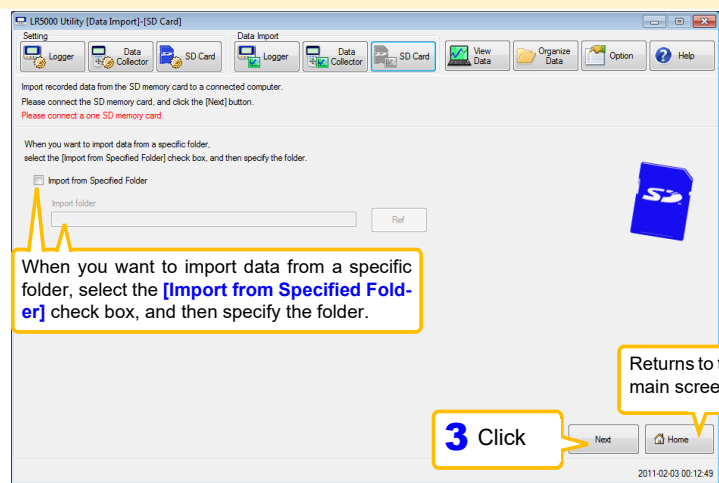

7.6 Importing Recorded Data from SD Memory Card to Computer and Displaying Graph

Collection Method Selection Screen

5 Set the collection method. Three methods are available.

Method 1 (Save to separate recording files)
Edit the save destination (basic setting).
Note: The Options screen settings (p.120) are refreshed.

Method 2 (Save to separate recording files)
Specify the file naming method and save destination folder.*

Method 3
Save the selected data to one recording file.

6 Click Import the data. (p.96)


* When data from the same logger already exists, newly recorded data is added (if recording is in progress), or saved in a different channel file (if recording is stopped).

7 Chapter 7 Using the LR5000 Utility Program

How is the graph automatically displayed after importing data?
Select **Display graph automatically after importing data**.
(When not selected, the file list is saved and displayed when importing is finished.)


☒ Display graph automatically after importing data

7.6 Importing Recorded Data from SD Memory Card to Computer and Displaying Graph

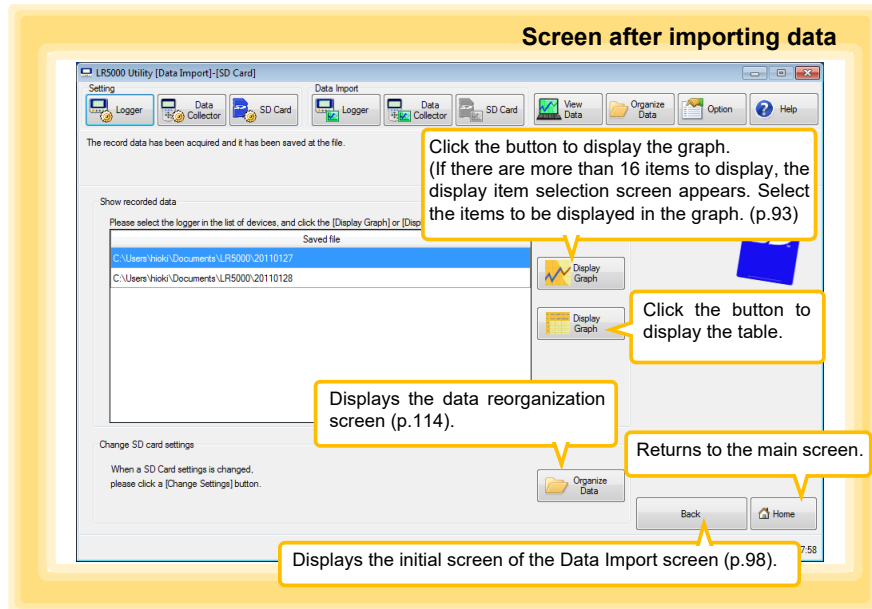


7.7 Displaying a Graph of Saved Recording Data

Use the LR5000 Utility Program to display saved recording data as a graph.

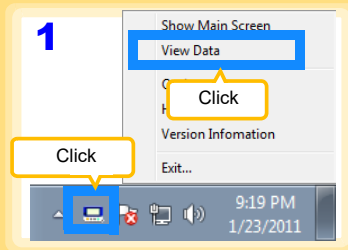

* If the LR5000 Utility Program is running, click **[View Data]** in the main screen.



- 1 If the Utility Program is not running on the computer, click the icon in the task tray (notification area), and click **[View Data]**.*

The Data View screen appears.


The **[View latest data]** tab shows a list of the loggers with data saved on the computer.

- 2 Select the logger from the list.

Information about the latest data appears.

- 3 Click the **[Display Graph]** button.

The viewer opens to display the graph (p.86).
(If there are more than 16 items to display, the display item selection screen appears. Select the items to be displayed in the graph (p.93).)

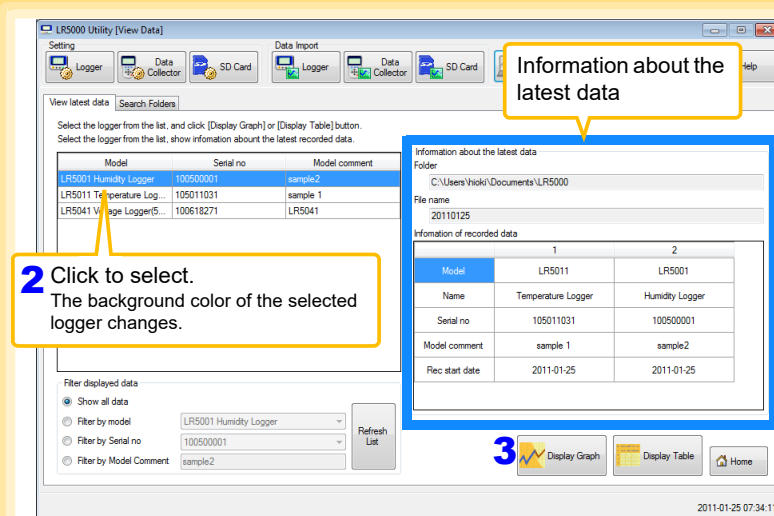

Other Data Viewing Screen Functions

Filter displayed data

You can filter which loggers appear in the list. Specify the desired filtering criteria, and click the **[Refresh List]** button.

Note: You can enter up to 20 characters for **[Filter by Model Comment]**.

Display Table

Opens the viewer to display the table of imported (or selected) data.

**How can past data be viewed?**

On the **[Search Folders]** tab, select the folder and file name to display.

1 Click

2 Select the drive

3 Select the folder

4 Select the file


Recently folder
The last ten folders containing data that was displayed as a graph or table are listed.

File information
Folder: C:\Users\hicki\Documents\LR5000
File name: 20110125
Information of recorded data

	1	2
Model	LR5011	LR5001
Name	Temperature Logger	Humidity Logger
Serial no	105011031	100500001
Model comment	sample 1	sample2
Rec start date	2011-01-25	2011-01-25

7.8 Processing Recorded Data

Recorded data saved on the computer can be processed by scaling, electric power calculation, energy cost calculation, operating rate calculation, integration, dew-point temperature calculation, two-item arithmetic calculation, and out-of-range data revision. The LR5000 Utility Program performs the calculations.

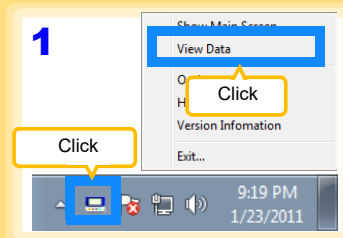

Note: If the LR5000 Utility Program is running, click **[View Data]** on the main screen.



- 1 If the Utility Program is not running on the computer, click the icon in the task tray (notification area), and click **[View Data]**.

The Data View screen appears.


The **[View latest data]** tab shows a list of the loggers with data saved on the computer.

- 2 Select the logger from the list.

Information about the latest data appears.


- 3 Click the **[Display Graph]** button.

The viewer opens to display the graph (If there are more than 16 items to display, the display item selection screen appears. Select the items for which you want to perform data processing (p.93).

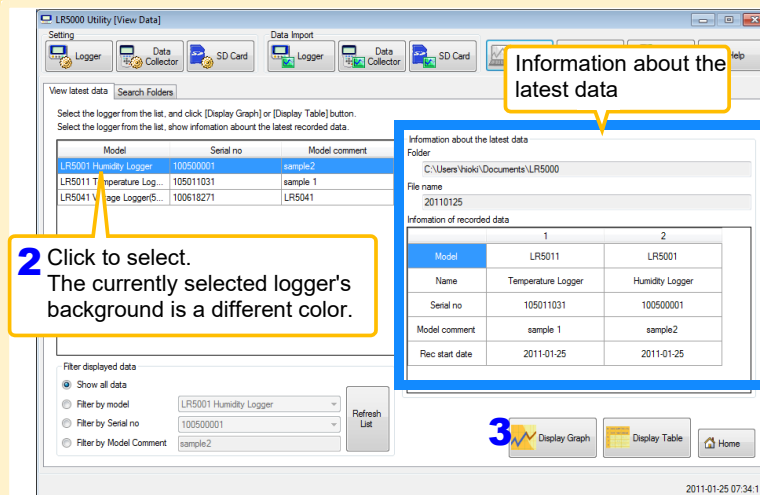

Continued →

- 4** Click **[Process Data]** in the menu bar, and select the desired items.

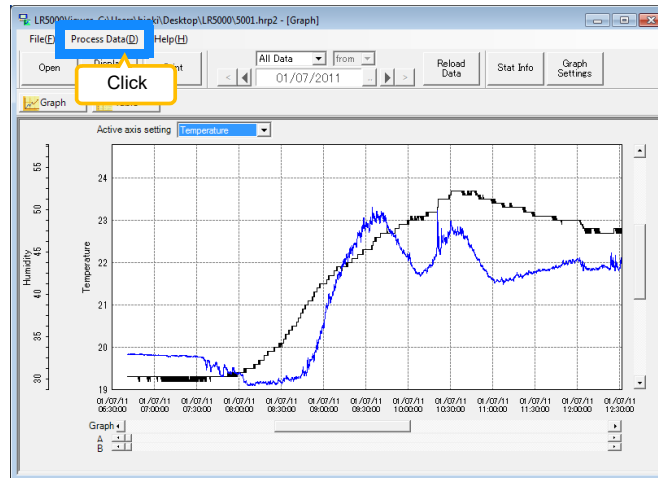

[Process Data] Items

Items	Contents	See
Scaling	Performs scaling on the data of one channel.	(p.105)
Power Calculation	Performs approximate electric power calculation.	(p.106)
Energy Cost	Performs approximate energy cost calculation.	(p.107)
Operating Rate	Performs approximate operating rate calculation.	(p.108)
Integration	Integrates displayed data.	(p.109)
Dew Point	Performs dew-point temperature calculation.	(p.110)
Two-Data-Item Arithmetic	Performs approximate two-data-item arithmetic calculation.	(p.111)
OVER Data Revision	Converts data outside of the upper and lower threshold settings to specified values, and saves as new data items.	(p.112)

Scaling

The following scaling calculation is applied to measured values.
Scaled Result = Raw data (measured value) × A + B × SI prefix (multiplier)
Scaled results are saved as a new item in the recording file.

The screenshot shows the 'Scaling' dialog box with three main sections: 'Item and range settings', 'A/B (slope/offset) values', and 'Setting confirmation'. Annotations point to specific fields: 'Item and range settings' points to the 'Item for calculation' dropdown and 'Time span for calculation' fields; 'A/B (slope/offset) values' points to the 'Specify by example' and 'Specify by A/B' tabs, and the 'A' and 'B' input fields.

Item and range settings
Select the item to be scaled, and the time span.

A/B (slope/offset) values
Clicking this tab changes the setting options. Make settings on either tab. (The settings are applied to the other tab.)

1. Select the items, time span, and the following options.

Setting Item	Setting Description
Specify by example*	Enter two known conversion points (up to ten digits each).
Specify by A/B*	Enter the scaling coefficients (A and B, up to ten digits each).
Scaled units	- Select the [SI Prefix]. ([p]=1E-12, [n]=1E-9, [μ]=1E-6, [m]=1E-3, blank =1E0, [k]=1E3, [M]=1E6, [G]=1E9, [T]=1E12) - Enter a character string to identify the scaled units. (Up to five characters, except \, /, :, *, ?, ", <, >, and .)

* Set either one.

2. Confirm settings.

Setting confirmation	Confirm that scaling is performed properly. Enter any numerical value as raw data, and click the [Calculate] button to display the scaled result.
----------------------	--

3. Click the **[Execute]** button.
(The scaled results are saved.)
Note: Click the **[Finish]** button to close the **[Scaling]** dialog box.


Calculating Electric Power

Approximate electric power is calculated using current measurement data from a clamp logger.

Calculation results are saved as a new item in the recording file.

NOTE

- Electric power calculations are only approximate, so results do not always equal the true electric power value. Use a wattmeter if accurate power measurements are required.
- There is no way to confirm that a specified data item is really a current value. Calculation occurs regardless of data type.

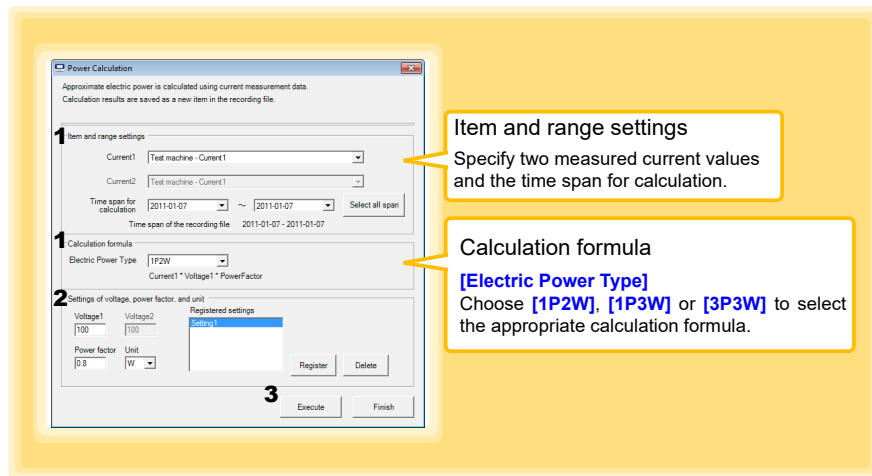


1. Select the items, time span, and calculation formula to be used.
2. Specify the voltage, power factor, and units.
 - To save the settings, click the **[Register]** button.
 - To apply a registered setting, double click it ("Setting1" in the above screenshot).
 - To delete a setting, click it then click the **[Delete]** button.
3. Click the **[Execute]** button.
(Calculation results are saved.)
Note: Click the **[Finish]** button to close the **[Power Calculation]** dialog box.

Calculating Energy Cost

Approximate energy cost is calculated using current measurement data from a clamp logger.

NOTE

- Energy cost calculations are only approximate, so results do not always equal the true energy cost.
- There is no way to confirm that a specified data item is really an electric power value. Calculation occurs regardless of data type.

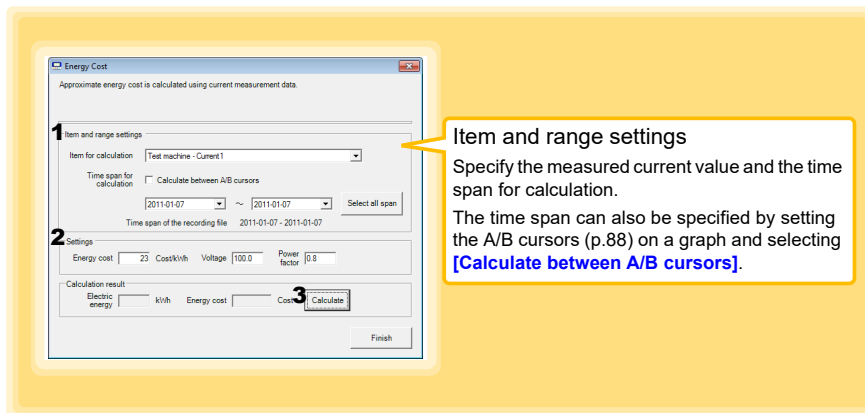


1. Select the item and time span.
2. Specify the cost per kWh, voltage, and power factor.
3. Click the **[Calculate]** button.
(Electric power consumption and energy cost values are calculated and displayed.)
Note: Click the **[Finish]** button to close the **[Energy Cost]** dialog box.

Calculating Operating Rate

The approximate operating rate of the measured value is calculated.

The total amount of time during which data exceeds the **[Upper threshold]** is considered operating time, and the operating rate is calculated as the ratio of the operating time to the total calculation time span.

Example: The time during which a device consumes 20 A or more is considered the operating time.

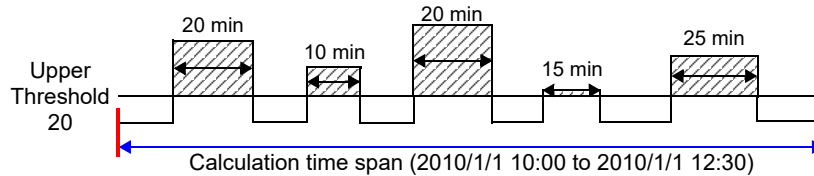

The sum of the times depicted by  is the operating time.
(In the above diagram, operating time is 1.5 hours.)

Operating time (1.5 h) / calculation time span (2.5 h) * 100 = 60% operating rate

Item and range settings


Select the item for operating rate calculation, and the time span.

The time span can also be specified by setting the A/B cursors (p.88) on a graph and selecting **[Calculate between A/B cursors]**.

1. Select the item and time span.
2. Set the upper threshold.
3. Click the **[Calculate]** button.
(Operating hours and operating rate values are calculated and displayed.)
Note: Click the **[Finish]** button to close the **[Operating Rate]** dialog box.

Integration

Measurement data can be integrated over a specified time span.
Integration results are saved as a new item in the recording file.

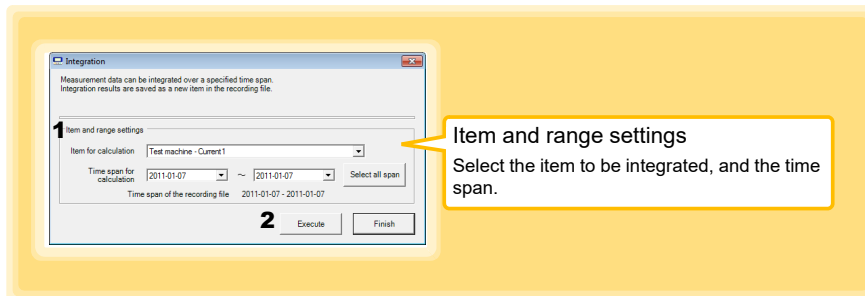

1. Select the item and time span.
2. Click the **[Execute]** button.
(Integration results are saved.)
Note: Click the **[Finish]** button to close the **[Integration]** dialog box.


Calculating Dew-Point Temperature

Dew-point temperature is calculated from the temperature and humidity measurement data from the logger.

Calculation results are saved as a new item in the recording file.

NOTE

- There is no way to confirm that a specified data item is really a temperature or humidity value. Dew-point calculation occurs regardless of data type.
- Only the specified temperature and humidity data measured during the specified recording time span is applied to calculations and saved.
- The valid range for calculation input measurement data is -100 to 100 degrees, and 0 to 100% humidity. Values outside of these ranges are replaced with the maximum or minimum value within the valid range.

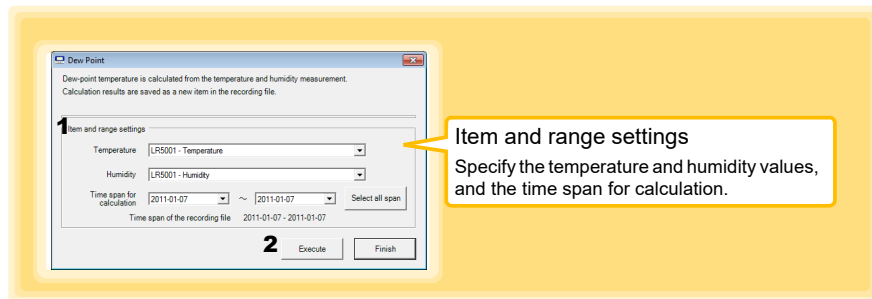


1. Select the items and time span.
2. Click the **[Execute]** button.
(Calculation results are saved.)
Note: Click the **[Finish]** button to close the **[Dew Point]** dialog box.

Two-Data-Item Arithmetic Calculations

Simple arithmetic operations (+, -, *, and /) can be applied to two data items. Calculation results are saved as a new item in the recording file.

NOTE

Only the values of data items measured during the specified recording time span are applied to calculations and saved.

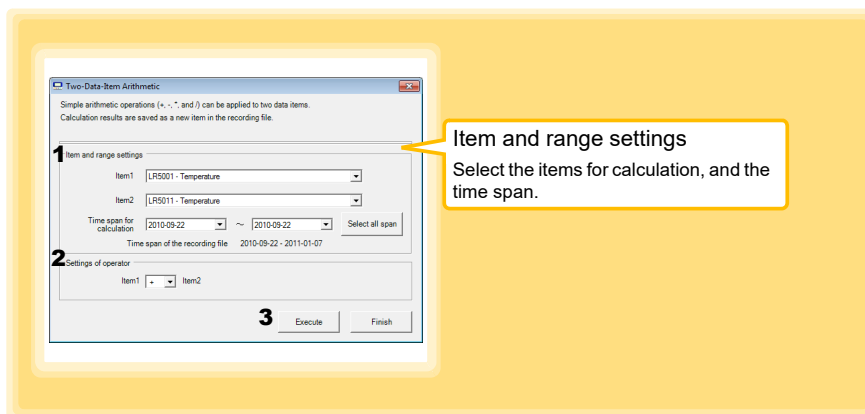


1. Select the items and time span.
2. Select the calculation operator.
3. Click the **[Execute]** button.
(Calculation results are saved.)
Note: Click the **[Finish]** button to close the **[Two-Data-Item Arithmetic]** dialog box.

Converting Over-Threshold Data Values

Data values larger than the upper threshold and smaller than the lower threshold can be converted to specified values.

Converted results are saved as new data items in the recording file.

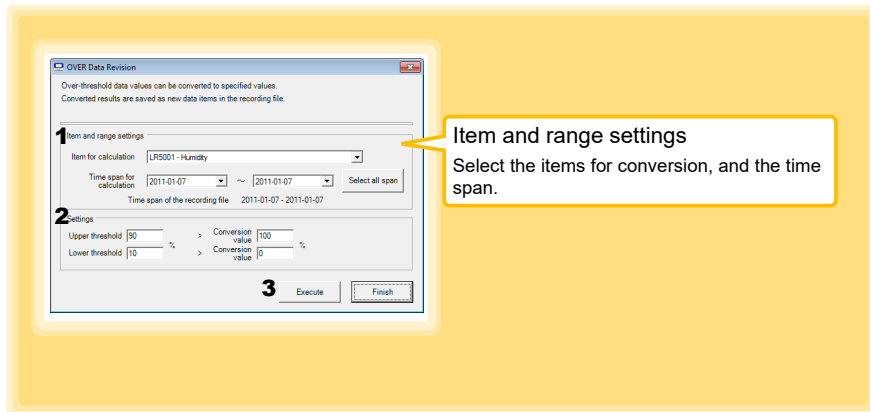


1. Select the items and time span.
2. Set the upper and lower threshold values, and their corresponding conversion values.
3. Click the **[Execute]** button.
(Conversion results are saved.)
Note: Click the **[Finish]** button to close the **[OVER Data Revision]** dialog box.

7.9 Printing Recorded Data

Saved recording data can be printed as a graph. Graphs displayed in the LR5000 Utility Program can be printed on A3, A4, or B4-size paper.

With the desired graph displayed, click the **[Print]** button.

See: Graph Display Methods: "7.4" (p.85), "7.5" (p.94), and "7.7" (p.101)

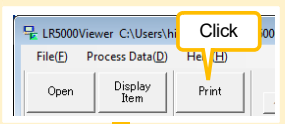


How can I print only part of a graph?

Specify the time span to print, and click **[Print]** button. Times that are not displayed are not printed.

See: "Viewer Screen" (p.86)

Example Graph Printout

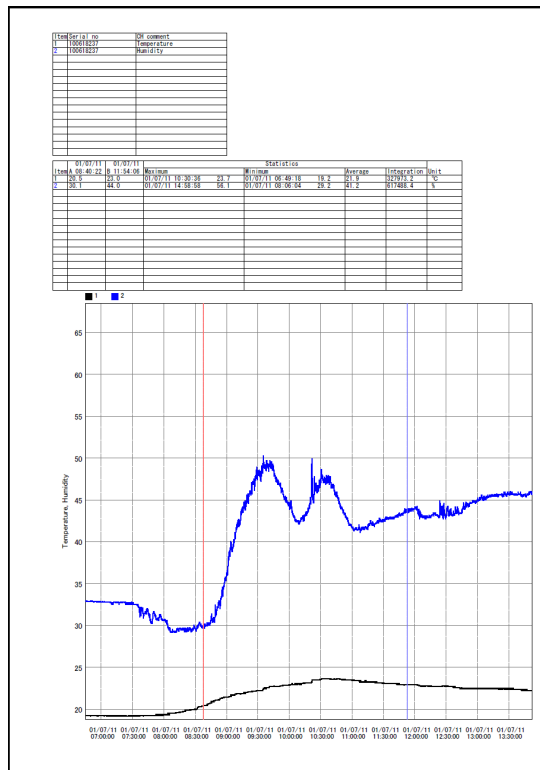

7.10 Organizing Data

The LR5000 Utility Program can reorganize (copy, delete, move, combine, and extract) imported data.

- 1 If the LR5000 Utility Program is not running on the computer, click the icon in the task tray (notification area), and click **[Show Main Screen]**.
The main screen appears.
- 2 Click the **[Option]** button.
The data reorganization screen appears.
- 3 Select the **[Operation Type]**.
See: "Copying and Moving Data" (p.115)
"Deleting Data" (p.116)
"Combining Data" (p.117)
"Extracting Data" (p.118)
- 4 Select the working folder or recording file, and click the **[Execute]** button.

Recently opened folder
The last ten folders containing data that was displayed as a graph or table are listed.

3 Select

4 Click

4 Select the desired file.

4 Select


Returns to the main screen.

Clears all selections (removes check marks).

Copying and Moving Data

The selected logger recording files can be copied or moved to any folder.

Example: Copying files in the C:\Users\hioki\Documents\LR5000 folder to the C:\backup folder.

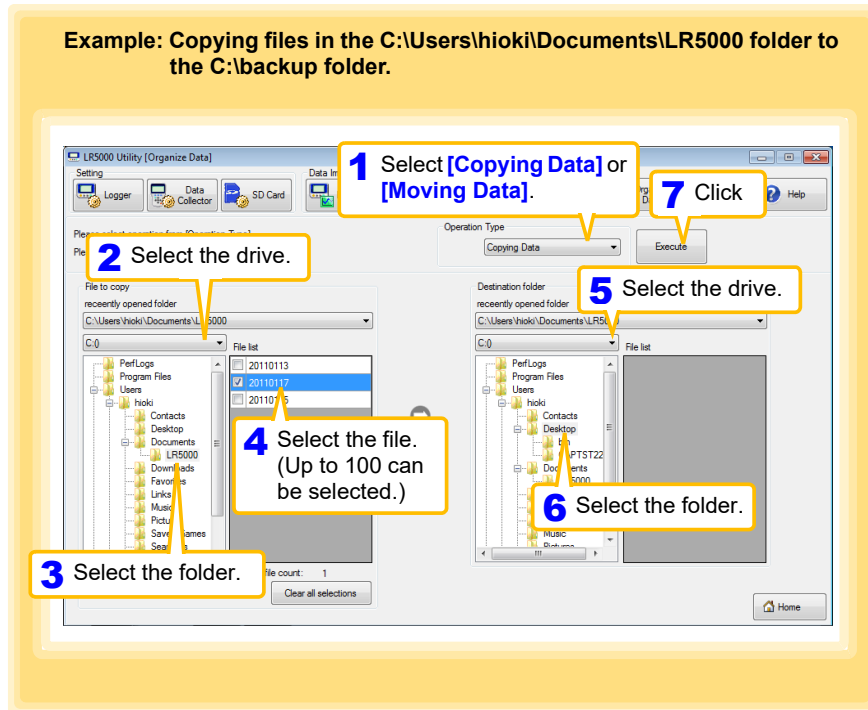

NOTE


The management format of the PC utility program (LR5000 Utility) will be retained even using this function to copy or move data to the SD memory card. This is different from the format when retrieving to the SD card on the LR5092 (p.41).

Data moved or copied to the SD card via the PC utility program will not be recognized on the LR5092.

Deleting Data

Select and delete logger recording files as follows.

Example: Deleting files in the C:\Users\hioki\Documents\LR5000 folder.

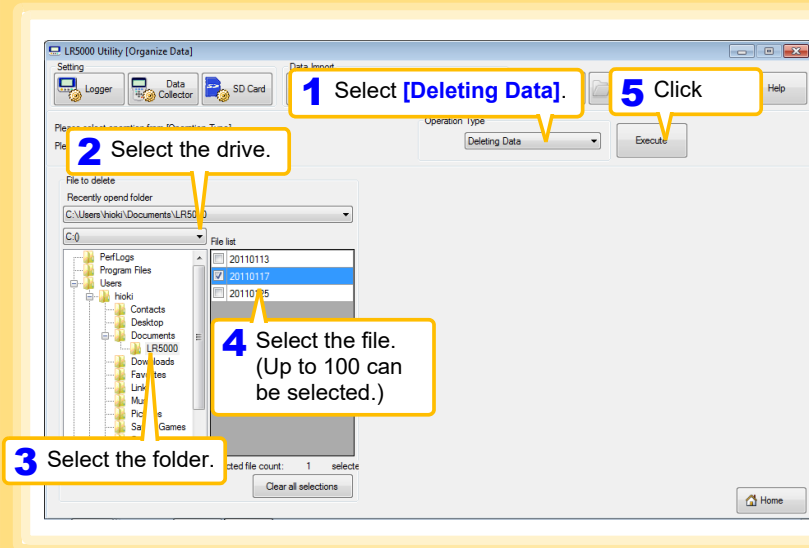

How can the data in the collector memory be deleted?

See: "Clearing Data from Collector Memory" (p.49)


How can the data in the SD memory card be deleted?

See: "Clearing Data from SD Memory Card" (p.51)

Combining Data

Separate logger recording files can be combined into one set of recording data.

Example: Combining 20110117 and other files in C:\Users\hioki\Documents\LR5000, and then saving the combined data in the C:\Users\hioki\Desktop folder.

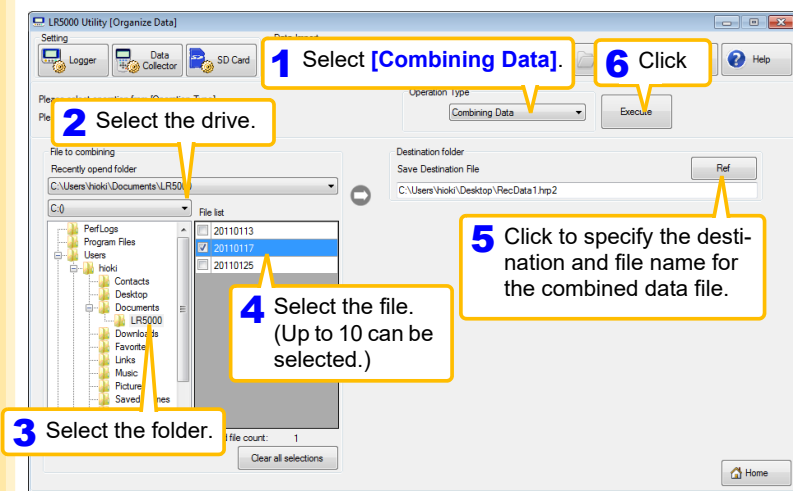

7

Chapter 7 Using the LR5000 Utility Program

Extracting Data

Data in a logger recording file can be extracted to a specified time span and saved with a different file name.

Example: Extract the data of July 13 in the 20100707 file, and then saving the data to another file.

The screenshot shows the 'LR5000 Utility [Organize Data]' window. The 'Operation Type' is set to 'Extracting Data'. The 'Destination folder' is 'C:\Users\hioiki\Documents\ExtractData\'. The 'Extracting time span' is '2011-01-25 00:00:00' to '2011-01-25 00:00:00'. The 'Extracting data' table shows two selected rows:


	Model	Model comment	Serial no	CH1 comment
1	LR5011	"sample 1"	105011031	Floor 5
2	LR5001	"sample2"	100500001	2nd floor TEM

Numbered callouts indicate the steps:


- 1 Select [Extracting Data].
- 2 Select the drive.
- 3 Select the folder.
- 4 Select the file. (one only)
- 5 Specify the extracting time span and extracted data (model).
- 6 Click to specify the destination and file name for the extracted data file.
- 7 Click [Execute].

7.11 Options Settings (LR5000 Utility Program)


These settings determine the saving method for imported logger data, device connection monitoring, and logger setting display functions.

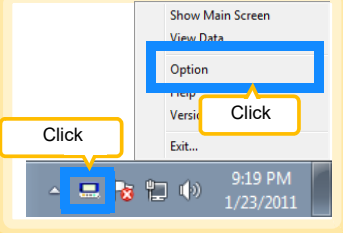

Note: If the LR5000 Utility Program is running, click **[Option]** on the main screen.



- 1** If the LR5000 Utility Program is not running on the computer, click the icon in the task tray (notification area), and click **[Option]**.
The Options screen appears.
- 2** Change the settings as needed.
See: "Changing the Saving Method for Imported Data" (p.120)
"Changing the Connection Monitoring Method, and Logger Settings Displays" (p.121)
- 3** Click the **[Save]** button.

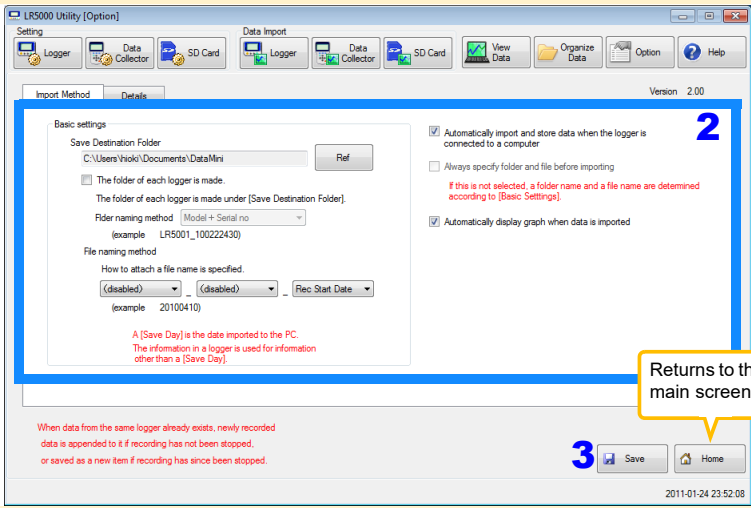

Select the **[Automatically import and store data when the logger is connected to a computer]** checkbox and then clear and the **[Always specify folder and file before importing]** check box to display the Data Import screen (p.94).

Changing the Saving Method for Imported Data


The saving method for imported logger data can be changed as follows.

How can the save destination folder be changed?

1 Click the [Import Method] tab.


2 Click to specify the save destination folder.

3 If you select the check box, select the folder name.

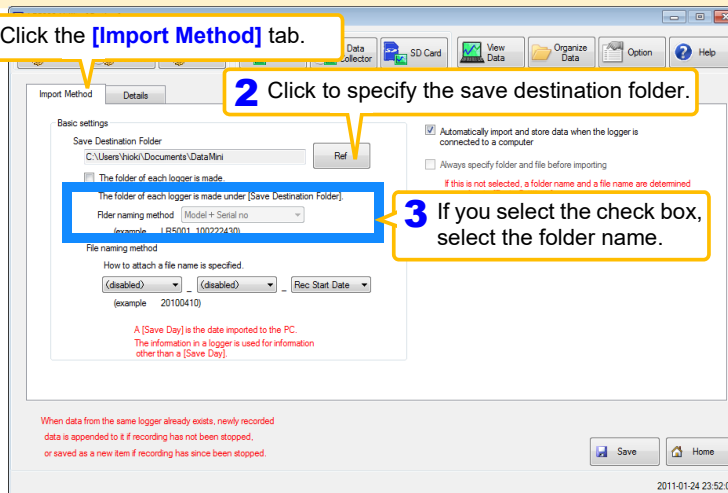

How can the file naming method be changed?

Set Auto Import and Auto Graph Display functions, if desired.
See: P.85 , P.94

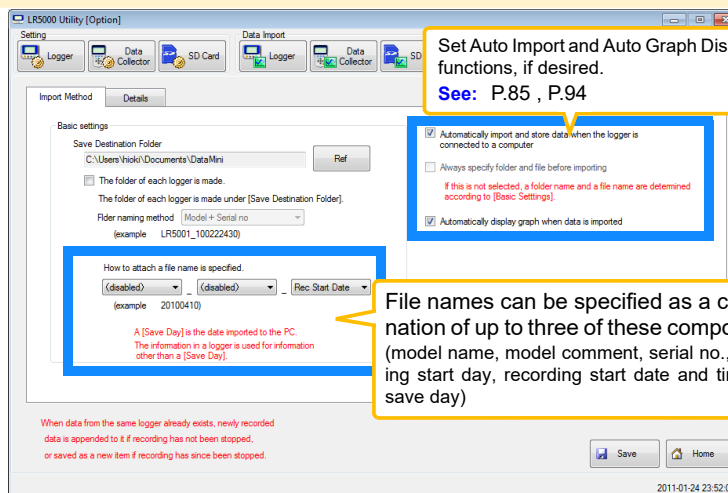

File names can be specified as a combination of up to three of these components: (model name, model comment, serial no., recording start day, recording start date and time, and save day)

Changing the Connection Monitoring Method, and Logger Settings Displays

Change the device connection monitoring settings and the functions on the logger settings displays as follows.

? How can the device connection monitoring setting be changed?

Click the **[Details]** tab.

Task tray (notification area) icon (p.94)

When cleared, the Communication Utility program has to be started manually.

When **[Monitor COM port]** is selected, specify the COM port to monitor.

? How can the function settings of the logger's settings displays be changed?

Show the settings of the **[Save Settings]** and **[Open Settings]** buttons. (p.82)

Show the settings of the **[Save Settings]** and **[Open Settings]** buttons.

Specifications Chapter 8

8.1 Main Unit General Specifications

Basic Specifications

Functions	- Collect measurement data of supported loggers, and make settings - Transfer collection data to a computer - Serve as an intermediary for communication between a logger and computer (USB)
Compatible loggers	LR5001 Humidity Logger, LR5011 Temperature Logger, LR5031 Instrumentation Logger, LR5041 Voltage Logger (50 mV), LR5042 Voltage Logger (5 V), LR5043 Voltage Logger (50 V), LR5051 Clamp Logger
Memory capacity	60,000 data × 16 channels (instantaneous values), or 15,000 data × 16 channels (statistical values)
Clock function	Auto calendar, auto leap year determination, 24-hour clock Accuracy ±50 ppm (approx. ±4.3 sec./day) (25°C (77°F) reference value)
Operating temperature and humidity	Temperature: 0°C to 40°C (32°F to 104°F) Humidity: 80%RH or less (non-condensating)
Storage temperature and humidity	Temperature: -10 to 50°C (14°F to 122°F) Humidity: 80%RH or less (non-condensating)
Operating environment	Indoors, pollution degree 2, up to 2000 m ASL
Power supply	3 VDC (1.5 V×2) - LR6 alkaline batteries - Stored (collected) data retained when both batteries replaced - Clock function backup available (clock function maintained for approx. 10 years [reference value] by built-in lithium battery) - Power on/off by long press of power switch (power turns off if no operation is performed for one minute when running on batteries) - Powered by USB bus power when USB connection
Maximum rated power	1 VA
Continuous operating time	Approx. 12 hours, Data collection: Approx. 500 times - When logger recording stopped and data collection destination is collector memory - Possible usage time and the number of collections using new alkaline batteries (LR6 standard supplied batteries) when "Turning on power → Collecting data (60,000 × 2 channels) → Displaying data → Turning off power" is considered to be one time (reference value 25°C (77°F))
Dimensions	Approx. 91W × 141H × 31D mm (3.58"W × 5.55"H × 1.22"D) (Excluding protrusions)
Mass	Approx. 215 g (7.6 oz.) (not including batteries and SD memory card)
Applicable Standards	- Safety : EN61010 - EMC : EN61326

8.1 Main Unit General Specifications

Product warranty period	3 years
-------------------------	---------

Display

Display text	Japanese/English (Factory default setting: Japanese for Japan, English for overseas)
Display	Dot-matrix STN LCD (128 × 64 dots)
Dot pitch	0.48W mm × 0.48H mm (0.02"W × 0.02"H)
Backlight	LED (Backlight turns off when no operation for 30 seconds)
LCD lifespan	MTBF: Approx 50,000 hours (25°C (77°F), 60% RH or less)

External interface

USB standard	USB 2.0 compliant, Full Speed supported
Connector	Mini B series receptacle
Connectable device	Computer
Functions	Exchange setting items and data with a computer using the supplied LR5000 Utility Program. - Setting Items: Clock, logger settings (saved to collector and SD memory card), and logger settings of a connected logger - Data: Recorded data saved to collector and SD memory card, and recorded data of connected logger - Data can only be transferred from the collector to the computer - Powered by USB bus power when connected to computer
Communication speed	250,000bps

External storage

Slot	SD Card Physical Layer System Specification, Version 2.00 compliant 1 slot
Card types	SD memory card and SDHC supported
Card capacity	Up to 32 GB supported
Data formats	FAT and FAT32 supported
Stored data	Logger setting conditions (binary files) Measurement data (binary files)

Logger communication

Communication method	Half-duplex start/stop synchronous infrared serial communication
Communication speed	115,200bps

Functions	Connect a logger and collector, and exchange logger settings and recorded data with the collector. - Recorded data can only be transferred from the logger to the collector - When the logger is performing recording, the recorded data up to the current point in time is transferred
-----------	---

8.2 Functions

Basic Specifications

Data Collection

Collected data	Recorded data
Collected data save destinations	Collector memory and SD memory card When either the collector memory or SD memory card already contains collected data (from a logger with same serial number), the save destination is fixed to the one with the saved data, and the save destination cannot be selected. (If both contain data, the save destination becomes the SD memory card.)
One-touch collection function	- Place the logger and collector, and then press the Collect button to start data collection. - Collect uncollected data of logger. - One-touch collection destination can be specified for a new logger* (collector memory or SD memory card)
Data display	Data is shown in a graph (waveform) after data collection.

* Logger with new serial number for which there is no collected data in both the collector and SD memory card.

Logger Settings

Measurement condition settings	- Logger settings settable (The setting items differ depending on the logger.) - Setting Items: Recording interval, recording start method, recording stop method, recording mode, scaling, alarm, power saving, clock, range, preheat, filter, comment (only sending and receiving is possible, comment input and editing with the collector is not possible)
Number of settings storable	- Collector: 1 condition - SD memory card: Limited by remaining space of card, maximum of 16 conditions
Settings acquisition	Settings can be read from a logger

Logger Operations

Control a connected logger.

Control items	Start recording, stop recording
Logger status display	Display measurement conditions and measurement status (measurement in progress, amount of memory used)

8.2 Functions

Data Operations

Display and clear collected data.

Display items	• Collected data list (collector memory): Displays models, serial numbers, and comments • Collected data list (SD memory card): Displays file names • Maximum value, minimum value, and average value display • Graph (waveform) display • Numerical value display
Clear data	Clear individual files or all data

File

SD Memory Card Operations

List display	Displays a list of saved files
Clear data	Clear individual files or all data
Transfer collector data	Save all/select and save specific collected data in collector, and save setting conditions
Display data	Display data of selected file (switch to data operations)
Initialize card	Initialize an SD memory card

Miscellaneous

Collector Settings (Environment Settings)

Clock setting	Set the built-in clock
Language selection	Set the display language
Status display	• Display the usage status of built-in memory • Set whether or not to show the initial display when power turned on
Self checks	Inspection items: Firmware, LCD, buttons, and SD memory card

Battery Status Indicator

Remaining battery power	• Remaining battery power indicated by 4 levels • Functions limited in accordance with remaining battery power (data collection and SD memory card operations)
-------------------------	---

Supplied Accessories

Instruction manual.....	1
Operation manual	1
LR6 alkaline battery	2
USB cable (1 m).....	1
LR5000 Utility Program (CD)	1

Supplied LR5000 Utility Program Specifications

Supplied medium	CD..... 1
Operating environment	Personal computer meeting the following specifications • CPU: 1 GHz or faster processor clock • RAM: 1 GB or more (32-bit), 2 GB or more (64-bit) • Operating system: Windows 7 or Windows 10 • Library: .NET Framework 4.5.2 or later • Interface: USB (or COM port for models 3910, 3911, or 9612) • Monitor resolution: 1024 x 768 or higher • Hard disk: At least 30 MB free space (Additional space is required for storing recorded data.)
Model communication support	All LR5000-series loggers Note: Communication with models LR5031 and LR5051 is supported by PC Utility version 2.00 and later. (The COMMUNICATION UTILITY program supports the following models' settings and data import functions. A computer COM port and 9612 RS-232C cable are required when using the model 3910 or 3911 Communication Base.) • All "Data Logger" models 363x to 364x • Communication Base models 3910, 3911, and 3912
Communication connections	Communication with LR5000-series loggers: • Computer, USB cable, LR5091 Communication Adapter, and LR5000-series logger • Computer, USB cable, LR5092-20 Data Collector, and LR5000-series logger Communication with the LR5092-20 Data Collector: Computer, USB cable, and LR5092-20 Data Collector
Setting functions	• Export/import settings by communication with the LR5000 series • Settings exported from each LR5000 are stored on the computer (the following functions are supported by the supplied PC Utility version 2.00, or later) • Export/import settings by communication using the LR5092-20 Data Collector • Import and save logger settings using the LR5092-20 Data Collector via communication or SD memory card • Settings exported to the LR5092-20 Data Collector are stored on the computer
Auto-start function	A small resident program (icon in the task tray/notification area) detects when a logger or the Data Collector is connected to the computer, and automatically starts the LR5000 Utility Program.

Data import functions	- Communicates with the LR5000-series loggers, and imports recorded data - Combines recorded data - Incorporates new data when an LR5000-series logger holds data not previously imported (the following functions are supported by the supplied PC Utility version 2.00, or later) - Communicates with the LR5092-20 Data Collector, and imports recorded data saved in the Data Collector - Imports data saved to an SD memory card in the LR5092-20 Data Collector
Graph display functions	- Displays up to 16 channels in a graph - Displays up to 16 Y-axes - Displays one time base axis - Set line colors for each channel, and display/hide lines and bar graphs for each channel - Auto setting of time base and vertical axis - Display/hide Y-axis grid lines, and set grid display density - Select display background color - Copy graph images to the clipboard - A/B cursor functions - Displays statistical data (maximum, minimum, and average)
Data list display functions	- Browse recorded data in tabular format - Displays up to 600 channels - Displays statistical data (maximum, minimum, and average)
Export functions	- Export all recorded data displayed in a table in CSV format - Paste to Excel® all recorded data displayed in a data table - Export all recorded data between A/B cursors in CSV format - Paste to Excel® all recorded data between A/B cursors
Import functions	Import text files from the 3169 Clamp-On Power HiTester Note: Only electric energy data recorded at one-second or longer interval can be imported
Printing functions	- Prints graphs and statistical data - Supports A3, A4, and B4 paper sizes
Data processing functions	Scaling ($y=ax+b$), electric power calculation, energy cost calculation, operating rate calculation, integration, dew-point temperature calculation, arithmetic calculations, out-of-range data revision
File management functions	- Copy and delete data saved on the computer (the following functions are supported by the supplied PC Utility version 2.00, or later) - Delete data saved to an SD memory card in the LR5092-20 Data Collector
Help function	Displays helpful operating instructions

Maintenance and Service

Chapter 9

Requesting Repairs

Use the original packing materials when transporting the instrument, if possible. Pack the instrument so that it will not sustain damage during shipping, and include a description of existing damage. We do not take any responsibility for damage incurred during shipping.

When the logger will not be used for long time



CAUTION To avoid corrosion and damage to this instrument from battery leakage, remove the batteries from the instrument if it is to be stored for a long time (1 week).

Lifespan of Backup Battery

The instrument contains a built-in backup lithium battery, which offers a service life of about ten years. If the date and time deviate substantially when the instrument is switched on, it is the time to replace that battery. Contact your dealer or Hioki representative.

9.1 Cleaning

To clean the instrument, wipe it gently with a soft cloth moistened with water or mild detergent. Never use solvents such as benzene, alcohol, acetone, ether, ketones, thinners or gasoline, as they can deform and discolor the case.

NOTE

Wipe the LCD gently with a soft, dry cloth.

9.2 Troubleshooting

If damage is suspected, check the "Before requesting repairs" section before contacting your dealer or Hioki representative.

Before requesting repairs





Symptom	Check Item or Cause	Remedies and References
No indications appear on the display when the POWER button is pressed.	- Are batteries installed? - Did you press and hold the POWER button? - The power protection element may be damaged.	- Check that batteries are installed properly. - Press and hold the POWER button for 1 second. - Contact the place of purchase or your nearest Hioki sales office because replacement and repairs cannot be performed by customers.
The power does not turn off when the POWER button is pressed.	- Is the collector connected to a computer with a USB cable? - Did you press and hold the POWER button?	- The power will not turn off if the collector is connected to a computer with a USB cable. The power will be turned off when the USB cable is removed. - Press and hold the POWER button for 1 second.
The power turned on even though the POWER button was not pressed.	- Is the POWER button in a pressed state? - Is the collector connected to a computer with a USB cable?	- Check the POWER button. - When the collector is connected to a computer with a USB cable, the power turns on even if the POWER button is not pressed.
Button operation is not possible.	Is one of the buttons in a pressed state?	Check the operation buttons.
Cannot collect data from a logger.	- Are the collector and logger placed correctly in position? - Is the communication IR port dirty or scratched?	- Place them correctly in position. - Clean the IR port. If there is significant damage, the collector needs to be repaired. Contact the place of purchase or your nearest Hioki sales office.
Cannot save to an SD memory card.	- Is the SD memory card inserted properly? - Has the SD memory card been initialized? - Is the write protect tab (LOCK) of the SD memory card in the unlock position? - Is there not much space left?	See: "2.2 Inserting an SD Card (When Necessary)" (p.17) See: "5.5 Initializing SD Memory Card" (p.54) Check the amount of remaining space.



Symptom	Check Item or Cause	Remedies and References
Cannot install the LR5000 Utility Program.	Is the computer on which you are trying to install the LR5000 Utility Program compatible with the system requirements of the LR5000 Utility Program?	Check the system requirements of the LR5000 Utility Program and then install it on a computer that is compatible with the system requirements. See: "LR5000 Utility Program Operating Requirements" (p.65)
Cannot install the LR5000 Utility Program.	Is the installation method incorrect?	Refer to the installation procedure, and then try again. Pay particular attention to the following: - Log in to the Administrator account or another account with administrator privileges. - Before installing, be sure to close any applications running on the computer. - If the installation screen does not appear, run X:\English\Setup.exe. See: "Installation Procedure" (p.66)
The batteries are depleted too quickly.	- Are the batteries supplied with the logger still being used? - Are manganese batteries being used?	Use new LR6 alkaline battery.
The collector is connected to a computer with the USB cable but it is not recognized by the LR5000 Utility Program.	When using the collector via USB, the maximum current consumption is 200 mA. When using a computer or USB hub that is unable to supply at least 200 mA of current or when a number of USB devices are connected to the USB hub and the total current consumption exceeds the current that can be supplied by the hub, the power of the collector may not turn on or the collector may not be recognized from the computer.	- Use a computer or USB hub that is capable of supplying at least 200 mA of current. - Disconnect any USB devices that are not being used from the USB hub.
	The installation of the device driver to the LR5092 failed.	For Window XP, the driver may be required to be installed to each LR5092. Open Windows Device Manager and re-install the driver.
When you are unsure of the cause.	-	Try initializing the collector. The settings will be restored to their initial state at the time of shipment from the factory. If this does not solve the problem, contact the place of purchase or your nearest Hioki sales office.
The [Failed to read data partially.] message appears.	The instrument can display up to 84000 data sets per measurement parameter.	The LR5000 viewer places a limit on the number of data sets displayed on graphs and tables. Change the duration to be displayed. Change from [All Data] to [1day].

9.3 Error Display


The display appears as follows when an error occurs on the logger.

When attempting to collect recorded data:

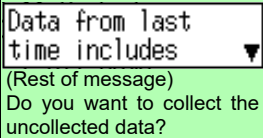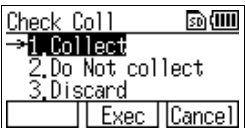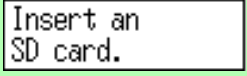Error Displays	Meaning / Remedies						
	This appears when a logger is not connected to the collector. (Press the F3 button to return to the top display.) Connect a logger to the collector, and then press the F1 button. (The display for selecting the collection destination appears.(p.35))						
	The recorded data from last time remains because measurement was started/stopped again without the recorded data being collected after starting/stopping measurement last time. (Press the F3 button [Cancel] to return to the top display.) To collect the recorded data for this time only, press the F2 button [No]. The data from last time will be retained. Press the F1 button [Yes] to show the next display.  (Press the F3 button [Cancel] to return to the top display.) Select one of the items, and then press the F2 button [Exec]. <table border="1"> <tr> <td>Collect Data</td><td>The data from last time is also collected together with the data from this time. (The display for selecting the collection destination appears.)</td></tr> <tr> <td>Do Not Collect</td><td>The data from last time is not collected. It will be retained. Only the data from this time is collected. (The display for selecting the collection destination appears.)</td></tr> <tr> <td>Discard</td><td>The data from last time is discarded, and the data from this time is collected. (The display for selecting the collection destination appears.)</td></tr> </table>	Collect Data	The data from last time is also collected together with the data from this time. (The display for selecting the collection destination appears.)	Do Not Collect	The data from last time is not collected. It will be retained. Only the data from this time is collected. (The display for selecting the collection destination appears.)	Discard	The data from last time is discarded, and the data from this time is collected. (The display for selecting the collection destination appears.)
Collect Data	The data from last time is also collected together with the data from this time. (The display for selecting the collection destination appears.)						
Do Not Collect	The data from last time is not collected. It will be retained. Only the data from this time is collected. (The display for selecting the collection destination appears.)						
Discard	The data from last time is discarded, and the data from this time is collected. (The display for selecting the collection destination appears.)						
	This appears when an SD memory card is not inserted in the collector. (Press the F3 button to return to the top display.) Insert an SD memory card in the collector, and then press the F1 button. (The display for selecting the collection destination appears. (p.35))						

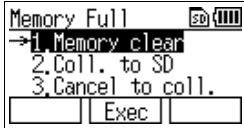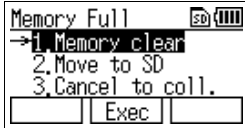Error Displays	Meaning / Remedies								
No memory space. Select the (Rest of message) process method.	This appears when there is insufficient space in the collector memory. (Press the F3 button [Cancel] to return to the top display.) Press the F1 button to select the process method. One of the following displays appears. When new logger When logger for which previous collection history exists   (Press the F3 button [Back] to return to the previous display.) Select one of the items, and then press the F2 button [Exec] <table> <tr> <td>Memory clear</td><td>The data is cleared from the collector memory. (The Clear Data display appears. (p.49) Select the data to clear, and then clear it. Perform data collection again after clearing the data.)</td></tr> <tr> <td>Coll. to SD</td><td>Changes the collection destination to the SD memory card. (The display for confirming the start of collection appears. (p.35))</td></tr> <tr> <td>Move to SD</td><td>The data in the collector memory that was collected last time is moved to the SD memory card. (The Move Collector Data display appears. (p.42) Perform data collection again after moving the data.)</td></tr> <tr> <td>Cancel to coll.</td><td>The top display reappears.</td></tr> </table>	Memory clear	The data is cleared from the collector memory. (The Clear Data display appears. (p.49) Select the data to clear, and then clear it. Perform data collection again after clearing the data.)	Coll. to SD	Changes the collection destination to the SD memory card. (The display for confirming the start of collection appears. (p.35))	Move to SD	The data in the collector memory that was collected last time is moved to the SD memory card. (The Move Collector Data display appears. (p.42) Perform data collection again after moving the data.)	Cancel to coll.	The top display reappears.
Memory clear	The data is cleared from the collector memory. (The Clear Data display appears. (p.49) Select the data to clear, and then clear it. Perform data collection again after clearing the data.)								
Coll. to SD	Changes the collection destination to the SD memory card. (The display for confirming the start of collection appears. (p.35))								
Move to SD	The data in the collector memory that was collected last time is moved to the SD memory card. (The Move Collector Data display appears. (p.42) Perform data collection again after moving the data.)								
Cancel to coll.	The top display reappears.								
Out of space in the SD card. (Rest of message) Replace the card.	This appears when there is insufficient space in the SD memory card. (Press the F3 button [Cancel] to return to the top display.) Replace the SD memory card with one that has sufficient space, and then press the F1 button. The display for confirming the start of collection appears.								

When performing a self check:

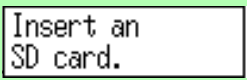Error Displays	Meaning/ Remedies
	This appears when an SD memory card is not inserted in the collector. (Press the F1 button to return to the previous display.) Insert an SD memory card in the collector, and then press the F3 button. (The self check process is continued.(p.60))

On LR5000 Utility Program screen:

Error Displays	Meaning/ Remedies
OF	This means that a measurement value is out of the measurement range.
UF	

9.4 Disposing of the Logger


When disposing of this instrument, remove the lithium battery and dispose of battery and instrument in accordance with local regulations.



- To avoid electric shock, turn off the power switch and disconnect the USB cable before removing the lithium battery.
- Battery may explode if mistreated. Do not short-circuit, recharge, disassemble or dispose of in fire.
- Keep batteries away from children to prevent accidental swallowing.

How to Remove the Lithium Battery

Required Items: One Phillips screwdriver and one pair of wire cutters

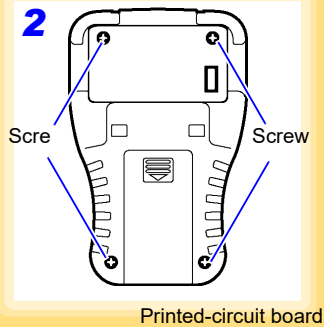


1 Turn off the power (p.19), and then remove the battery (p.15).


2 Remove the four screws, and then remove the molded part.

3 Remove the two screws securing the top board, and then remove the printed-circuit board.

4 Pull up the lithium battery on the printed-circuit board, and then cut the leads of the plus and minus terminals with the wire cutters.

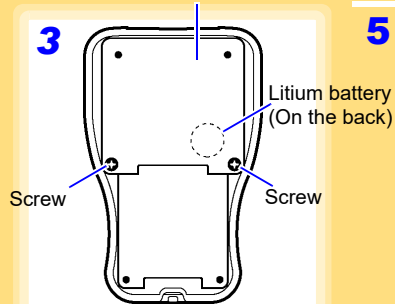

5 Remove the battery from the board.

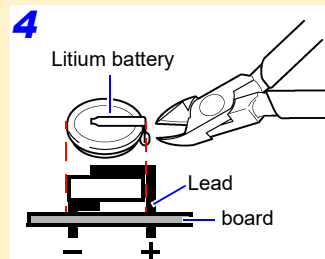

CALIFORNIA, USA ONLY

Perchlorate Material - special handling may apply.

Index

A

Accessories	2
AL indicator	81
Alarm	24
Alarm thresholds	81
Auto graph display	85
Auto import	85, 120

B

Basic button operations	11
Battery status indicator	16
Before requesting repairs	130
Browsing	31

C

Calculating dew-point temperature	110
Calculating electric power	106
Calculating energy cost	107
Calculating operating rate	108
Changing Settings	
LR5000 Utility Program	75
Changing the connection monitoring	121
Changing the saving method	120
Cleaning	129
Clearing	49
Clock setting	59
COLLECT button	32
Collecting	31
Collection data display items	33, 36
Collection Method Selection Screen	99
Collection method selection screen	95
Collector settings display	14
Comment Settings	24

D

Damage	130
Danger levels	4
Data collection display	13
Data List	39
Data management	39
Data verification display	13
Date and time	77

Decimal Point	24
Device connection monitoring setting ..	121
Display	11
Display graph	96, 97, 100, 101, 103
Display Organization	
LR5092	12
Disposing	135

E

Endless Recording	77
-------------------------	----

F

Features	9
File structure	
SD memory card	41
Filter	24
From Logger	27

G

Graph settings	89
----------------------	----

H

How can past data be viewed?	102
How can the displayed area be magnified?	
.....	88
How can the file naming method	
be changed?	120
How can the function settings of the	
logger's settings displays be changed?	
.....	121
How can the save destination folder	
be changed?	120
How can the settings of another logger	
be saved to the SD memory card?	73
How can the settings of the current	
data collector be reflected in the setting	
options?	73
How is the graph automatically	
displayed after importing data?	95, 99
How to edit the logger settings	
(LR5000 Utility Program)	76

Index **ii**

Index

I

Importing	85
Importing setting conditions	48
Initializing	
Collector	64
SD memory card	54
Inspection	20
Installation precautions	4
Installing	65
Installing (or replacing) the battery	15
Instantaneous	77
Integration	109
Integration values	92

L

Language setting	58
Lifespan of backup battery	129
Lithium battery	135
Logger operation/settings display	13
Logger Settings	21
Logger Status	28
Logger Type	24
Lower threshold	81
LR5000 Utility Program	65
Screens	69
Setting	72
Start	67
Uninstall	68
Version upgrading	68

M

Maintenance	129
Markings on the logger	3
Memory usage status display	12, 19
Model comment	76
Mouse operation	1
Moving	42

N

Notation	1
Numerical value display	33, 36

O

One-Time Recording	77
One-touch collection	31, 55
Operating buttons	10
Operating precautions	4
Operating requirements	65

Operation flow	6
Options settings(LR5000 Utility Program)	119
Organizing data	114
Combining	117
Copying	115
Deleting	116
Extracting	118
Moving	115
Overview	9

P

Package contents	2
Part names/Functions	10
POWER button	19
Power save setting	76
Power Saving	24
Preheat	24
Preliminary checks	5
Preparation	15
Printing	113

R

Range	24
Rec Interval	24
Rec Start Method	25
Rec Stop Method	25
Receiving settings from logger	27
Recording interval	77
Recording Mode	24, 77
Recording Start Method	77
Recording Stop Method	77
Requesting repairs	129
Registered trade marks	1
Restoring to factory default state	64

S

Safety information	3
Safety symbols	3
Saving setting conditions	46
Scaling	24, 79, 105
Sched. (Endless)	25
Sched. (Once)	25
Scheduled Time	77
SD card display	14
SD memory card	97
for which operation is guaranteed	18
Inserting	17

Saving setting data (LR5000 Utility Program)	83
Self check	
Buttons and Buzzers	62
Firmware	60
Key, Buzzer	62
LCD	61
SD Card	63
Self checks	60
Sending settings to logger	26
Service	129
Settings	21
Settings (with the Collector)	21
Settings list	22
Show Main Screen	94, 97, 114
Specifications	123
Starting and stopping recording	29
Starting and stopping recording on logger	29
Startup Display	12, 57
Statistical Recording	77
Stop Time Data	24
Symbols for various standards	3
System settings	55

T

To Logger	26
Top display	12
Transporting precautions	2
Troubleshooting	130
Turning the power on/off	19

U

Uninstall	68
Unit	24
Upper threshold	81

V

Version upgrading	68
Verifying recording/setting status of logger	28
View Data	101, 103
Viewer	86

W

Waveform graph display	33, 36
When the logger will not be used for long time	16, 129