

Technical Data Sheet

F-2000 Series - Digital Paddlewheel Flowmeter with Saddle & Tee Fittings

- Easy to read 8 digit LCD, up to 4 decimal positions.
- Flow rate and Total flow display.
- AC/DC transformer or battery operated (RT models only). 4 AA batteries.
- Factory programmed with calibration certificate.
- Field programmable via front panel touch pad.
- Front panel security lockout.
- Total reset function can be disabled.
- Weather resistant ABS enclosure

Note: LCD is not recommended for direct sunlight applications.

- Panel mounting option available.
- Custom calibration units available. Contact the factory.

FOUR MODEL VARIATIONS:

RT = Rate and Totalizer. Transformer or battery operated.

AO = 4-20mA, 0-10 VDC analog output, flow rate & totalizer. Transformer operated.

PC = Batch processing, flow rate alarm, proportional chemical metering, flow rate and totalizer. Transformer operated.

AP = Analog output, batch processing, flow rate alarm,

proportional chemical metering, flow rate and totalizer. Transformer operated. F-2000 Specifications:

Max. Working Pressure 300 psig (20 bar) @ 70° F (21° C)

Max. Fluid Temperature 200° F (93° C) @ 0 PSI (PVDF saddles and SS Tee fittings) 140° F (60° C) @ 0 PSI (PVC saddles and PVC Tee fittings)

Note: Temperature rating of F-2000 only. Actual pipe rating may vary.

Full scale accuracy +/- 1%

Saddle material...... PVDF (1-1/2", 2", 3", 50mm, 63mm, 90mm) PVC (other sizes)

Sensor/Paddle/Axle material . PVDF

O-ring seals: Viton

Max. pressure drop: 0 psi (no significant pressure drop)

Approximate shipping weight. 4 lb. (1.8 kg)







Saddle Mount 316 Stainless Steel Tee AOS110STGM1 RTSB20K8GM1

PVC Tee RTSB20ATGM1





316 Stainless Steel Tee AOP110STGM1

Models for Saddle mounting on U.S. IPS Pipe (ASTM 1785) SCHEDIII E 40 MODELS

		3011	LDULL 40 MODE	LJ	30111		LO
Pipe	GPM	RT MODELS	AO MODELS	PC MODELS	RT MODELS	AO MODELS	PC MODELS
Size	Flow Range	Model Number	Model Number	Model Number	Model Number	Model Number	Model Number
1-1/2"	15 to 150	RTS115K4GM1	AO S115K4GM1	PCS115K4GM1	RT S115K8GM1	AOS115K8GM1	PCS115K8GM1
2"	30 to 300	RTS120K4GM1	AOS120K4GM1	PCS120K4GM1	RT S120K8GM1	AOS120K8GM1	PCS120K8GM1
3"	60 to 600	RTS130K4GM1	AOS130K4GM1	PCS130K4GM1	RT S130K8GM1	AOS130K8GM1	PCS130K8GM1
4"	100 to 1000	RTS140A4GM1	AOS140A4GM1	PCS140A4GM1	RT S140A8GM1	AOS140A8GM1	PCS140A8GM1
6"	250 to 2500	RTS160A4GM1	AOS160A4GM1	PCS160A4GM1	RT S160A8GM1	AOS160A8GM1	PCS160A8GM1
8"	400 to 4000	RTS180A4GM1	AOS180A4GM1	PCS180A4GM1	RT S180A8GM1	AOS180A8GM1	PCS180A8GM1
10"	600 to 6000	RTS1100A4GM1	AOS1100A4GM1	PCS1100A4GM1	RTS1100A8GM1	AOS1100A8GM1	PCS1100A8GM1
12"	800 to 8000	RTS1120A4GM1	AOS1120A4GM1	PCS1120A4GM1	RT S 120A8GM1	AOS1120A8GM1	PCS1120A8GM1

Models for mounting on Solvent Weld PVC TEE


GPM MODELS			LPM MODELS					
Pipe	GPM	RT MODELS	AO MODELS	PC MODELS	LPM	RT MODELS	AO MODELS	PC MODELS
Size	Flow Range	Model Number	Model Number	Model Number	Flow Range	Model Number	Model Number	Model Number
1"	6 to 60	RTS110ATGM1	AOS110ATGM1	PCS110ATGM1	25 to 250	RTS110ATLM1	AOS110ATLM1	PCS110ATLM1
1-1/2"	15 to 150	RTS115ATGM1	AOS115ATGM1	PCS115ATGM1	60 to 600	RTS115ATLM1	AOS115ATLM1	PCS115ATLM1
2"	30 to 300	RTS120ATGM1	AOS120ATGM1	PCS120ATGM1	100 to 1000	RTS120ATLM1	AOS120ATLM1	PCS120ATLM1

Models for mounting on F/NPT 316 Stainless Steel TEE


				GPM MODELS				LPM MODELS	
	Pipe	GPM	RT MODELS	AO MODELS	PC MODELS	LPM	RT MODELS	AO MODELS	PC MODELS
l _	Size	Flow Range	Model Number	Model Number	Model Number	Flow Range	Model Number	Model Number	Model Number
	1"	6 to 60	RTS110STGM1	AOS110STGM1	PCS110STGM1	25 to 250	RTS110STLM1	AOS110STLM1	PCS110STLM1
1	I-1/2"	15 to 150	RTS115STGM1	AOS115STGM1	PCS115STGM1	60 to 600	RTS115STLM1	AOS115STLM1	PCS115STLM1
	2"	30 to 300	RTS120STGM1	AOS120STGM1	PCS120STGM1	100 to 1000	RTS120STLM1	AOS120STLM1	PCS120STLM1

Models listed above are with 115V AC/DC transformer. RT models only can be battery operated. Replace the "RTS1" in the model number with "RTSB". All models are available with the display "Panel Mounted" remotely from the sensor. Replace the "S" in the model number with the letter "P".

Saddle Dim.						
IN.(MM)	Α	<u>B</u>				
150(050)	4-1/2"	3-3/16"				
200(063)	4-1/2"	3-3/16"				
300(090)	4-1/2"	3-3/16"				
400(110)	4-1/2"	3-3/16"				
600(160)	4-3/8"	3-3/16"				
800(200)	4-3/8"	3-3/16"				
1000(250)	4-1/2"	4-1/2"				
1200(315)	4-1/2"	4-1/2"				

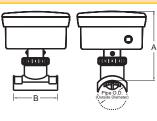



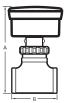





Blue-White



F-2000 Series - Digital Paddlewheel Flowmeter with Saddle & Tee Fittings

Fluid Flow Stream Requirements

Measuring accuracy requires a fully developed *turbulent* flow profile. Pulsating, swirling and other disruptions in the flow stream will effect accuracy. Flow conditions with a *Reynolds Number* greater than 4000 will result in a fully developed *turbulent* flow. A Reynolds Number less than 2000 is *laminar* flow and may result in inaccurate readings.


REYNOLDS NUMBER EQUATION:

REYNOLDS NUMBER = 3160 x Q x G

Where:

Flow rate of the fluid in GPM = QSpecific gravity of the fluid = G

Pipe inside diameter in inches = D Fluid viscocity in centepoise = V

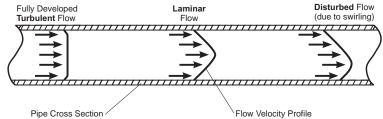

Minimum Straight Pipe Length Requirements

The meter's accuracy is affected by disturbances such as pumps, elbows, tees, valves, etc., in the flow stream. Install the meter in a straight run of pipe as far as possible from any disturbances. The distance required for accuracy will depend on the type of disturbance.

Type Of Disturbance	Minimum Inlet Pipe Length	Minimum Outlet Pipe Length	
Flange	10 X Pipe Inside Diameter	5 X Pipe Inside Diameter	
Reducer	15 X Pipe Inside Diameter	5 X Pipe Inside Diameter	
90° Elbow	20 X Pipe Inside Diameter	5 X Pipe Inside Diameter	
Two 90° Elbows -1 Direction	25 X Pipe Inside Diameter	5 X Pipe Inside Diameter	
Two 90° Elbows -2 Directions	40 X Pipe Inside Diameter	5 X Pipe Inside Diameter	
Pump Or Gate Valves	50 X Pipe Inside Diameter	5 X Pipe Inside Diameter	

Mounting location and pressure/temperature requirements

- The meter is designed to withstand outdoor conditions. A cool, dry location, where the unit can be easily serviced is recommended.
- The meter can be mounted on horizontal or vertical runs of pipe. Mounting at the vertical (twelve o'clock) position on horizontal pipe is recommended. Mounting anywhere around the diameter of vertical pipe is acceptable, however, the pipe must be completely full of water at all times. Back pressure is essential on downward flows. See the minimum straight length of pipe requirement chart above.
- The meter can accurately measure flow from either direction.

